

**SAM4S**

SER-7000/7040

# Program Manual



All specifications are subject to change without notice.

©2006, CRS, Inc.  
PM-SER7000/40 Version 2.2

# **CRS, Inc.**

## **Limited Warranty and Disclaimers of Warranty**

This manual has been developed by CRS, Inc. It is intended for the use of its customers and service personnel and should be read in its entirety before attempting to install, use or program the product(s).

Nothing contained in this manual shall be deemed to be, and this manual does not constitute, a warranty of, or representation with respect to, the product or any of the products to which this manual applies. This manual is subject to change without notice and CRS, Inc. has no obligation to provide any updates or corrections to this manual. Further, CRS, Inc. also reserves the right, without prior notice, to make changes in equipment design or components as it deems appropriate. No representation is made that this manual is complete or accurate in all respects and CRS, Inc. shall not be liable for any errors or omissions contained in this manual. In no event shall CRS, Inc. be liable for any incidental or consequential damages relating to or arising out of the use of this manual. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied or reproduced without prior written consent of CRS, Inc.

### **NOTICE**

IF ANY WARRANTY IS EXTENDED TO YOU WITH REGARD TO THE PRODUCT(S) TO WHICH THIS MANUAL APPLIES, IT IS A WARRANTY FROM THE ENTITY OR INDIVIDUAL FROM WHOM YOU DIRECTLY PURCHASED THE PRODUCT(S).

SUBJECT TO THE FOREGOING, UNLESS YOU ARE A DIRECT END USER CUSTOMER OF CRS, INC., CRS, INC. DOES NOT EXTEND TO YOU ANY EXPRESS WARRANTY OR ANY IMPLIED WARRANTY AND EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR USE, OR FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS IN CONNECTION WITH THE PRODUCT(S) OR ANY SOFTWARE, DRIVERS, OR PROGRAMMING PRODUCT, WHETHER EMBEDDED IN PRODUCT(S) OR PROVIDED AS A SEPARATE PROGRAM, OR USED IN CONJUNCTION WITH THIS/THESE PRODUCT(S). CRS, INC. SPECIFICALLY DOES NOT WARRANT THAT THE OPERATION OF ANY DRIVERS, SOFTWARE, OR PROGRAMMING PRODUCTS LICENSED HEREUNDER, WHETHER EMBEDDED IN PRODUCTS OR PROVIDED AS SEPARATE PROGRAMS, SHALL BE UNINTERRUPTED OR ERROR FREE OR THAT FUNCTIONS CONTAINED IN SUCH DRIVERS, SOFTWARE OR PROGRAMMING PRODUCTS SHALL OPERATE IN COMBINATION(S) WHICH MAY BE SELECTED FOR USE BY YOU OR OTHERWISE MEET YOUR REQUIREMENTS.

CRS, Inc. is not responsible for any damages or loss, either direct, indirect, special, incidental or consequential, which you may experience as a result of your purchase or use of the product(s). Your sole remedy in the event that you encounter any difficulties with the product(s) is against the entity or individual from whom you purchased the product(s).

Revision 2.0 - April 1, 2005

#### WARNING - U.S.

THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY, AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS MANUAL, MAY CAUSE INTERFERENCE TO RADIO COMMUNICATIONS. IT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A COMPUTING DEVICE PURSUANT TO SUBPART J OF PART 15 OF FCC RULES WHICH ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST SUCH INTERFERENCE WHEN OPERATED IN A COMMERCIAL ENVIRONMENT. OPERATIONS OF THE EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE INTERFERENCE IN WHICH CASE THE USER, AT HIS OWN EXPENSE, WILL BE REQUIRED TO TAKE WHATEVER MEASURES MAY BE REQUIRED TO CORRECT THE INTERFERENCE.

#### NOTICE - CANADA

THIS APPARATUS COMPLIES WITH THE CLASS "A" LIMITS FOR RADIO INTERFERENCE AS SPECIFIED IN THE CANADIAN DEPARTMENT OF COMMUNICATIONS RADIO INTERFERENCE REGULATIONS.

CET APPAREIL EST CONFORME AUX NORMES CLASS "A" D'INTERFERENCE RADIO TEL QUE SPECIFIER PAR MINISTRE CANADIEN DES COMMUNICATIONS DANS LES REGLEMENTS D'INTERFERENCE RADIO.

#### **ATTENTION**

The product that you have purchased may contain a battery that may be recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of the battery into the municipal waste system.

Check with your local solid waste officials for details concerning recycling options or proper disposal.

# Contents

- Getting Started** **1**
- About the *SER-7000* Series ..... 1
- Register Controls ..... 1
  - Power On/Off ..... 1
  - Front View ..... 1
  - Display Adjustments ..... 1
  - Rear View ..... 1
- Navigating the *SER-7000* ..... 2
  - Default Keyboard – *SER-7000* ..... 2
  - Key Descriptions ..... 4
  - Control Lock ..... 11
  - Key Prompting ..... 12
  - Page Up and Page Down ..... 13
  - Choosing Items from Menus ..... 14
  - Selecting and Filling Fields ..... 14
  - Opening Pop-up Selection Windows ..... 15
  - Entering Alpha Characters ..... 16
- Initial Clear ..... 19
  
- S-Mode Programming** **21**
- S- Mode Programming Menu ..... 21
- Self Tests ..... 23
  - Serial & IRC Loopback Test ..... 23
  - Drawer Test ..... 24
  - RTC Setting (Real Time Clock) ..... 24
  - Display Test ..... 25
  - Keyboard Test ..... 25
  - Mode & Clerk Key Test ..... 26
  - RAM Test ..... 26
  - IRC Test ..... 27
  - Printer Test ..... 28
  - RAM Checksum ..... 28
  - Version Check ..... 29
  - Card Read Test ..... 29
  - Printer Status Check ..... 30
  - Print Image Logo ..... 30
- Memory Clear ..... 31
  - Memory All Clear ..... 31
  - Selective Memory Clearing ..... 33
- Memory Allocation ..... 34
- Keyboard Key Relocation ..... 40
  - PLU Key Relocation ..... 41
  - WLU Key Relocation ..... 42

Function Key Relocation .....	44
System Options .....	48
Printer Driver Selections.....	50
Changing Printer Commands.....	51
Serial Port Device Selections.....	52
Define Serial Port Parameters .....	53
S-Mode Program Scan Printing .....	55
System Password .....	56
Super Macro Scan.....	57
ROM File Download .....	58
Load Default Messages.....	58
Check Unlock .....	58

## **P-Mode Programming 59**

P-Mode Programming Menu .....	59
PLU Programming .....	61
Add & Change.....	62
Delete PLUs.....	65
PLU Status Group (PLU Status Link) .....	67
Group .....	74
Function Key .....	75
Function Key Program Summary .....	76
Cancel.....	79
Cash.....	79
Check.....	80
Check Cash.....	81
Check Endorse.....	81
Currency Conversion 1-5 .....	82
Drive Thru/Eat In/Take Out .....	83
Error Correct.....	83
Food Stamp Tend .....	84
Guest #.....	84
KP Routing .....	85
Macro 1-40 .....	86
Mdse Return .....	86
Misc Tend 1-16 .....	87
Modifier 1-10 .....	88
Not Found PLU .....	89
#/No Sale .....	89
P/Bal .....	89
Paid Out 1-5/Recd Acct 1-5 .....	90
%1 - %10 .....	91
Price Inquiry/Stock Inquiry .....	92
Print .....	92
Print Check.....	92
Promo .....	93
Recall Check 1-4 .....	93
Scale .....	95
Store Check 1-4.....	96
Tax Exempt .....	97
Time In/Out .....	97
Tip 1-3 .....	97
Tip Declare .....	98
Tray Subtotal .....	98

Void Item.....	99
Waste.....	99
X/Time .....	99
System Options.....	100
General Function Options .....	101
Tax Options.....	107
Cash Drawer Options .....	109
Training Mode Options .....	110
Level/Modifier Options.....	111
Tracking File Options.....	113
Kitchen Printing/Video Options .....	115
Validation/Subtotal Print Options .....	118
General Printing Options.....	120
Report Printing Options.....	124
Report Options .....	126
Time Keeping Options .....	129
E.J. (Electronic Journal) & Detail Printing Options .....	131
Taxes.....	133
Add On Taxes.....	134
Tax Table.....	135
VAT.....	137
Messages.....	138
Logo Message .....	139
Error Messages.....	140
System Descriptors.....	141
Report Descriptors.....	142
Check Endorsement Message.....	143
Guest Check Logo Message.....	144
Validation Message .....	145
DataTran Message.....	146
Window Look Up (WLU) .....	147
Overview .....	147
WLU Programming.....	148
Time Period .....	155
Employee .....	156
Edit Job Codes.....	158
Edit Pay Rates .....	159
Authority Levels .....	160
Authority Level Alpha Descriptors .....	163
Printer Tables & KV Routing.....	164
System Printer Routing .....	166
Kitchen Video Routing.....	167
Kitchen Printer Routing.....	168
Receipt Printer Routing.....	170
Detail Printer Routing .....	170
Ingredient Inventory .....	171
Edit Ingredient.....	172
Recipe Table.....	173
Time Activated Functions.....	174
Time Activated Keyboard Levels.....	175
Time Activated Price Levels .....	176
Time Activated Macros .....	177
Time Activated String Reports.....	178
Time Activated Shifts.....	179
KP Time Period.....	180

Product Mix Groups .....	181
Product Mix Items .....	182
Product Mix Group Time Periods .....	183
Custom Report Programming .....	184
Custom Report.....	185
Edit Existing Reports.....	187
String Reports .....	188
PLU Stock.....	189
PLU Minimum Stock.....	191
Copy Program.....	192
Program File Download.....	194
Select Program Files.....	195
All Files .....	197
P-Mode Program Scan Printing .....	198
NON-PLU Code .....	200
PLU & WLU Key Assignment.....	202
PLU Key Assignment.....	203
WLU Key Assignment .....	204
Bitmap File Download.....	205
Groups By Employee.....	206
Employee Card Read Format.....	207
Age Verification .....	208
Mix & Match Table .....	209

**Appendices** **211**

Register Communications Ports.....	212
Standard Ports.....	212
Optional Ports.....	212
Pin Descriptions.....	212
Loop Back Connections.....	213
System Configurations.....	214
Inter Register Communications .....	214
Integrated Payment Program Requirements .....	217
Clear Current Batch (S-Mode) .....	218

**Glossary of Terms** **219**

**Index** **229**

# Getting Started

---

## About the *SER-7000* Series

The *SER-7000* Series is offered in two different versions:

- The *SER-7000* features a flat 160-position keyboard with 107 NLU keys. Because it offers protection from spills, this keyboard works best in restaurants, food service shops, or convenience stores where food is served.
- The *SER-7040* features a 90-position keyboard with traditional raised keys. In the standard configuration, the keyboard provides 15 NLU keys – it can be expanded to 40 NLU keys. The *SER-7040* works best in retail stores, or shops where it is not necessary to place a large number of preset item keys on the keyboard.

This manual includes instructions for both models. The keyboard is the only significant difference between the two models. All other features are the same, unless otherwise noted.

---

## Register Controls

### Power On/Off

The power on/off toggle switch is located on the right side at the rear of the terminal.

### Front View

By pushing on the bottom or top of the display, you can move the display to a different viewing angle.

### Display Adjustments

In the **Reg** key lock position, press the **Page Up** key repetitively to increase contrast; press the **Page Down** key repetitively to reduce contrast.

### Rear View

You can lift the rear display and rotate it for optimum viewing.

# Navigating the SER-7000

This chapter explains the conventions used for displaying and entering information.

Review the information contained in this chapter before attempting to program your SER-7000.

## Default Keyboard – SER-7000

RECT FEED	DETL FEED	RCPT ON/OFF	28	38	48	58	68	78	88	98	PRICE LVL 1	KEYB LVL 1	RECEIPT ISSUE	TIME CLOCK	EMP #
1	10	19	29	39	49	59	69	79	89	99	PRICE LVL 2	KEYB LVL 2	ERR CORR	VOID ITEM	MDSE RTRN
2	11	20	30	40	50	60	70	80	90	100	TAX1 SHIFT	EXEMPT TAX	YESNO	ENTER	CANCEL
3	12	21	31	41	51	61	71	81	91	101	MACRO 1	PAGE UP	↑	PAGE DOWN	RECALL CHECK
4	13	22	32	42	52	62	72	82	92	102	MACRO 2	←	↓	→	STORE CHECK
5	14	23	33	43	53	63	73	83	93	103	MACRO 3	@/FOR	PLU	CLEAR	MISC 2
6	15	24	34	44	54	64	74	84	94	104	%1	7	8	9	MISC 1
7	16	25	35	45	55	65	75	85	95	105	%2	4	5	6	CHECK
8	17	26	36	46	56	66	76	86	96	106	%3	1	2	3	SBTL
9	18	27	37	47	57	67	77	87	97	107	DONE	0	00	.	CASH



### ER-7040 Keyboard – Default 15 NLU Configuration

The SER-7040 keyboard is shown below with the default legends and key assignments. This configuration has 15 keyboard NLU locations and can be expanded to 40 NLU locations.

Programmable key locations are shown with a bold border.

RECT FEED	DETL FEED	RCPT ISSUE	ENTER	DONE	TAX 1 SHIFT	VOID	MDSE ACCT	PAID RTRN	ERROR CORR	MACRO 2	MACRO 3	#NS	CANCEL	EMP#
CURSOR UP	CURSOR DOWN	X/TIME	PLU	CLEAR									F/S SHIFT	TIME IN/OUT
CURSOR LEFT	CURSOR RIGHT	7	8	9									F/S SUB	MISC 1
PAGE UP	PAGE DOWN	4	5	6									F/S TEND	CHECK
% 1	YES/NO	1	2	3									SBTL	
% 2	% 3	0	00	.									CASH	

### ER-7040 Keyboard – Expanded 40 NLU Configuration

RECT FEED	DETL FEED	RCPT ISSUE	ENTER	DONE	TAX 1 SHIFT	VOID	MDSE ACCT	PAID RTRN	ERROR CORR	MACRO 2	MACRO 3	#NS	CANCEL	EMP#
CURSOR UP	CURSOR DOWN	X/TIME	PLU	CLEAR	1	6	11	16	21	26	31	36	F/S SHIFT	TIME IN/OUT
CURSOR LEFT	CURSOR RIGHT	7	8	9	2	7	12	17	22	27	32	37	F/S SUB	MISC 1
PAGE UP	PAGE DOWN	4	5	6	3	8	13	18	23	28	33	38	F/S TEND	CHECK
% 1	YES/NO	1	2	3	4	9	14	19	24	29	34	39	SBTL	
% 2	% 3	0	00	.	5	10	15	20	25	30	35	40	CASH	

## Key Descriptions

### *Essential Function Keys*

Because the *SAM4S SER-7000* keyboard is programmable, you can use the default keyboard, you can modify it, or you can design a keyboard that fits your exact needs.

---

**In order to program and operate the *SAM4S SER-7000*, you must place all of the following keys on every keyboard:**

---

- **Numeric Keys 0-9**
- **CLEAR**
- **Y/N**
- **ENTER**
- **Cursor Control Keys** ↑ ↓ ← →
- **PAGE UP/PAGE DOWN**
- **DONE**
- **@/FOR**
- **EMP#**

---

**Notes:** Moving essential keys is not advised. When programming an alpha field with the alpha overlay, the essential keys will shift back to their original position as part of the alpha overlay.

**You cannot change the assignment of an essential key (i.e. numeric key, Y/N, cursor keys, ENTER, etc.) unless it is first located in a different position on the keyboard.**

---

Many function keys have programming options. See "Function Key" programming in "P-Mode Programming" for individual function key programming options.

### *Function Key List*

Key	Description
<b>0 - 9, 00, 000 (Numeric Keys)</b>	Used in all modes to enter numeric information such as prices or quantities.
<b>ADD CHECK</b>	Use to add multiple guest checks (tracking balances or soft checks) for payment together. See "TRAY SUBTL" on page 10 to add separate transactions when you are not tracking balances.
<b>ALPHA TEXT</b>	Use to type a name or message that will be associated with a soft check. Press the <b>ALPHA TEXT</b> key anytime after a check has been opened, then type a message (up to 15 characters) using the alpha keyboard overlay and press <b>ENTER</b> . The message is saved and printed/displayed with the order.

<b>CANCEL</b>	Press <b>CANCEL</b> to abort a transaction in progress. All current items are removed (voided).
<b>CASH</b>	Use <b>CASH</b> to finalize or tender cash sales. Change is computed when the amount of cash tendered is greater than the amount of the sale.
<b>CHECK</b>	Use <b>CHECK</b> to finalize or tender check sales. Change is computed when the amount of the check tendered is greater than the amount of the sale.
<b>CHECK CASH</b>	Use the <b>CHECK CASH</b> key to exchange a check for cash outside of a sale.
<b>CHECK ENDORSE</b>	If compulsory check endorsement is set with the <b>CHECK</b> key, use the <b>CHECK ENDORSE</b> key to print the endorsement message after a check is inserted into the appropriate printer.
<b>CLEAR/ESC</b>	Use the <b>CLEAR</b> function to clear numeric entries or error conditions. Use the <b>ESC</b> (escape) function to exit program screens and return to the previous menu or screen.
<b>CONTINUE</b>	Use to override the pop-up employee function after a transaction. Allows the employee to post an additional transaction without signing on again.
<b>CURR. CONV. 1-5</b>	Use to convert and display the value of the transaction in foreign currency. Only cash tender is allowed after pressing a <b>CURR CONV</b> key. Change is calculated and issued in home currency.
<b>CURSOR CONTROL KEYS</b> (↑↓←→)	<ol style="list-style-type: none"> <li>1. On menu screens, press the up or down keys to move the cursor to the menu item you wish to select.</li> <li>2. On program screens, press the cursor control keys (up, down, left, right) to move the cursor (highlighted field) to the field you wish to edit.</li> <li>3. On program screens, use the cursor keys to finalize your entry in the current field and move the cursor to the next field.</li> <li>4. On operation screens, press the up or down cursor keys to select a main item that has been registered in the current transaction. The last item entered is automatically selected.</li> </ol>
<b>DECIMAL (.)</b>	Use the decimal key to enter fractional rates or percentages. Do not use to enter amounts; the decimal is automatically inserted in the proper position.
<b>DONE</b>	Press the <b>DONE</b> key to exit a WLU, or to execute a report after all report options have been selected.
<b>DRIVE THRU</b>	<b>DRIVE THRU</b> is a subtotal key. Press <b>DRIVE THRU</b> to record the amount of the transaction in the drive thru total on the financial report. Tax calculation can be changed to accommodate different tax rules for drive thru sales.
<b>EAT-IN</b>	<b>EAT-IN</b> is a subtotal key. Press <b>EAT-IN</b> to record the amount of the transaction in the eat-in total on the financial report. Tax calculation can be changed to accommodate different tax rules for eat-in sales. Sales cannot be split between eat-in and take-out.
<b>EMPLOYEE</b>	The <b>EMPLOYEE #</b> key is used to sign on a cashier, clerk, server or employee who is clocking in or out.
<b>EMPLOYEE (1-10)</b>	The <b>EMPLOYEE (1-10)</b> keys can be programmed to sign on a specific employee when pressed directly, without entering a code.

<b>ENTER</b>	When programming or selecting from window look-ups, press <b>ENTER</b> to enter data into a field with the cursor remaining in the field.
<b>ERR.CORR</b>	Press <b>ERR CORR</b> immediately after an item to void that item.
<b>FD STMP SHIFT</b>	Press <b>FD STMP SHIFT</b> to shift the pre-programmed food stamp status of an item prior to its registration.
<b>FD STMP SUBTTL</b>	Press <b>FD STMP SUBTTL</b> to display the total of food stamp eligible items registered in the current transaction.
<b>FD STMP TEND</b>	Press the <b>FD STMP TEND</b> key to tender Food Stamps after the display of the food stamp eligible subtotal. Depending upon function key programming, change less than \$1 may be applied to any cash balance or issued as cash change.
<b>GUEST #</b>	Use to record the number of guests served by a transaction. The entry may be compulsory. The entry appears on receipts and the kitchen printer/KVS.
<b>HOLD</b>	Use to identify an individual item, or an entire transaction so that the designated items will not print/display at the kitchen printer/KVS at the current finalization. Items designated as "hold" items will display on the screen with an "H".
<b>INACTIVE</b>	The <b>INACTIVE</b> function key can be re-used as many times as necessary to inactivate key locations.
<b>KP ROUTING</b>	The <b>KP ROUTING</b> key is used to override KP Time Period control. For example, a restaurant might normally operate two kitchens at one time and one kitchen at other times. In case the volume of business changes, the manager might want to control the KP routing manually. Also, a single item, or large order might be required to be sent to a different printer than normal. Select STAYDOWN, TICKET POP UP or ITEM POP up operation. To operate, press the key at any time inside or outside of a transaction.
<b>KEYBOARD LEVEL 1-5</b>	Use to select one of the five keyboard levels.
<b>LIST CHECK 1-4</b>	Press <b>LIST CHECK</b> (for the appropriate tracking file) to display a list of all open soft checks in the file.
<b>MACRO OFF, P, R, X, Z, VOID</b>	Press the <b>MACRO OFF, P, R, X, Z, or VOID</b> key while programming a macro sequence to allow the macro to set the register in the indicated control lock position (without actually turning the control lock.)
<b>MACRO PAUSE</b>	Press the <b>MACRO PAUSE</b> key during macro programming to indicate a pause in the macro. A macro will stop when it reaches the pause, and then accept an operator key entry before continuing the macro sequence.
<b>MACRO SET</b>	Press the <b>MACRO SET</b> key to create a macro at any time without going through the P-mode macro program.
<b>MACRO 1 - 40</b>	Use to execute one of forty possible preprogrammed key sequences.
<b>MACRO #</b>	Use to execute one of the forty possible macros by entering the macro number and pressing the <b>MACRO #</b> key.
<b>MDSE RETURN</b>	Press the <b>MDSE RETURN</b> key to adjust items inside or outside of a transaction.

<b>MISC TEND 1-16</b>	Press a <b>MISC TEND</b> key to finalize or tender sales paid by various charges or other media. Tendering may or may not be allowed depending upon function key programming.
<b>MISC TEND #</b>	Access any of the 16 possible miscellaneous tender functions by entering the tender number (1-16) and pressing the <b>MISC TEND #</b> key.
<b>MODIFIER 1-10</b>	Preceding a PLU entry, a modifier key changes a digit of the PLU number, causing a different PLU to be registered. Modifier keys can be set to change any of the 14 PLU digit positions to any specified digit (0-9).
<b>NEXT RECORD</b>	Use the <b>NEXT RECORD</b> key when programming areas with multiple records, i.e. PLUs, PLU Status Groups, Groups, Function Keys, WLUs, or Employees. Press the <b>NEXT RECORD</b> key from any field on the program screen and the next sequential record will display with the cursor in the same field position.
<b>#/NO SALE</b>	Use to enter a non-adding memo number during a transaction (# function) or use to open the cash drawer outside of a sale (no sale function).
<b>NEXT DOLLAR</b>	Press the <b>NEXT DOLLAR</b> key to tender an amount the next whole dollar above the sale total. For example, if the sale total is \$2.52, then the <b>NEXT DOLLAR</b> key would automatically tender \$3.00.
<b>NOT FOUND PLU</b>	Designed to be used in a scanning system, the <b>NOT FOUND PLU</b> key allows the operator to immediately enter basic PLU information for an item that is not in the PLU file. If the "Not Found PLU" message displays when a PLU is entered (or when an item is scanned) the operator can press the <b>NOT FOUND PLU</b> key and will be prompted to enter PLU price, descriptor and linking information. The item is registered immediately.
<b>P/BAL</b>	Enter an amount, and then press the Manual Previous Balance ( <b>P/BAL</b> ) key to use the simplest form of Charge Posting/Table Service. The <b>P/BAL</b> key may be used any time within a transaction. Transactions where the <b>P/BAL</b> key is used must be finalized with one of the <b>STORE CHECK</b> keys.
<b>PAGE DOWN PAGE UP</b>	When a transaction, menu or program contains more information than can be displayed on the screen at one time, press the <b>PAGE UP</b> or <b>PAGE DN</b> keys to shift your view of the information up or down. Note that the scroll indicators (▼, ▲, ◆) tell you whether there is more information above, below, or above and below your current view.
<b>PAID OUT 1-5</b>	Press a <b>PAID OUT</b> key to remove cash, check or miscellaneous media from the drawer.
<b>PAID RECALL</b>	The <b>PAID RECALL</b> key is used to recall last x number of transactions, starting with the last transaction finalized. (X is determined in memory allocation.) Once recalled, a transaction could be reviewed (using the cursor keys or <b>PAGE UP/PAGE DN</b> ) and/or corrected as necessary. To exit the paid order view, press <b>DONE</b> .


<b>PARK ORDER</b>	Used in conjunction with a kitchen video system and the <b>SERVE ORDER</b> function key. Enter a number and press <b>PARK ORDER</b> to park or "suspend" an order on the video monitor until the order is completely filled. In the case of a drive through order that cannot be completed when the customer arrives at the pick-up window, the operator would park the order until it was completely filled. The order would then be served or bumped by using the <b>SERVE ORDER</b> key.
<b>%1 - %10</b>	Ten discount keys ( <b>%1 - %10</b> ) are available to handle various kinds of discounts, markdowns and adjustments to items or transactions.
<b>PLU</b>	Enter the PLU code number and press <b>PLU</b> to register a PLU.
<b>PREV. RECORD</b>	Use the <b>PREV. RECORD</b> key when programming areas with multiple records, i.e. PLUs, PLU Status Groups, Groups, Function Keys, WLUs, or Employees. Press the <b>PREV. RECORD</b> field from any field on the program screen and the previous sequential record will display with the cursor in the same field position.
<b>PRICE INQ</b>	Press the <b>PRICE INQ</b> to display the PLU price without actually registering the PLU.
<b>PRICE LVL 1-20</b>	Press a <b>LEVEL</b> key prior to a PLU entry to shift the price of a PLU to a different price set in PLU programming.
<b>PRINT</b>	Press the <b>PRINT</b> function to send items that require special preparation to the kitchen printer (or KVS) before the sale is finalized. An item can be programmed as an auto grill item, requiring the <b>PRINT</b> key to be pressed every time the menu item is sold. This function does not affect normal kitchen printer/KVS routing.
<b>PRINT ALL</b>	First press the one of the <b>LIST CHECK</b> keys to display all the open soft checks in the tracking file. While the open checks are displayed, press the <b>PRINT ALL</b> key to print a copy all open checks.
<b>PRINT CHECK</b>	Prints the soft guest check (tracking file) that is currently displayed. The <b>PRINT CHECK</b> key may be programmed to store (service) the check automatically.
<b>PRINT HOLD</b>	Use to remove the "hold" designation from an item or order, so that the items and their instructions are now sent to the kitchen printer/KVS at finalization.
<b>PROMO</b>	Press the <b>PROMO</b> key to void the price (the item remains) of an item. Can be used for 2 for 1 promotions. A <b>PROMO</b> count is available for each menu item.
<b>PRINT SCREEN</b>	Press <b>PRINT SCREEN</b> to print a copy of the current screen on the designated receipt printer.
<b>QUIT</b>	Press <b>QUIT</b> to automatically sign off the current cashier/clerk.
<b>RECEIPT ON/OFF</b>	Press <b>RECEIPT ON/OFF</b> to toggle the receipt function from on to off. You must first have a receipt printer connected, identified to the register, and the print receipt automatically option (see General Printing Options) turned on.

<b>RECALL CHECK # 1-4</b>	The check tracking system can maintain only balances (hard check) or entire transactions (soft check) in the register memory. Four different tracking files can be separated to maintain, for example: restaurant checks, call-in orders, delivery orders, and/or table balances. Press one of the four <b>RECALL CHECK #</b> keys directly to begin a tracking transaction, or enter the tracking number and press the <b>RECALL CHECK #</b> key to access the existing tracking balance.
<b>RECD ACCT 1-5</b>	Press a <b>RECD ACCT</b> key to add cash, check or miscellaneous media to the drawer.
<b>RECEIPT</b>	Press the <b>RECEIPT</b> key to issue a transaction receipt at the designated receipt printer.
<b>REPEAT</b>	Press the <b>REPEAT</b> key to quickly re-order a set of items. When a check is recalled, simply press the <b>REPEAT</b> key to automatically register all of the items registered at the previous posting.
<b>SCALE</b>	Press the <b>SCALE</b> key to automatically display the weight from a scale connected to the register, or to manually enter a weight for extension.
<b>SEAT #</b>	Use to identify a specific seat (or person) within a transaction. Facilitates separate payment by seat, and identifies to the food preparation staff (through the kitchen printer/KVS) how to assemble meals. Seat numbers may be assigned at the time of entry or, if necessary, later in the transaction.
<b>SERVE ORDER</b>	Used in conjunction with a kitchen video system and the <b>PARK ORDER</b> function key. Enter a number and press <b>SERVE ORDER</b> to serve or bump the order from a video monitor. No video keypad is needed for this function.
<b>SPLIT CHECK</b>	Function key not in use with current feature set.
<b>SPLIT PAY</b>	Press the <b>SPLIT PAY</b> key to divide the amount of a guest check into equal segments for payment by more than one person.
<b>STOCK INQ</b>	Press the <b>STOCK INQ</b> key, and then enter (or scan) an item to view the stock status of the item. (The item must be a stock item to use this function.)
<b>STORE CHECK 1-4</b>	The check tracking system can maintain only balances (hard check) or entire transactions (soft check) in the register memory. Four different tracking files can be separated to maintain, for example, restaurant checks, call-in orders, delivery orders, and/or table balances. Press one of the four <b>STORE CHECK #</b> keys to finalize a tracking transaction. (This function is equivalent to the <i>SERVICE</i> function.)
<b>SUBTOTAL</b>	Press <b>SUBTOTAL</b> to display the message “SUBTOTAL” on the display. Although a running total is always displayed on the bottom of the screen, the <b>SUBTOTAL</b> key may be required before some functions, such as subtotal discount.
<b>TABLE # (1-4)</b>	Use to enter the table number of the check. If a table number is entered, the <b>TABLE #</b> key can also be used to recall the check.

<b>TAKE-OUT</b>	<b>TAKE-OUT</b> is a subtotal key. Press <b>TAKE-OUT</b> to record the amount of the transaction in the take-out total on the financial report. Tax calculation can be changed to accommodate different tax rules for take-out sales. Sales cannot be split between eat-in and take-out.
<b>TAX EXEMPT</b>	The <b>TAX EXEMPT</b> can be preprogrammed to exempt specific taxes from a sale.
<b>TAX SHIFT 1-6</b>	Use to shift the preprogrammed tax status of an item. Press before an item entry to make taxable.
<b>TIME IN/OUT</b>	Press the <b>TIME IN/OUT</b> key to record start and stop work times for the registered employee. Hours worked are maintained by the time clock system.
<b>TIP (1-3)</b>	Use to enter a tip amount on a check.
<b>TIP DECLARE</b>	Use to declare employee tips if you are not using the employee time keeping feature. (If you are using employee time keeping, you are prompted to declare tips when clocking out.)
<b>TRANSFER CHECK (1-4)</b>	Use to transfer one or all open soft checks from one server to another server. A transfer check receipt will print.
<b>TRAY SUBTL</b>	Press the <b>TRAY SUBTL</b> key to finalize a transaction that will be paid later with subsequent transactions. See "ADD CHECK" on page 4 to add multiple soft checks for payment.
<b>VALID</b>	Press <b>VALID</b> to initiate a single line validation. (A printer with validation capability must be connected to the system and programmed appropriately.)
<b>VOID ITEM</b>	Press the <b>VOID ITEM</b> key to remove an item from a transaction. Locate the cursor on the item you wish to remove and press the <b>VOID ITEM</b> key.
<b>WASTE</b>	Used to start and end entries of items that are wasted. A waste count is maintained for each item and inventory is adjusted.
<b>WLU</b>	Use to access a WLU by entering the numeric WLU number and pressing the <b>WLU</b> key.
<b>X/TIME</b>	Use the <b>X/TIME</b> key to multiply, to register split price items, or display the time in the REG mode.
<b>Y/N</b>	When programming, press <b>Y/N</b> to toggle a selection from yes to no or no to yes.



## Control Lock

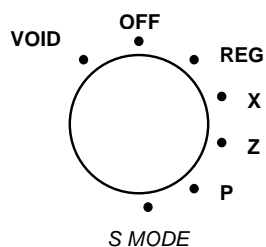

<b>VOID</b>	Use to void (correct) items outside of a sale.
<b>OFF</b>	The register is inoperable.
<b>REG</b>	(Register) use for normal registrations.
<b>X</b>	Use to read register reports and perform other manager functions.
<b>Z</b>	Use to read register reports and reset totals to zero.
<b>P</b>	(Program) Use to program the register.
<b>S MODE</b>	Use for tests and special settings. This position is not marked on the control lock.

The *SER-7000* includes two sets of keys that can be used to access the following control lock positions.

<u>Key</u>	<u>Positions Accessible</u>
<b>VOID</b>	VOID, OFF, REG, X
<b>X</b>	OFF, REG, X
<b>Z</b>	OFF, REG, X, Z
<b>PGM</b>	VOID, OFF, REG, X, Z, PGM
<b>C</b>	ALL POSITIONS

## Key Prompting

While you are programming the *SER-7000*, the bottom line of the screen displays the keys that you are allowed to use next. (These prompts do not display on the operator screen in the **REG** control lock position, or in manager operations.)

For example, turn the key to the **P** position to view the P-MODE PROGRAMMING MENU:

```
P-MODE PROGRAMMING MENU
1 .  PLU
2 .  PLU STATUS GROUP
3 .  GROUP
4 .  FUNCTION KEY
5 .  SYSTEM OPTION
6 .  TAXES
▼      ENTER PAGE UP/DN  ↑↓
```

Function keys that you are allowed to use are displayed at the bottom of the screen.

## Page Up and Page Down

The scroll indicators tell you if the area in which you are working (in this case, General Printing Options Programming area) contains more information than can be displayed at one time.

Arrow down indicates more information below. Press **PAGE DN** to view the information below what is currently displayed.

```
GENERAL PRINTING OPTIONS
1. PRINT ON RECEIPT:
    EMPLOYEE NAME           Y
    CONSECUTIVE #           Y
    ITEMS BY GROUP          N
    DATE                     Y
    TIME                     Y
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

Arrow up and down indicates more information above and below. Press **PAGE DN** to view the information below what is currently displayed. Press **PAGE UP** to view the information above what is currently displayed.

```
GENERAL PRINTING OPTIONS
1. PRINT ON RECEIPT:
    PREAMBLE/POSTAMBLE      Y
    ORDER #                 Y
    SEAT #                  Y
2. RCPT FEED LINE AFTER PRT 00
3. LINES AFTER PREAMBLE    00
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

Arrow up indicates more information above. Press **PAGE UP** to view the information above what is currently displayed.

```
GENERAL PRINTING OPTIONS
32.TURN OFF AUTO CUTTER    N
33.PRE LOGO IMAGE ON RCT(0-8) 4
34.POST LOGO IMAGE ON RCT(0-8) 3
33.PRE LOGO IMAGE ON GC(0-8) 0
34.POST LOGO IMAGE ON GC(0-8) 0
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Choosing Items from Menus

Choose an item from the menu in one of two ways:

1. Type the number for your choice and press **ENTER**.
2. Press the **↑** or **↓** keys to move the cursor to your choice and press **ENTER**.

```

P-MODE PROGRAMMING MENU
1.  PLU
2.  PLU STATUS GROUP
3.  GROUP
4.  FUNCTION KEY
5.  SYSTEM OPTION
6.  TAXES
▼                                     ENTER PAGE UP/DN ↑↓
    
```

The cursor automatically selects the first item when the menu screen is first opened.

## Selecting and Filling Fields

1. Press the **↑** or **↓** key to select the field above or below the current cursor position.
2. For yes/no fields, press the **Y/N** key to toggle from yes to no.
3. For fields that accept numeric values, type the appropriate value using numeric keys. Values that are not allowed will not be accepted.
4. Press **ENTER** to accept the new entry or press **↓** to accept the entry and advance to the next field.

```

PLU#000000000000001 PROGRAM
DESCRIPTOR:          PLU#1
GROUP LINK #1                01
PLU STATUS LINK#            01
PIECE COUNT      000  RECIPE#  00
ACTIVATE WLU#              00
INACTIVE
▼LU# ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

```

PLU#000000000000001 PROGRAM
PRESET?
ALLOW PRESET/HALO OVERRIDE?  N
PRC/HALO  000000.00  PRC LVL1  01
PRC/HALO  000000.00  PRC LVL2  00
PRC/HALO  000000.00  PRC LVL3  00
PRC/HALO  000000.00  PRC LVL4  00
▲LU# ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

## Opening Pop-up Selection Windows

1. The arrow indicates the selections for this field are made from a pop-up window.

```

GENERAL FUNCTION OPTIONS
      BEFORE TENDER                                N
3.  DEFAULT DESTINATI                             NONE ▶
4.  ROUNDING ON % :                               UP AT 5 ▶
5.  ROUNDING ON SPLIT PRICE/MULT
      ALWAYS DOWN ▶
6.  CONSOLIDATE LIKE ITEMS                        Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

2. With the field selected and the cursor on the arrow, press **ENTER**. A pop-up window displays with the selections for the field listed.

```

GENERAL FUNCTION OPTIONS
      BEFORE TENDER                                N
3.  DEFAULT DESTINATI                             NONE ▶
4.  ROUNDING ON % :                               NONE 5 ▶
5.  ROUNDING ON SPLIT                             EAT-IN
      TAKE-OUTN ▶
6.  CONSOLIDATE LIKE                             DRIVE-THRU Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

3. Press the **↑** or **↓** keys to make your choice, then press **ENTER** to close the pop-up window. Your new choice is displayed.

```

GENERAL FUNCTION OPTIONS
      BEFORE TENDER                                N
3.  DEFAULT DESTINATI                             NONE ▶
4.  ROUNDING ON % :                               NONE 5 ▶
5.  ROUNDING ON SPLIT                             EAT-IN
      TAKE-OUTN ▶
6.  CONSOLIDATE LIKE                             DRIVE-THRU Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

## Entering Alpha Characters

You have the option of using the Alpha Keyboard Overlay to enter descriptors (the default method) or you can enter descriptors by entering a three-digit code for each character. See “General Function Options” in P-Mode Programming to select the method you wish to enter descriptors.

### PS/2 Keyboard

A third option is to connect a PC keyboard to the standard PS/2 connector on the connection panel. With a PS/2 keyboard connected, you can complete all programming tasks. Use the Space Bar to toggle from *yes* to *no* at Y/N fields. The commands: Page Up/Page Down, Cursor Keys, and Enter can be used on either the terminal or PC keyboard.

### Alpha Overlay

The key layout of the Alpha Keyboard Overlay is shown below:

RECT FEED	DETL FEED	RCPT ON/OFF	-	+		{	}	:	"	=	PRICE LVL 1	KEYB LVL 1	RECEIPT ISSUE	TIME CLOCK	EMP #
!	@	#	\$	%	^	&	*	(	)	-	PRICE LVL 2	KEYB LVL 2	ERR CORR	VOID ITEM	MDSE RTRN
Q	W	E	R	T	Y	U	I	O	P	\	TAX1 SHIFT	EXEMPT TAX	YES/NO	ENTER	TRANS VOID
A	S	D	F	G	H	J	K	L	;	'	MACRO 1	PAGE UP	↑	PAGE DOWN	RECALL CHECK
Z	X	C	V	B	N	M	,	.	/	<	MACRO 2	←	↓	→	STORE CHECK
CAPS	SHIFT	BOLD	SPACE	SPACE	SPACE	SPACE	SPACE	BACK	?	>	MACRO 3	@/FOR	PLU	CLEAR	MISC 2
									[	]	%1	7	8	9	MISC 1
											%2	4	5	6	CHECK
											%3	1	2	3	SBTL
											DONE	0	00	.	CASH

## Entering Descriptors with the Alpha Overlay

1. The indicator "ALPHA" displays when a field that accepts alphanumeric entries is selected. At this time, the keyboard is shifted to the alpha keyboard overlay.

```
PLU#0000000000000001 PGM. → ALPHA
DESCRIPTOR: PLU#1
GROUP LINK #1 01
PLU STATUS LINK# 01
PIECE COUNT 000 RECIPE# 00
ACTIVATE WLU# 00
INACTIVE N
▼LU# ESC Y/N ENT PAGE UP/DN ↑↓→←
```

2. Type a new descriptor using the typewriter style keyboard on the alpha overlay. If you make a mistake:
  - Press **ESC** and the original descriptor will be displayed again, or
  - Press **BACK** to remove the previous character.
3. Press **ENTER** to finalize the new descriptor, or press ↓ to finalize the new descriptor and move the cursor to the next field

### Alpha Code Chart for Alpha Entry by Code Number

CHAR	•	¾	©	“fs”	“tx”	®	↑	↓	→	←
CODE	007	008	009	011	020	021	024	025	026	027
CHAR	SPACE	!	"	#	\$	%	&	'	(	)
CODE	032	033	034	035	036	037	038	039	040	041
CHAR	*	+	,	-	.	/	0	1	2	3
CODE	042	043	044	045	046	047	048	049	050	051
CHAR	4	5	6	7	8	9	:	;	<	=
CODE	052	053	054	055	056	057	058	059	060	061
CHAR	>	?	@	A	B	C	D	E	F	G
CODE	062	063	064	065	066	067	068	069	070	071
CHAR	H	I	J	K	L	M	N	O	P	Q
CODE	072	073	074	075	076	077	078	079	080	081
CHAR	R	S	T	U	V	W	X	Y	Z	[
CODE	082	083	084	085	086	087	088	089	090	091
CHAR	\	]	^	_	`	a	b	c	d	e
CODE	092	093	094	095	096	097	098	099	100	101
CHAR	f	g	h	I	j	k	l	m	n	o
CODE	102	103	104	105	106	107	108	109	110	111
CHAR	p	q	r	s	t	u	v	w	x	y
CODE	112	113	114	115	116	117	118	119	120	121
CHAR	z	{		}	~		Ç	ü	é	â
CODE	122	123	124	125	126	127	128	129	130	131
CHAR	ä	à	å	ç	ê	ë	è	ï	î	ì
CODE	132	133	134	135	136	137	138	139	140	141
CHAR	Ä	Å	É	æ	Æ	ô	ö	ò	û	ù
CODE	142	143	144	145	146	147	148	149	150	151
CHAR	ÿ	Ö	Ü	ç	£	¥	ö	f	á	í
CODE	152	153	154	155	156	157	158	159	160	161
CHAR	ó	ú	ñ	Ñ			ı			½
CODE	162	163	164	165	166	167	168	169	170	171
CHAR	¼	α	β	μ	ø					
CODE	172	224	225	230	237					
CHAR			Double							
CODE			999							



---

# Initial Clear

---

**CAUTION: Do not share this information with unauthorized users. Distribute the special S-Mode key only to those you may want to perform this function.**

---

The initial clear function allows you to exit any register activity and return to a beginning or cleared state. Any transaction that is in progress will be exited and totals for that transaction will not be updated.


Here are some reasons you may want to perform an initial clear:

- The register is in an unknown state, and you wish to exit the current program or transaction without following normal procedures.
- You have performed a function that includes a compulsory activity, such as validating or printing, and you wish to bypass the compulsory activity.
- An initial clear may be necessary as part of servicing, or troubleshooting an SER-7000 register or system.

Perform this procedure only as necessary. Contact your SAM4S dealer first if you have questions about operating or programming your SER-7000.

### ***To Perform an Initial Clear:***

1. Turn the power switch located on the right side of the register to the OFF position.
2. Turn the control lock to the **PGM** position.
3. Press and hold the key position where the **CASH** key is located on the default keyboard layout.
4. While continuing to hold the **CASH** key, turn the power switch to the ON position.
5. The message “SIGN ON REQUIRED” will display when the initial clear is complete.

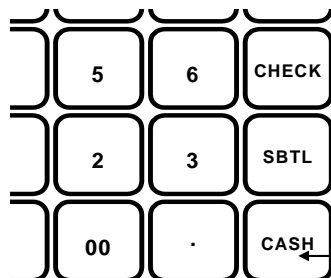

TO INITIALIZE:

Press and hold this key position during power-up in PGM mode.



# S-Mode Programming

---

## S- Mode Programming Menu

---

**CAUTION:**

S-Mode functions are reserved for dealers who set-up and service your SER-7000 system. The user will normally perform no S-Mode functions.

The procedures described in this area are security sensitive. Many S-Mode functions, including memory clearing and memory allocation, may cause damage or loss if they are performed without first backing up register data.

A special S-Mode key secures S-Mode. The S-Mode key position is located in an unmarked position, one position clockwise from the PGM control lock position. Distribute the special S-Mode key only to those you may want to perform these functions.

---

1. Turn the key to the **S** position.

```
S-MODE PROGRAMMING MENU
1. SELF TESTS
2. MEMORY CLEAR
3. MEMORY ALLOCATION
4. KEYBOARD KEY RELOCATION
5. SYSTEM OPTIONS
6. PRINTER DRIVER SELECTIONS
▼ ENTER PAGE UP/DN ↑↓
```

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the **↑** or **↓** keys to move the cursor and press **ENTER**.

```
S-MODE PROGRAMMING MENU
7. SERIAL PORT DEVICE SELECTIONS
8. DEFINE SERIAL PORT PARAMETERS
9. S-MODE PROGRAM SCAN PRINTING
10. SYSTEM PASSWORD
11. SUPER MACRO SCAN
12. ROM FILE DOWNLOAD
◆ ENTER PAGE UP/DN ↑↓
```

```
S-MODE PROGRAMMING MENU
9. S-MODE PROGRAM SCAN PRINTING
10. SYSTEM PASSWORD
11. SUPER MACRO SCAN
12. ROM FILE DOWNLOAD
13. LOAD DEFAULT MESSAGES
14. CHECK UNLOCK
▲ ENTER PAGE UP/DN ↑↓
```


---

## Self Tests

1. Select SELF TEST from the S-MODE PROGRAMMING MENU to display the H/W TEST Screen.
2. Choose an item from the menu in one of two ways:  
  
Type the number for your choice and press **ENTER**, or  
  
Press the **↑** or **↓** keys to move the cursor to your choice and press **ENTER**.

### Serial & IRC Loopback Test

1. Select SERIAL & IRC LOOPBACK from the H/W TEST MENU.
2. Power off the register and install a loop back connector at the port(s) you wish to test.
3. The display will indicate PASS/FAIL for each port. Refer to "Loop Back Connections" in the "Appendix" for information about making a loop back test connector.
4. Press any key to return to the H/W TEST MENU.

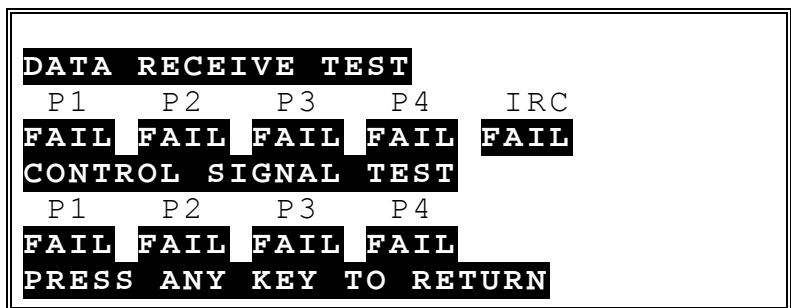

## Drawer Test

1. Select DRAWER from the H/W TEST MENU.
2. Power off the register and install a drawer at the ports you wish to test.
3. The screen will display "FIRST DRAWER" and "SECOND DRAWER" in sequence. Each connected drawer should open as it is displayed.
4. Press any key to return to the H/W TEST MENU.

```
FIRST DRAWER
SECOND DRAWER

DRAWER COMPULSORY
DRAWER 1 CLOSED
DRAWER 2 CLOSED
```

## RTC Setting (Real Time Clock)

1. Select RTC SETTING from the H/W TEST MENU to set the system clock and calendar.
2. Type the current year/month/day/hour/minute/second, press **ENTER**.
3. Press any key to return to the H/W TEST MENU.

```
ENTER DATE/TIME   YYYYMMDDHHMMSS
```


## Display Test

1. Select DISPLAY from the H/W TEST MENU to begin the display test.
2. At the completion of the display exercise, the message "Rear LCD Test" will display.
3. Press any key to return to the H/W TEST MENU.




## Keyboard Test

1. Select KEYBOARD from the H/W TEST MENU to display the KEY TEST screen.
2. Each key is depicted at a square on the keyboard. Press any key; the key will be indicated on the display.
3. Turn the MODE key to exit and return to the H/W TEST MENU.

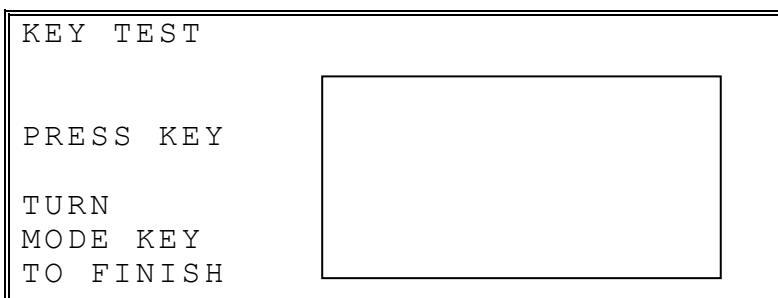


## Mode & Clerk Key Test

1. Select MODE/CLERK KEY TEST from the H/W TEST MENU to begin the mode/clerk key test.
2. Turn the mode key; the display indicates the current key position.
3. Press any key to return to the H/W TEST MENU.

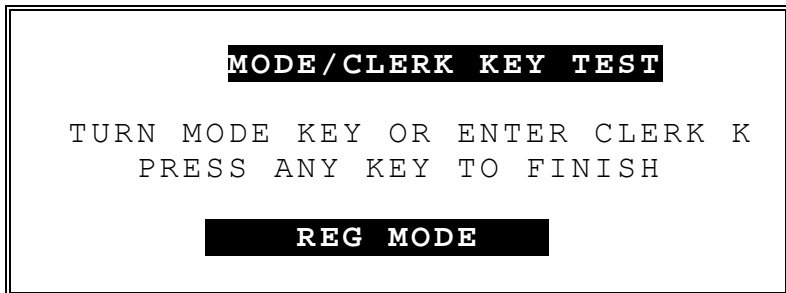

## RAM Test

1. Select RAM from the H/W TEST MENU to begin the RAM test.
2. The display monitors the progress of the test.
3. At the completion of the RAM test, the message "BASE RAM OK" will display if there are no RAM problems.
4. Press any key to return to the H/W TEST MENU.

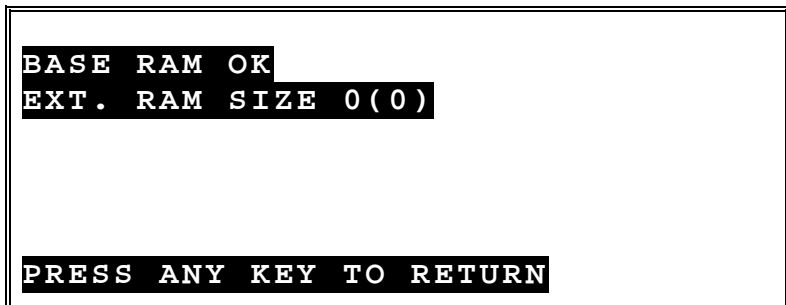

---

**NOTE: This test is non-destructive. Performing this test will not affect the current program or totals.**

---



## IRC Test

1. Select IRC from the H/W TEST MENU to display the IRC TEST menu.
2. Select "1. Register # Setting" to enter the IRC register number (1-32).

IRC TEST	
<b>1.</b>	<b>REGISTER # SETTING</b>
2.	INTERNAL LOOPBACK (CHIP)
3.	INTERNAL LOOPBACK (DRIVER)
4.	EXTERNAL LOOPBACK
5.	IRC SYSTEM TEST

Select 2 - 5 for a specific test. Refer to the table below for an explanation of each test.

3. Press any key to end the test and return to the IRC TEST menu.

#	TEST	Notes
2	<b>INTERNAL LOOPBACK (CHIP)</b>	Tests the internal IRC integrated circuit. Test runs continuously counting success (S) and failure (F).
3	<b>INTERNAL LOOPBACK (DRIVER)"</b>	Tests the internal IRC driver. Test runs continuously counting success (S) and failure (F).
4	<b>EXTERNAL LOOPBACK</b>	This test requires a loopback connector. Test runs continuously counting success (S) and failure (F).
5	<b>IRC SYSTEM TEST</b>	Test sends packet to each register in the range input. Test runs continuously counting success (S) and failure (F).

## Printer Test

1. Select **PRINTER** from the **H/W TEST MENU** to begin the printer test.
2. The printers will print test patterns continuously until the **CLEAR** key is pressed.
3. Press **ESC** to return to the **H/W TEST MENU**.

```
** SER-7000 PRINTER TEST **
```

## RAM Checksum

1. Select **DISPLAY** from the **H/W TEST MENU** to begin the display test.
2. The messages: "Calculating Base RAM checksum" and "Calculating Ext. RAM checksum" will display momentarily before the RAM checksums display.
3. Press any key to return to the **H/W TEST MENU**.

```
BASE RAM : 00020147  
EXT. RAM : 00000000
```

```
PRESS ANY KEY TO RETURN
```

## Version Check

1. Select VERSION CHECK from the H/W TEST MENU to display software version and RAM information.
2. The messages: "CALCULATING ROM CHECKSUM" will display momentarily before the version information and checksums display.
3. Press any key to return to the H/W TEST MENU.

```
SER-7000 0.99d NOV.26 2003
RAM SIZE : 512KByte
BASE(512K) EXT.(0000K)
ROM CHECKSUM : 0480D37B
# PLU : 107/107
BOOT ROM VER : (V1.01)
INIT#: 10 PFAIL# : 0
PRESS ANY KEY TO RETURN
```

## Card Read Test

1. Select CARD READ TEST from the H/W TEST MENU to test an optional credit card reader.
2. At the messages: "SWIPE THE CARD", swipe the card through the reader.
3. Press any key to return to the H/W TEST MENU.

```
CARD READ TEST
SWIPE THE CARD
```

## Printer Status Check

1. Select **PRINTER STATUS CHECK** from the **H/W TEST MENU** to display printer status information.
2. Press any key to return to the **H/W TEST MENU**.

### **PRINTER STATUS CHECK**

COVER CLOSED  
AUTO-CUTTER O.K.  
J-PAPER PRESENT  
J-PAPER  
R-PAPER PRESENT  
R-PAPER

**PRESS ANY KEY**

## Print Image Logo

1. Select **PRINT IMAGE LOGO** from the **H/W TEST MENU** to print the eight stored logo bitmap images.

---

## Memory Clear

---


**CAUTION:** The procedures described in this area are security sensitive. Clearing all or parts of the SER-7000 memory may cause damage or loss to the program. Do not share this information with unauthorized users and distribute the special S-Mode key only to those you may want to perform these functions.

---

### Memory All Clear

Complete clearing of all memory areas and installation of the default program can be done through the following special procedure:


1. Turn the power switch located on the right side of the register to the OFF position.
2. Turn the control lock to the unmarked position one position clockwise from the **PGM** position.
3. Press and hold the key position where the **CHECK** key is located on the default keyboard layout.

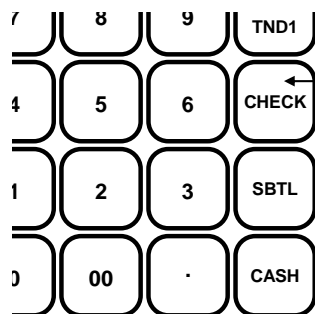

TO MEMORY ALL CLEAR:

Press and hold this key position during power-up in S-mode.

4. While continuing to hold the **CHECK** key while turning the power switch to the ON position.
5. Press the upper left key of the keyboard, then the lower left key, then the upper right key, and finally press the lower right key.

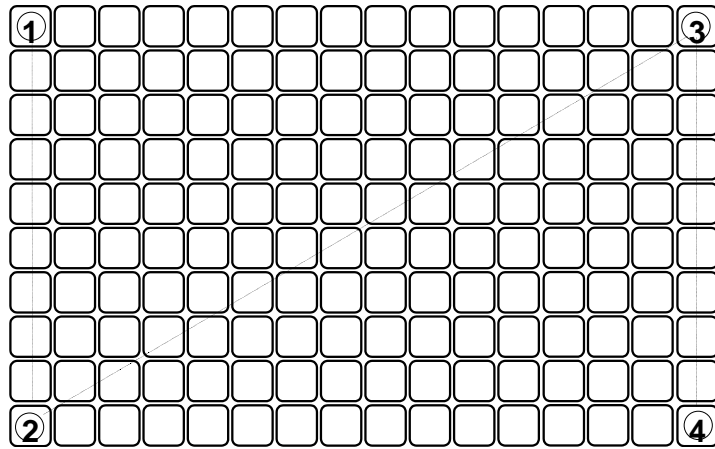

6. The display will monitor the memory clear process, which takes about 1 minute. When complete, press any key.
  - The display will prompt: “Enter Register Number (1-32)”. Type the register number on the numeric keypad and press **ENTER**.
  - The display will prompt: “Default Mem. Alloc.? [Y]”. Press the **Y/N** key to toggle from Y (yes) to N (no), then press **ENTER**.
  - The S-MODE PROGRAMMING MENU will display.

## Selective Memory Clearing

The Memory Clear selection allows you to selectively clear various areas of the SER-7000 memory.

1. Select **MEMORY CLEAR** from the **S-MODE PROGRAMMING MENU** to display the **S-MODE MEMORY CLEAR** Screen.

S-MODE MEMORY CLEAR

- 1. ALL TTLS, CNTS&GRAND TTLS**
2. TOTALS AND COUNTERS
3. GRAND TOTALS ONLY
4. ORDER TRACKING#1
5. ORDER TRACKING#2

2. Press **PAGE DN** to view additional allocation options, or press the **↑** or **↓** keys to locate the option you wish to set.

S-MODE MEMORY CLEAR

- 6. ORDER TRACKING#3**
7. ORDER TRACKING#4
8. PAID ORDER RECALL
9. PRODUCT PROJECTIONS
10. TIME-KEEPING

3. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the **↑** or **↓** keys to move the cursor to your choice and press **ENTER**.

4. The display will ask you to confirm your intentions to clear the memory area by asking **CLEAR? [N]**.

Press the **Y/N** key once to change the selection to **[Y]**, then press **ENTER** to complete the memory clear.

S-MODE MEMORY CLEAR

- 11. LOGO BITMAP IMAGE**
12. PRE-POLL STATUS FLAG
13. PLU FILE
14. SUPER MACRO
15. ELECTRONIC JOURNAL

S-MODE MEMORY CLEAR

15. ELECTRONIC JOURNAL
- 16. INITIAL&POWER FAIL COUNTER**
17. CONSECUTIVE#
18. GLOBAL ORDER NUMBER
19. ALL (1-10)

---

# Memory Allocation

---

**CAUTION: The procedures described in this area are security sensitive. Memory is automatically cleared after memory allocation is set. Do not change memory allocation after your system has been installed unless you are aware that all programs, totals and counters will be cleared. Do not share this information with unauthorized users and distribute the special S-Mode key only to those you may want to perform these functions.**

---

1. Select MEMORY ALLOCATION from the S-MODE PROGRAMMING MENU to display the MEMORY ALLOCATION PROGRAMMING Screen.

```
MEMORY ALLOCATION PROGRAM
1. DIGIT# IN REPORT TTL(8-10) 08
2. DIGIT# IN REPORT CNT(6-8) 6
3. # OF PLU 00107
4. # OF PLU STATUS GROUPS 0010
5. PRICE LEVELS PER PLU (1-4) 4
6. PLU REPORT BY PRICE LEVEL N
▼REMAINING MEMORY : 23060BYTES
```

2. Press PAGE DN to view additional allocation options, or press the ↑ or ↓ keys to locate the option you wish to set.
3. Enter or select a new value for the field.

```
MEMORY ALLOCATION PROGRAM
7. # OF EMPLOYEES 010
8. TIME ENTRIES PER EMPLOYEE 24
9. USE GROUP BY EMPLOYEE N
10.CHECK TRACKING IS : SOFT▶
11.# OF TRACKING FILES (0-4) 1
◆REMAINING MEMORY : 23060BYTES
```

```
MEMORY ALLOCATION PROGRAM
12.# OF LINES PER SOFT CHECK 050
13.# OF LINES PER TRANSACTION100
14.MAXIMUM # OF CHECKS
    TRACK 1 00020
    TRACK 2 00020
    TRACK 3 00020
◆REMAINING MEMORY : 23060BYTES
```

```
MEMORY ALLOCATION PROGRAM
    TRACK 4 00020
15.TIME PERIOD (24/48/96) 96
16.# OF PRODUCT MIX GROUPS 020
17.PROD.MIX PRDS (24/48/96) 24
18.PROJECTIONS N
◆REMAINING MEMORY : 23060BYTES
```

---



```

MEMORY ALLOCATION PROGRAM
19.# OF WLU 010
20.# OF LINES PER WLU 28
21.# OF RECIPE 010
22.# OF INVENTORY INGREDIENT 025
23.# OF LINES FOR E.J. 00000
24.# OF PAID RECALL TRANSAC 00
◆REMAINING MEMORY : 23060BYTES

```

```

MEMORY ALLOCATION PROGRAM
25.KEYSTROKE IN SUPER MACRO 0010
26.STORE BITMAP N
27.EAT-IN BY TIME PERIODS N
28.TAKE-OUT BY TIME PERIODS N
29.DRIVE-THRU BY TIME PERIODS N
◆REMAINING MEMORY : 23060BYTES

```

```

MEMORY ALLOCATION PROGRAM
30.TRACK 1 BY TIME PERIODS N
31.TRACK 2 BY TIME PERIODS N
32.TRACK 3 BY TIME PERIODS N
33.TRACK 4 BY TIME PERIODS N
34.# OF MIX & MATCH 005
◆REMAINING MEMORY : 23060BYTES

```

```

MEMORY ALLOCATION PROGRAM
35. REPORT SELECTION TABLE
      Y=YES, N=NO           Z12345
FINANCIAL Y Y N N N
EMPLOYEE  Y Y N N N
PLU       Y Y N N N
GROUP     Y Y N N N
◆REMAINING MEMORY : 23060BYTES

```

```

MEMORY ALLOCATION PROGRAM
35. REPORT SELECTION TABLE
      Y=YES, N=NO           Z12345
GROUP BY TIME N N N N N
TIME PERIOD  Y Y N N N
TIME KEEPING Y Y N N N
MIX & MATCH  Y N N N N
▲REMAINING MEMORY : 23060BYTES

```

## Memory Allocation Program Notes

	<b>FIELD</b>	<b>Notes</b>
1	<b># OF DIGITS IN REPORT TOTALS (8-10)</b>	Determine the maximum size of report totals: 8, 9 or 10 digits.
2	<b># OF DIGITS IN REPORT COUNTERS (6-8)</b>	Your choice assumes two digits to the right of the decimal. For example 6 digits = XXXX.XX or 7 digits = XXXXX.XX.
3	<b># OF PLU</b>	Determine the total # of PLUs, including PLUs by code, by scanning or by keyboard/keyboard level.
4	<b># OF PLU STATUS GROUPS</b>	Determine the maximum number of status groups to which you link PLUs. See "PLU Status Group (PLU Status Link)" in "P-Mode Programming" for more information.
5	<b># OF PRICE LEVELS PER PLU (1-4)</b>	Prices may be assigned at up to four different price levels for each PLU. If you wish to use price levels, you must determine the number of price levels here. If Price levels are set, they are set for all PLUs.
6	<b>PLU REPORT BY PRICE LEVEL</b>	If selected, the PLU report will detail sales at each level, rather than a total and counter for sales at all levels combined.
7	<b># OF EMPLOYEES</b>	Determine the total number of employees and set the maximum use wish to use here. Employees include all who use the register for any purpose, including those using only the time clock feature for clocking in/out.
8	<b># OF TIME ENTRIES PER EMPLOYEE</b>	Determine the maximum number of clock entries that can be stored in the Z1 report. After Z1, only summaries are stored on Z2 reports (or Z3, Z4 or Z5 reports, if implemented.)
9	<b>USE GROUP BY EMPLOYEE</b>	Determine if you wish to report GROUPS by EMPLOYEE. If you choose Y, then you can report up to 30 of the 99 groups for each employee. See "Groups By Employee" on page 206 to select which groups will report for each employee.
10	<b>CHECK TRACKING METHOD</b>	Choose HARD or SOFT. Hard checks store only the check balances; soft check store check detail for the number of lines determined at step 12.


	<b>FIELD</b>	<b>Notes</b>
11	<b># OF TRACKING FILES (0-4)</b>	Select the number of separate tracking files you wish to use. Select "0" for no check tracking, additional files might be used for table tracking, house account tracking, drive through tracking, and/or phone order tracking.
12	<b># OF LINES PER SOFT CHECK</b>	Determine the maximum number of lines that can be stored in each soft check. Note that voided items also use lines in a check.
13	<b># OF LINES PER TRANSACTION</b>	Determine how many lines of receipt print can be buffered for each transaction. If this number is reached during a transaction, the message "BUFFER FULL" will display and the transaction must be finalized. Note: Must be greater than or equal to the number of lines per soft check. Note that voided items also use lines in a check.
14	<b>MAXIMUM # OF CHECKS TRACK 1 TRACK 2 TRACK 3 TRACK 4</b>	Determine the maximum number of checks for each tracking file.
15	<b># OF TIME PERIODS (24/48/96)</b>	Determine the number of periods the time report is segmented into. For example, if you wish hourly reports for 24 hours, choose 24. The actual time for each period can be customized. See "Time Period" in "P-Mode Programming".
16	<b># OF PRODUCT MIX GROUPS</b>	<i>Product Mix Groups</i> can be used to implement a simplified ingredient system for tracking only essential ingredients associated with items (i.e. cups for beverages or number of pieces for chicken menus.) Enter the number of Product Mix items you wish to track here.
17	<b># OF PRODUCT MIX TIME PERIODS</b>	Product mix groups report usage by time period. Determine the number of periods you wish for product mix time reporting. The actual time for each period can be customized. See "Product Mix Group Time Periods" in "P-Mode Programming".
18	<b>PROJECTIONS</b>	The Product Projection report provides a history of each product mix item's sales by day of week. Determine if you wish to use this report.

	<b>FIELD</b>	<b>Notes</b>
19	<b># OF WLU</b>	Enter the total number of WLUs you wish to use here. WLUs are pop-up windows listing PLUs, condiments, and/or functions. See "Window Look Up (WLU)" in "P-Mode Programming" for a complete discussion of WLU applications.
20	<b># OF LINES PER WLU</b>	The maximum number of lines per WLU is 50.
21	<b># OF RECIPE</b>	Enter the maximum number of recipes you wish to use if you are implementing an ingredient inventory system. See "Ingredient Inventory" in "P-Mode Programming" for more information.
22	<b># OF INVENTORY INGREDIENT</b>	Enter the maximum number of inventory ingredients you wish to use if you are implementing an ingredient inventory system. See "Ingredient Inventory" in "P-Mode Programming" for more information.
23	<b># OF LINES FOR ELECT. JOURNAL</b>	If you wish to capture a sales journal in SER-7000 memory, enter the maximum size of the electronic journal here. Also see "E.J. (Electronic Journal) & Detail Printing Options" in "P-Mode Programming" for related options.
24	<b># OF PAID RECALL TRANSACTIONS</b>	Enter the number of preceding transactions (a maximum of 99) that may be viewed by repeatedly pressing the <b>PAID RECALL</b> key.
25	<b># OF KEYSTROKES IN SUPER MACRO</b>	Enter the number of transaction keystrokes, including key position changes, to be recorded in the super macro. When the super macro memory is full, the most recent entries will be added and the oldest discarded. Use the super macro as a troubleshooting tool.
26	<b>STORE BITMAP</b>	If Y, reserves 12,300 bytes of memory regardless of actual bitmap size.
27	<b>EAT-IN BY TIME PERIODS</b>	Options 27-33 enable reports detailing sales Dollars and counts by type of sale for each designated time period.
28	<b>TAKE-OUT BY TIME PERIODS</b>	
29	<b>DRIVE-THRU BY TIME PERIODS</b>	
30	<b>TRACK 1 BY TIME PERIODS</b>	
31	<b>TRACK 2 BY TIME PERIODS</b>	
32	<b>TRACK 3 BY TIME PERIODS</b>	


	<b>FIELD</b>	<b>Notes</b>
<b>33</b>	<b>TRACK 4 BY TIME PERIODS</b>	
<b>34</b>	<b># OF MIX &amp; MATCH</b>	Enter the maximum number of mix and match discount tables that will be used.
<b>35</b>	<b>REPORT SELECTION TABLE</b>	Z2 represents accumulation of Z1 reports; Z3 represents accumulation of Z2 reports, etc. You must select all levels below your highest selected report level. For example, if you select Z4 reporting for a particular report, then you must also select Z1, Z2, and Z3 for that report.

# Keyboard Key Relocation

1. Select **KEYBOARD KEY RELOCATION** from the **S-MODE PROGRAMMING MENU** to display the **KEYBOARD KEY RELOCATION** Screen.

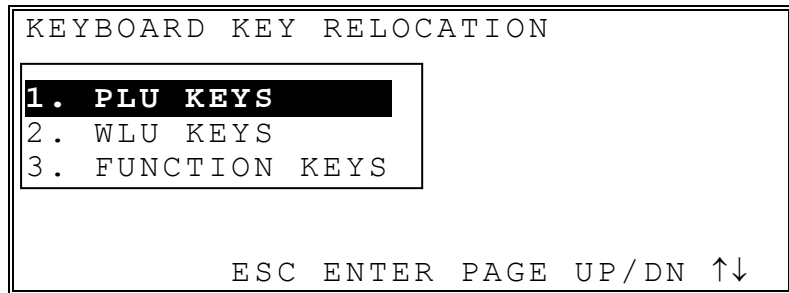

2. Press a numeric digit (1-3) or press the ↑ or ↓ keys to move the cursor to your choice. Then press **ENTER** to indicate whether you wish to program a **PLU**, **WLU** or **FUNCTION** key.

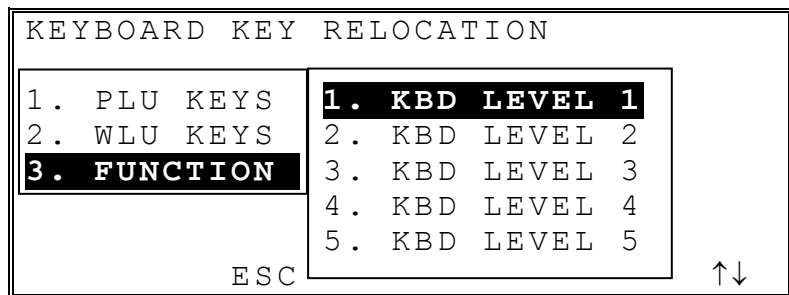

3. A pop up window displays the keyboard level selection. Select the keyboard level you wish to program, press **ENTER**.

## PLU Key Relocation

This process accomplishes two purposes:

- It changes the assignment of a key location to a PLU key. You can change an existing Function key or WLU key into a PLU key by selecting any key on the keyboard in this program.
- It assigns the PLU number that is registered when this PLU key is operated. You can also assign the PLU registered for a key in P-Mode. See “PLU and WLU Key Assignment” in “P-Mode Programming”.

1. Press any key to read and/or change the current assignment; or press **ESC** to exit.

```
PLU KEY RELOCATION PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
```

2. Type the PLU number you wish to be registered (up to 14 digits) when this PLU key is pressed. Press **ENTER** to assign the number, or press **ESC** to exit without changing the current assignment.

```
PLU KEY RELOCATION PROGRAMMING
KBD LEVEL : 1      KEY POS. : 1
CURRENT PLU# 00000000000001
                PLU1
                                ESC ENTER
```

3. The old and new assignments for the key you have just programmed display. Continue to program additional PLU key locations by pressing another key.

```
PLU KEY RELOCATION PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
KEY POSITION 13:
OLD=PLU# 00000000000001
NEW=PLU# 00000000000002
```

## WLU Key Relocation

This process accomplishes two purposes:

- It changes the assignment of a key location to a WLU key. You can change an existing Function key or PLU key into a WLU key by selecting any key on the keyboard in this program.
- It assigns the WLU number that is displayed when this WLU key is operated. The WLU # assignment for a WLU key can also be set in P-Mode. See “PLU and WLU Key Assignment” in “P-Mode Programming”.

1. Press any key to read and/or change the current assignment, or press **ESC** to exit.

```
WLU KEY RELOCATION PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
```

2. Type the WLU number you wish to be displayed when this WLU key is pressed. Press **ENTER** to assign the number, or press **ESC** to exit without changing the current assignment.

```
WLU KEY RELOCATION PROGRAM
KBD LEVEL : 1    KEY POS. : 1
CURRENT WLU# :      01
                KEYCODE#013 ADD CHECK

                                ESC ENTER
```

The current function and descriptor for this key are displayed here.



3. The old and new assignments for the key you have just programmed display. Continue to program additional WLU key locations by pressing another key.

```
WLU KEY RELOCATION PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
KEY POSITION 13:
OLD=KEYCODE#013 ADD CHECK
NEW=WLU# 01 WLU#1
```

4. Press **ESC** to exit. At the prompt:  
EXIT? [Y] press **ENTER**.
5. At the prompt:  
SAVE KEY  
RELOCATION? [Y]  
press **ENTER**, or  
press the **Y/N** key,  
then press **ENTER** to  
exit without saving  
changes.

## Function Key Relocation

This process changes the assignment of any key. You can change an existing WLU key or PLU key into a different function key by selecting any key on the keyboard in this program.

1. Press any key to read and/or change the current assignment, or press **ESC** to exit.

```
FUNCTION KEY RELOCATION PROGRA
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
```

---

**NOTE: You cannot change the assignment of an essential key (i.e. numeric key, Y/N, cursor keys, ENTER, etc.) unless it is first located in a different position on the keyboard.**

---

2. The current assignment displays along with a window from which you can look up function codes. If you do not know the code of the function you wish to assign, press the **PAGE UP** or **PAGE DN** keys until the code you wish to use comes into view, or see "Function Key Program Summary" In P-Mode Programming for a listing of function codes.

```
FUNC. KEY RELOCATION PROGRA
KBD LEVEL : 1   KEY POS. : 112
CUR. ASSIGN : 201 RECD ACCT1
```

---

1	1	4	4
2	3	5	5
3	3	6	6

3. Type a new key code and press **ENTER** or press **ESC** to exit.

4. The old and new assignments for the key you have just programmed display. Continue to program additional Function key locations by pressing another key.

```
FUNCTION KEY RELOCATION PROGRA
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
KEY POSITION 167:
OLD=KEYCODE#021 CHECK
NEW=KEYCODE#026 CURR.CONV1
```

5. Press **ESC** to exit. At the prompt:  
EXIT? [Y] press  
**ENTER**.
6. At the prompt:  
SAVE KEY  
RELOCATION? [Y]  
press **ENTER**, or  
press the **Y/N** key,  
then press **ENTER** to  
exit without saving  
changes.

## Function Key Code List

Code# & Function
1. NUMERIC 1
2. NUMERIC 2
3. NUMERIC 3
4. NUMERIC 4
5. NUMERIC 5
6. NUMERIC 6
7. NUMERIC 7
8. NUMERIC 7
9. NUMERIC 9
10. NUMERIC 0
11. NUMERIC 00
12. NUMERIC 000
13. ADD CHECK
14. BACK SPACE
15. BOLD
16. CANCEL
17. CAPS
18. CASH
19. TIP DECLARE
20.
21. CHECK
22. CHECK CASH
23. CHECK ENDORSE
24. CLEAR
25. CONTINUE
26. CURR. CONV. 1
27. CURR. CONV. 2
28. CURR. CONV. 3
29. CURR. CONV. 4
30. CURR. CONV. 5
31. CURSOR DOWN (↓)
32. CURSOR LEFT (←)
33. CURSOR RIGHT (→)
34. CURSOR UP (↑)
35. DECIMAL (.)
36. DELETE
37. DONE
38. DRIVE THRU
39. EAT-IN
40. EMPLOYEE
41. EMPLOYEE 1
42. EMPLOYEE 2
43. EMPLOYEE 3
44. EMPLOYEE 4
45. EMPLOYEE 5
46. EMPLOYEE 6
47. EMPLOYEE 7
48. EMPLOYEE 8

Code# & Function
49. EMPLOYEE 9
50. EMPLOYEE 10
51. ENTER
52. ERR. CORR
53. FD STMP SHIFT
54. FD STMP SBTL
55. FD STMP TEND
56. GUEST #
57. HOLD
58. INACTIVE (CAN RE-USE)
59. KEYBOARD LEVEL 1
60. KEYBOARD LEVEL 2
61. KEYBOARD LEVEL 3
62. KEYBOARD LEVEL 4
63. KEYBOARD LEVEL 5
64. LIST CHECK 1
65. LIST CHECK 2
66. LIST CHECK 3
67. LIST CHECK 4
68. MACRO OFF
69. MACRO P
70. MACRO PAUSE
71. MACRO R
72. MACRO S
73. MACRO SET
74. MACRO VOID
75. MACRO X
76. MACRO Z
77. MACRO 1
78. MACRO 2
79. MACRO 3
80. MACRO 4
81. MACRO 5
82. MACRO 6
83. MACRO 7
84. MACRO 8
85. MACRO 9
86. MACRO 10
87. MACRO 11
88. MACRO 12
89. MACRO 13
90. MACRO 14
91. MACRO 15
92. MACRO 16
93. MACRO 17
94. MACRO 18
95. MACRO 19
96. MACRO 20
97. MACRO 21

Code# & Function
98. MACRO 22
99. MACRO 23
100. MACRO 24
101. MACRO 25
102. MACRO 26
103. MACRO 27
104. MACRO 28
105. MACRO 29
106. MACRO 30
107. MACRO 31
108. MACRO 32
109. MACRO 33
110. MACRO 34
111. MACRO 35
112. MACRO 36
113. MACRO 37
114. MACRO 38
115. MACRO 39
116. MACRO 40
117. MACRO #
118. MDSE RETURN
119. MISC TEND 1
120. MISC TEND 2
121. MISC TEND 3
122. MISC TEND 4
123. MISC TEND 5
124. MISC TEND 6
125. MISC TEND 7
126. MISC TEND 8
127. MISC TEND 9
128. MISC TEND 10
129. MISC TEND 11
130. MISC TEND 12
131. MISC TEND 13
132. MISC TEND 14
133. MISC TEND 15
134. MISC TEND 16
135. MISC TEND #
136. MODIFIER 1
137. MODIFIER 2
138. MODIFIER 3
139. MODIFIER 4
140. MODIFIER 5
141. MODIFIER 6
142. MODIFIER 7
143. MODIFIER 8
144. MODIFIER 9
145. MODIFIER 10
146. NEXT RECORD

Code# & Function
147. #NOSALE
148. P/BAL
149. PAGEDOWN
150. PAGEUP
151. PAIDOUT1
152. PAIDOUT2
153. PAIDOUT3
154. PAIDOUT4
155. PAIDOUT5
156. PAIDRECALL
157. % 1
158. % 2
159. % 3
160. % 4
161. % 5
162. % 6
163. % 7
164. % 8
165. % 9
166. % 10
167. PLU
168. PREV.RECORD
169. PRICEINQ
170. PRICELVL1
171. PRICELVL2
172. PRICELVL3
173. PRICELVL4
174. PRICELVL5
175. PRICELVL6
176. PRICELVL7
177. PRICELVL8
178. PRICELVL9
179. PRICELVL10
180. PRICELVL11
181. PRICELVL12
182. PRICELVL13
183. PRICELVL14

Code# & Function
184. PRICELVL15
185. PRICELVL16
186. PRICELVL17
187. PRICELVL18
188. PRICELVL19
189. PRICELVL20
190. PRINT
191. PRINT CHECK
192. PRINT HOLD
193. PROMO
194. PRINT SCREEN
195. QUIT
196. RECEIPT ON/OFF
197. RECALL CHECK 1
198. RECALL CHECK 2
199. RECALL CHECK 3
200. RECALL CHECK 4
201. RECD ACCT 1
202. RECD ACCT 2
203. RECD ACCT 3
204. RECD ACCT 4
205. RECD ACCT 5
206. RECEIPT
207. REPEAT
208. SCALE
209. SEAT#
210. SHIFT
211. SPLIT ITEM
212. SPLIT PAYMENT
213. STOCK INQ
214. STORE CHECK 1
215. STORE CHECK 2
216. STORE CHECK 3
217. STORE CHECK 4
218. SUBTOTAL
219. TABLE# 1
220. TABLE# 2

Code# & Function
221. TABLE#3
222. TABLE#4
223. TAKE-OUT
224. TAXEXEMPT
225. TAXSHIFT 1
226. TAXSHIFT 2
227. TAXSHIFT 3
228. TAXSHIFT 4
229. TAXSHIFT 5
230. TAXSHIFT 6
231. TIME IN/OUT
232. TIP 1
233. TIP 2
234. TIP 3
235. TRANSCHK1
236. TRANSCHK2
237. TRANSCHK3
238. TRANSCHK4
239. TRAY SUBTOTAL
240. VALIDATE
241. VOID ITEM
242. WASTE
243. WLU
244. X/TIME
245. YES/NO
246. PARK ORDER
247. SERVE ORDER
248. KPROUTING
249. SPLIT CHECK
250. ALPHA TEXT
251. NOT FOUND PLU
252. NEXT DOLLAR
253. PRINT ALL

# System Options

1. Select **SYSTEM OPTIONS** from the **S-MODE PROGRAMMING MENU** to display the **S-MODE SYSTEM OPTIONS** Screen.
2. Press the **↑↓←→** keys to select a field to edit.
3. Type a new value and press **ENTER** or press the **↓** key to accept the entry and advance to the next field.
4. Press **PAGE DN** to view the second page of **S-MODE SYSTEM OPTIONS**.
5. Press **PAGE DN** to view the last page of **S-MODE SYSTEM OPTIONS**.
6. Press **ESC** to exit.

```

S-MODE SYSTEM OPTIONS
1. REGISTER # (01-32)          01
2. STORE #                    000000
3. IRC : FROM REGISTER #      00
4. IRC : TO REGISTER #        00
5. IRC # OF RETRIES           00
6. PRT/DISP DECIMAL POSITION: 2
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

S-MODE SYSTEM OPTIONS
7. PASSWORD (0000=NONE) : X = 0000
                           Z1=0000
                           Z2=0000
                           Z3=0000
                           Z4=0000
                           Z5=0000
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

S-MODE SYSTEM OPTIONS
8. REG# HOLDS CHECK TRACK DATA
   CHECK#1                    00
   CHECK#2                     00
   CHECK#3                     00
   CHECK#4                     00
9. REG HOLDS TIME IN/OUT DATA 00
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

S-MODE SYSTEM OPTIONS
10. REG HOLDS BACKUP CHK TRK DATA
    CHECK#1                    00
    CHECK#2                     00
    CHECK#3                     00
    CHECK#4                     00
11. REG HOLDS KP GLOBAL ORDER# 00
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

S-MODE SYSTEM OPTIONS
12.SEND PLU DESC WHEN POLLED      Y
13.DISP PRINTER ERR WHEN POLL    Y
14.REG HOLDS DATATRAN              00
15.MSR IS CONNECTED TO DATATRAN  ▶
16.PINPAN IS CONN. TO DATATRAN  ▶

▲  ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

**System Option Program Notes (S-Mode)**

FIELD	Notes
<b>PRINT/DISPLAY DECIMAL POSITION</b>	Select 0, 1, 2 or 3 from the pop-up window. The default value is 2 (XX.XX).
<b>REG# HOLDS KP GLOBAL ORDER#</b>	If global order number is implemented (see P-Mode System Options) then the register indicated contains the global number system.
<b>SEND PLU DESC WHEN POLLED</b>	If Y, the PLU descriptor will be sent when polling. (Increases polling time.)
<b>DISP PRINTER ERR WHEN POLL</b>	If N, if the printer runs out of paper when printing polled reports, the paper out condition will not interrupt polling.
<b>REG HOLDS DATATRAN</b>	Enter the number of the terminal in the network where the DataTran is connected.
<b>MSR IS CONNECTED TO</b>	Set MSR CONNECTED to DATATRAN if the MSR is connected to the DATATRAN; PDC if the MSR is connected to the PDC; REGISTER if the MSR is connected to the register (internal).
<b>PINPAN IS CONN. TO</b>	Select DATATRAN or PDC.

---

## Printer Driver Selections

This program allows you to change the commands for specific printers, or to set up a new printer by using generic (1-5) settings.

1. Select **PRINTER DRIVER SELECTIONS** from the **S-MODE PROGRAMMING MENU** to display the **PRINTER DRIVER SELECTIONS** screen.

PRINTER DRIVER SELECTIONS			
TYPE		START	CANCEL
<b>ELLIX</b>	INIT.	IB40	
ELLIX	COMPRESS		
SAM SR	ED/REV		
SAM SR	EXPANDED	1B2121	IB2101
▼			

2. The drivers for the selected printer display. Press the **↑** or **↓** keys to select the printer for which you wish to view or edit commands. If necessary, press **PAGE DN** to view additional printers.



## Changing Printer Commands

1. With options for a printer in view, press the **ENTER** key to move the active cursor to the first command field in the start column.

PRINTER DRIVER SELECTIONS			
TYPE	ELLIX 10	START	CANCEL
ELLIX	INIT.	IB40	
ELLIX	COMPRESS		
SAM SR	RED/REV		
SAM SR	EXPANDED	1B2121	IB2101
▼			

2. Press the **↑↓←→** keys to select the field you wish to edit. Note that there are three pages of options for each printer. Type new command information and press **ENTER**.

PRINTER DRIVER SELECTIONS			
TYPE	ELLIX 10	START	CANCEL
ELLIX	BOLD		
ELLIX	UNDERLIN		
SAM SR	LONGFEED	1B64	
SAM SR	FULL CUT	1B69	
◆			

3. Press **ESC** to return the active cursor to the **PRINTER TYPE**. Press **ESC** again to return to the **S-MODE PROGRAMMING MENU**.

PRINTER DRIVER SELECTIONS			
TYPE	ELLIX 10	START	CANCEL
ELLIX	PAR. CUT	IB69	
ELLIX	STANDARD		
SAM SR	LOGO		
SAM SR			
▲			

## Serial Port Device Selections

Use the Serial Port Device Selections program to define the type of device that is attached to each serial port.

1. Select SERIAL PORT DEVICE SELECTIONS from the S-MODE PROGRAMMING MENU .
2. Press the ↑ or ↓ keys to select the port you wish to view or edit.
3. To change a port selection, press ENTER to move the active cursor to the device selection column.
4. Press the ↑ or ↓ keys to select a new device, press ENTER.
5. If there are multiples of the selected device (i.e. many types of printers) the options will display.
6. Press the ↑ or ↓ keys to select a new type and press ENTER to accept the new selection.
7. Press ESC to return to the SERIAL PORT DEVICE SELECTIONS screen with port selection active.
8. Press ESC again to return to the S-MODE PROGRAMMING MENU.

```
SERIAL PORT DEVICE SELECTIONS
PORT      DEVICE
-----
PORT#1    DISABLE
PORT#2    DISABLE
PORT#3    DISABLE
PORT#4    DISABLE
          ESC ENTER PAGE UP/DN ↑↓
```

```
SERIAL PORT DEVICE SELECTIONS
PORT      DEVICE
-----
PORT#1    DISABLE
PORT#2    PRINTER
PORT#3    VIDEO
PORT#4    POLLING
          ESC ENTER PAGE UP/DN ↑↓
```

```
SERIAL PORT DEVICE SELECTIONS
PORT      DEVICE
-----
PORT#1    SCALE
PORT#2    SCANNER
PORT#3    EFT TERM.
PORT#4    CHANGER
          ESC ENTER PAGE UP/DN ↑↓
```

```
SERIAL PORT DEVICE SELECTIONS
PORT      DEVICE      PRINTER TYPE
-----
PORT#1    DISABLE     ELLIX 10
PORT#2    PRINTER     ELLIX 20
PORT#3    VIDEO        SAM SRP270
PORT#4    POLLING      SAM SRP350
          ESC ENTER PAGE UP/DN ↑↓
```

## Define Serial Port Parameters

Choose Define Serial Port Parameters to set the baud rate, parity, and other options for each serial port.

1. Select **SERIAL PORT DEVICE SELECTIONS** from the S-MODE PROGRAMMING MENU to display the SERIAL PORT DEVICE SELECTIONS screen. The current selections for PORT#1 display.
2. Press the **PAGE UP** or **PAGE DN** keys to select the port you wish to view or edit.
3. Press the **↑** or **↓** keys to move the active cursor to the option you wish to change.
4. Type a new value for a field and press **ENTER**, or if an arrow ( **▸** ) displays next to the current selection, press **ENTER** to display a list of choices.
5. Press **ESC** to return to the S-MODE PROGRAMMING MENU.

```
SERIAL PORT#1 PARAMETER SET
PORT DESCRIPTION      PORT1
BAUD RATE              009600 ▸
PARITY                 NONE ▸
DATA BITS              8 ▸
STOP BITS              1 ▸
RETRYS                 00
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
SERIAL PORT#1 PARAMETER SET
FEED LINES BEFORE PRINTING 00
FEED LINES AFTER PRINTING  07
PRINT BITMAP?               N
LOGO SIZE (0-3)             0
LINES ON "HARD" SLIP        00
CUTTING AFTER PRINTING?    Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
SERIAL PORT#1 PARAMETER SET
IF PRINTER, KICK THE DRAWER? N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

### **Serial Port Parameters Program Notes**

<b>FIELD</b>	<b>Notes</b>
<b>BAUD RATE</b>	Select 2400, 9600, 19200, 28800, 33600, 56000 or OTHER from the pop-up window. (9600 is default.) If you select OTHER, you may enter your own value.
<b>PARITY</b>	Select NONE, EVEN, or ODD from the pop-up window; NONE is default.
<b>DATA BITS</b>	Select 8 or 7 from the pop-up window; 8 is default.
<b>STOP BITS</b>	Select 1 or 2 from the pop-up window; 1 is default.
<b>LOGO SIZE (0-3)</b>	Controls the size of bitmap image that may be printed on the guest check.
<b>LINES ON "HARD" SLIP</b>	If hard check system is used, printing will stop on the guest check after the number of print lines indicated here is printed. Use this option to prevent over printing when the bottom of the guest check is used as a tear off receipt.
<b>CUTTING AFTER PRINTING?</b>	Enables auto cutter if applicable.
<b>IF PRINTER, KICK THE DRAWER?</b>	Allows printer to send the drawer kick signal.

---

## S-Mode Program Scan Printing

This function allows you to print copies of the register's S-Mode programming.

1. Select S-MODE PROGRAM SCAN PRINTING from the S-MODE PROGRAMMING MENU to display the S-MODE PROGRAM SCAN PRINTING screen.

S-MODE PROGRAM SCAN PRINTING

```
1 . MEMORY ALLOCATION
2 . SYSTEM OPTIONS
3 . PRINTER DRIVER SELECTIONS
4 . SERIAL PORT DEVICE SELECT
5 . DEF SERIAL PORT PARAMETERS
```

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the  $\uparrow$  or  $\downarrow$  keys to move the cursor to your choice and press **ENTER**.

3. After selection the appropriate report is printed.

---

## System Password

The system password allows service access to all of the functions of the *SER-7000*. For example, use the system password:

- If you are servicing a users system and you do not know an employee code that allow you to access necessary functions.
- If authority level programming prohibits you from accessing functions you need to access in order to complete your tasks.

Sign the system password to allow access to all *SER-7000* functions (except register mode operations.) After you have completed your session, the system password must be signed off through normal sign off procedures before another employee may be signed on.

---

**If you wish to block system password access, program 0000 in the system password field.**

---

1. Select **SYSTEM PASSWORD** from the **S-MODE MENU** to set the system password.
2. Enter a 4-digit password, if desired.
3. Press **ENTER** to return to the **S-MODE MENU**.

```
SYSTEM PASSWORD
SYSTEM PASSWORD (0000=NONE) 9999
ESC ENTER
```

---

## Super Macro Scan

The super macro records transaction keystrokes, including key position changes. The size of the super macro, in keystrokes, is set in memory allocation (see "Memory Allocation" on page 34.) When the super macro memory is full, the most recent entries will be added and the oldest discarded. The super macro is a troubleshooting tool.

Use this program to view or print the contents of super macro memory.

1. Select **SUPER MACRO SCAN** from the **S-MODE MENU** to view or print the super macro.

```
SUPER MACRO SCAN
```

```
1. SUPER MACRO DISPLAY
2. SUPER MACRO PRINTING
```

2. Choose an item from the menu.

```
ESC ENTER PAGE UP/DN ↑↓
```

3. If **SUPER MACRO PRINTING** is selected the macro contents will print.

If **SUPER MACRO DISPLAY** is selected, the contents will display as in the example on the right.

```
SUPER MACRO DISPLAY
```

```
#          KEY
-----  -
0001  MACRO S
0002  NUMERIC 1
0003  NUMERIC 1
0004  ENTER
```

```
▼
```

```
ESC PAGE UP/DN
```

4. Press **PAGE UP** or **PAGE DN** to view the entire contents. Press **ESC** to exit to the **SUPER MACRO SCAN** screen.

---

## ROM File Download

Choose ROM FILE DOWNLOAD to download the EPROM to all satellite registers in the IRC system. *All other terminals must be in the ROM download mode.*

---

**Warning: This procedure will clear all totals, counters and programs from the satellite registers.**

---

---

## Load Default Messages

1. Choose LOAD DEFAULT MESSAGES from the S-MODE PROGRAMMING MENU to reload the default error messages and system descriptors.
2. At the message ARE YOU SURE?, press the **YES/NO** once to select Y, and then press **ENTER**. The default messages are loaded.

---

## Check Unlock

If the register where a check is being posted fails before the check is finalized, the check cannot be accessed at another register until a check unlock procedure is done.

1. Choose CHECK UNLOCK. The CHECK UNLOCK screen displays.
2. Press the **↑** or **↓** keys to move the cursor to the port to which the printer is attached, then press **ENTER**.

CHECK UNLOCK
<b>1 . TRACK# 1</b>
2 . TRACK# 2
3 . TRACK# 3
4 . TRACK# 4
ESC ENTER PAGE UP/DN ↑↓



# P-Mode Programming

## P-Mode Programming Menu

- 1. Turn the key to the PGM position.
- 2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the **↑** or **↓** keys to move the cursor to your choice and press **ENTER**.

**NOTE: There are three pages on the P-MODE programming menu.**

```
P-MODE PROGRAMMING MENU
1. PLU
2. PLU STATUS GROUP
3. GROUP
4. FUNCTION KEY
5. SYSTEM OPTION
6. TAXES
▼ ENTER PAGE UP/DN ↑↓
```

```
P-MODE PROGRAMMING MENU
7. MESSAGES
8. WINDOW LOOK UP (WLU)
9. TIME PERIOD
10. EMPLOYEE
11. AUTHORITY LEVEL
12. PRINTER TABLES & KV ROUTING
◆ ENTER PAGE UP/DN ↑↓
```

```
P-MODE PROGRAMMING MENU
13. INGREDIENT INVENTORY
14. TIME ACTIVATED FUNCTIONS
15. PRODUCT MIX GROUPS
16. CUSTOM REPORT
17. STRING REPORT
18. PLU STOCK
◆ ENTER PAGE UP/DN ↑↓
```

```
P-MODE PROGRAMMING MENU
19. PLU MINIMUM STOCK
20. COPY PROGRAM
21. PROGRAM FILE DOWNLOAD
22. P-MODE PROGRAM SCAN PRINTING
23. NON-PLU CODE
24. PLU & WLU KEY RELOCATION
◆ ENTER PAGE UP/DN ↑↓
```


```
P-MODE PROGRAMMING MENU
24. PLU & WLU KEY RELOCATION
25. BITMAP FILE DOWNLOAD
26. GROUPS BY EMPLOYEE
27. EMPLOYEE CARD READ FORMAT
28. AGE VERIFICATION
29. MIX & MATCH TABLE
▲ ENTER PAGE UP/DN ↑↓
```

---

## PLU Programming

The maximum number of PLUs available is determined in memory allocation. (See "Memory Allocation" in "S-Mode Programming".) Each PLU can be assigned a code number up to 14 digits in length.

1. Select PLU from the P-MODE PROGRAMMING MENU to display the PLU PROGRAMMING screen.
2. Press a numeric digit (1-2) or press the ↑ or ↓ keys to move the cursor to ADD & CHANGE or DELETE, and then press **ENTER**.

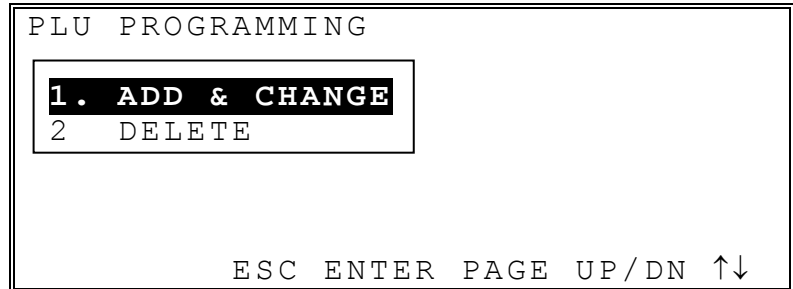

## Add & Change

1. Select **ADD & CHANGE** to access an existing PLU or program a new PLU.
2. Select the PLU to be programmed by entering the number or pressing the PLU key on the keyboard.

```
PLU#00000000000000 PROGRAMMING
```

- PRESS PLU TO BE PROGRAMMED
- ENTER PLU NUMBER - [ENTER]
- ENTER PLU NUMBER - [PLU#]
- PRESS WIL WHERE THE PLU IS LOCATED AND SELECT APPROPRIATE PLU

3. Press the **↑↓←→** keys to select the field you wish to program.
4. Type a new value and press **ENTER** or press cursor down (**↓**) to accept the entry and advance to the next field.

```
PLU#000000000000001 PGM.
DESCRIPTOR:      PLU#1
GROUP LINK #1           01
PLU STATUS LINK#       01
PIECE COUNT      000    RECIPE#  00
ACTIVATE WLU#         00
INACTIVE                       N
▼LU# ESC Y/N ENT PAGE UP/DN ↑↓→←
```

5. Select another PLU to program by entering the PLU number and pressing **ENTER**, or by pressing **PAGE UP** or **PAGE DN** until the PLU you wish to program is displayed.
6. Press **ESC** to return to the PLU# PROGRAMMING screen.

```
PLU#000000000000001 PGM.
PRESET                                     Y
ALLOW PRESET/HALO OVERRIDE?             N
PRC/HALO  000000.00  PRC LVL1  01
PRC/HALO  000000.00  PRC LVL2  02
PRC/HALO  000000.00  PRC LVL3  03
PRC/HALO  000000.00  PRC LVL4  04
▲LU# ESC Y/N ENT PAGE UP/DN ↑↓→←
```

## PLU Program Notes

FIELD	Notes
<b>DESCRIPTOR</b>	<p>Enter a descriptor up to 16 characters in length. Note that the method you use to enter the descriptor depends upon your selection for General Function Option #12 (see “General Function Options” on page 101.)</p> <ul style="list-style-type: none"> <li>• The default method is by using the Alpha Keyboard Overlay. Type the descriptor using the typewriter-style keyboard on the overlay.</li> <li>• If Alpha Code Entry is selected as an alternative, type the codes representing each character, see “Entering Alpha Characters” in the “Getting Started” chapter for a list of alpha codes.</li> </ul>
<b>GROUP LINK #1</b>	<p>Enter the primary reporting group for the GROUPS and PLU BY GROUP reports.</p> <ul style="list-style-type: none"> <li>• There are 99 groups available for reporting.</li> <li>• If you wish to assign a PLU to more than one reporting group, assign the PLU to a PLU STATUS LINK# that contains the necessary assignments for GROUP LINK #2 and GROUP LINK #3. (See “PLU Status Group” on page 36.)</li> </ul>
<b>PLU STATUS LINK #</b>	<p>The status link group contains the remainder of the configurable options for this PLU. See "PLU Status Group" on page 36.</p>
<b>PIECE COUNT</b>	<p>Enter a value in this field if you wish to use Product Mix and Product Projection reporting. The number of units entered here will be reflected in product mix reporting.</p> <ul style="list-style-type: none"> <li>• See “PLU Status Group” on page 36 to select product mix items for this PLU item.</li> <li>• See “Product Mix Groups” on page 181 to set up product mix items and time periods.</li> </ul>

FIELD	Notes
<b>RECIPE#</b>	<p>A <i>menu-explosion type inventory system</i> is set up when PLUs are assigned to a recipe number. Note the following related programs and activities:</p> <ul style="list-style-type: none"> <li>• See “Ingredient Inventory” on page 38 to maintain the ingredient list with unit costs and the recipe tables.</li> <li>• See “Edit Inventory Item” in the “X-Mode Procedures” chapter of the <i>SER-7000 Operation Manual</i> to manage receipts, transfers and waste as well as view actual inventory and unit cost.</li> <li>• Use report # 41, the Inventory Report to report the status of inventory items.</li> <li>• Use report #43, the Food Cost Report, to report the cost of PLU item using the information from the assigned recipe.</li> </ul>
<b>ACTIVATE WLU#</b>	<p>Enter the number of a WLU that you wish to activate immediately after this PLU is registered. For example, if this item requires a condiment selection, enter the number of the WLU that contains a list of condiments available for this item. See “WLU Programming” on page 148 to program the items that are listed in each WLU.</p>
<b>PRICE/HALO</b>	<p>Enter the preset price if the item is preset. Enter the HALO (High Amount Lock Out) if the item is not preset, or if PRESET/HALO OVERRIDE is allowed.</p>
<b>PRICE LEVEL #1-#4</b>	<p>Prices may be assigned at up to four different price levels for each item. Enter the number (1-20) of the PRICE LVL key that you wish to register the associated PRICE/HALO. If you are not using price levels, enter the price or HALO in the first price field, adjacent to the PRICE LEVEL#1? field, and leave the default value of “01” in the PRICE LEVEL #1? field.</p>

## Delete PLUs

1. From the PLU PROGRAMMING SCREEN, select DELETE.
2. Press a numeric digit (1-2) or press the ↑ or ↓ keys to move the cursor to PLU DELETE ONE BY ONE or PLU DELETE BY RANGE, then press ENTER.

```
PLU PROGRAMMING
1. ADD & CHANGE
1. PLU DELETE ONE BY ONE
2. PLU DELET BY RANGE
ESC ENTER PAGE UP/DN ↑↓
```

## PLU Delete One By One

1. Type the PLU number to be deleted, press ENTER.
2. The message PRESS ENTER TO DELETE displays. Press ENTER again, or press ESC to exit without deleting the PLU.
3. Continue from step 2 if there are additional PLUs to delete, or press ESC to return to the PLU PROGRAMMING screen.

```
PLU DELETE PLU# 00000000000000
DESCRIPTOR :
PLU# ESC ENTER INDIVIDUAL PLU
```

### ***PLU Delete by Range***

1. Enter the beginning number of the range to be deleted in the FROM PLU # field, press **ENTER**.
2. Enter the ending number of the range to be deleted in the TO PLU # field, press **ENTER**.

PLU PROGRAMMING	
<b>1. ADD &amp; CHANGE</b>	
FROM PLU #	<b>00000000000000</b>
TO PLU #	00000000000000
ESC ENTER INDIVIDUAL PLU	



## PLU Status Group (PLU Status Link)

PLU Status Groups allow memory to be used more efficiently. In most applications, large groups of PLUs are set with many identical options, while the PLU number, descriptor and price are unique. On the PLU Programming Screen (see "PLU" on page 61) each PLU is assigned its' descriptor, price or prices and a few unique options. The remainder of the PLU options are determined by linking the individual PLU to a PLU Status Group. The PLU Status Group contains all of the detailed programming option selections that might be assigned to an individual PLU. Separate PLU Status Groups can be set up to accommodate the needs of groups of PLUs. Like PLUs, the total number of PLU Status Groups is determined by memory allocation.

The maximum number of PLU Status Groups available (up to 9999) is determined in memory allocation. (See "Memory Allocation" in "S-Mode Programming".)

1. Select PLU STATUS GROUP from the P-MODE PROGRAMMING MENU to display the PLU STATUS GROUP# PROGRAMMING screen. Data for the first status group displays.

```

PLU STATUS GROUP#  1 PROGRAM
DESCRIPTOR :      PLU STS 1
                  1 2 3 4 5 6
1. TAXABLE BY RATES  N N N N N N
2. GROUP LINK #2    00
3. GROUP LINK #3    00
4. IS PLU INACTIVE  N
▼ ESC Y/N ENT PAGE UP/DN ↑↓→←
  
```

2. Select a PLU status group in one of two ways:

Type a PLU Status Group number and press **ENTER**.

```

PLU STATUS GROUP#  23 PROGRAM
DESCRIPTOR :      HOT FOOD GROUP
                  1 2 3 4 5 6
1. TAXABLE BY RATES  N N N N N N
2. GROUP LINK #2    00
3. GROUP LINK #3    00
4. IS PLU INACTIVE  N
▼ ESC Y/N ENT PAGE UP/DN ↑↓→←
  
```

Or, press **PAGE UP** or **PAGE DN** keys to scroll through the PLU STATUS GROUP file sequentially.

```

PLU STATUS GROUP#  23 PROGRAM
5. IS PLU A CONDIMENT  N
6. COMPULSORY CONDIMENT ENTRY  N
7. IS PLU SINGLE ITEM  N
8. IS PLU NEGATIVE    N
9. IS PLU HASH        N
10. DOES PLU USE GALLONAGE  N
◆ ESC Y/N ENT PAGE UP/DN ↑↓→←
  
```

4. Press **PAGE DN** to view the additional pages of PLU Status Group options, or Press the **↑** or **↓** to locate the option you wish to set.

```

PLU STATUS GROUP# 23PROGRAM
11.IS PLU FOOD STAMP ELIGIBLE N
12.IS PLU MEMO N
13.IS PLU SCALEABLE N
14.AUTO SCALE ON THIS PLU N
15.AUTO TARE# (0-20) 00
16.STOCK PLU N
◆ ESC Y/N ENT PAGE UP/DN ↑↓→←

```

```

PLU STATUS GROUP# 23PROGRAM
17.LINK PLU# 00000000000000
18.PRODUCT MIX #1 00
19.PRODUCT MIX #2 00
20.NEGATIVE INVENTORY N
21.ALLOW PROMO Y
22.ALLOW WASTE Y
◆ ESC Y/N ENT PAGE UP/DN ↑↓→←

```

```

PLU STATUS GROUP# 23PROGRAM
23.ALLOW DISCOUNT? Y
24.ALLOW SURCHARGE? Y
25.COMPULSORY VALIDATION N
26.IS NON-ADD# COMPULSORY? N
27.PRINT ON KV? N
28.KITCHEN VIDEO GROUP # 00
◆ ESC Y/N ENT PAGE UP/DN ↑↓→←

```

```

PLU STATUS GROUP# 23PROGRAM
29.COLOR TO DISP ON KV(0-31) 00
30.PRINT ON KP? N
123456789
31.PRINT ON KP GROUP# NNNNNNNNN
32.PRINT RED ON KP N
33.PRINT RED ON RECEIPT N
◆ ESC Y/N ENT PAGE UP/DN ↑↓→←

```

```

PLU STATUS GROUP# 23PROGRAM
34.PRINT ON RECEIPT Y
35.PRINT ON JOURNAL Y
36.DISPLAY ON REGISTER SCREEN Y
37.PRINT ON GUEST CHECKS Y
38.PRT PRICE ON GUEST CHECKS Y
39.PRT PRICE ON RECEIPT/DETAIL Y
◆ ESC Y/N ENT PAGE UP/DN ↑↓→←

```

5. Press **PAGE DN** to view the last page of PLU Status Group options, or Press the **↑** or **↓** keys to locate the option you wish to set.

```

PLU STATUS GROUP# 23PROGRAM
40.AUTO GRILL? N
41.AUTO GRILL KP GROUP # 0
42.ELIG. FOR CANADI-DONUT LAW 00
43.AGE VERIFICATION (0-5) 0
44.MIX & MATCH TABLE # 0
45.IS PLU GIFT CARD NONE ▶
▲ ESC Y/N ENT PAGE UP/DN ↑↓→←

```

6. Select another PLU Status Group to program or press **ESC** to save changes and return to the P-MODE PROGRAMMING MENU screen.

**PLU Status Group Program Notes**

#	FIELD	Notes
1	<b>TAXABLE BY RATES (1-6)</b>	Select Y or N for each tax rate to determine if the appropriate tax(es) is automatically calculated when the item is sold.
2 3	<b>GROUP LINK #2</b> <b>GROUP LINK #3</b>	If you wish to direct PLU sales to more than one group, enter the second or third reporting group for the GROUPS and PLU BY GROUP reports here. Note the following related programs: <ul style="list-style-type: none"> <li>• See “PLU Programming” on page 61 to program the first reporting group for each PLU.</li> <li>• See “Group” on page 74 to determine whether each individual group adds to the group total on the financial report.</li> </ul>
4	<b>IS PLU INACTIVE</b>	Select Y if you wish PLUs reported to this group to be inactive (cannot be registered).
5	<b>IS PLU A CONDIMENT</b>	Condiments PLUs are different from non-condiment PLUs in the manner they display and print during operations. Non-condiment PLUs are used for “main” items. Condiment items are indented and displayed/printed below a main item so that condiments or cooking instructions are easily understood for each “main” item.
6	<b>COMPULSORY CONDIMENT ENTRY</b>	If Y, then a condiment entry must follow the registration of a PLU.

#	FIELD	Notes
7	<b>IS PLU SINGLE ITEM</b>	The transaction is finalized automatically when a single item PLU registers as the first item in a sale.
8	<b>IS PLU NEGATIVE</b>	Negative PLUs subtract from a sale, rather than add to a sale.
9	<b>IS PLU HASH</b>	HASH PLUs do not affect certain totals in reports. See General Function Option #7 to determine specifically which totals are impacted by HASH PLUs.
10	<b>DOES PLU USE GALLONAGE</b>	Gallonage PLUs must be set as open PLUs. The PRICE/HALO must be set as the price per gallon. (The price is set at three decimal places, however the PLU programming screen will always display in a two digit decimal format. For example if a PLU is gallonage, a price of \$1.299 per gallon would be set as "12.99".) Gallonage PLUs will report the gallons sold in the activity counter on the PLU report by dividing the PLU total by the price per gallon.
11	<b>IS PLU FOOD STAMP ELIGIBLE</b>	A separate itemizer keeps a running total of food stamp eligible items in each transaction. Then if the sale is paid by food stamps, the food stamp eligible subtotal can be recalled.
12	<b>IS PLU MEMO</b>	Use Memo PLUs to display a descriptor on the screen or print a descriptor at a printer. Memo PLUs do not add to any total in the <i>SER-7000</i> .
13	<b>IS PLU SCALEABLE</b>	Choose Y if you wish to multiply items reporting to this group by a weight from a scale connected to the register. Scale weights are entered by pressing the SCALE key.
14	<b>AUTO SCALE ON THIS PLU</b>	If Y, registrations of PLUs linked to this group will automatically multiply by the weight placed upon a scale connected to the register.
15	<b>AUTO TARE# (0-20)</b>	If Y, the tare # indicated here will automatically subtract from the weight from the scale. See "Scale" on page 95 to preset tare weights.

#	FIELD	Notes
16	<b>STOCK PLU</b>	Choose Y if you wish to track PLU stock, where each whole unit PLU activity subtracts a value of "1" from the stock counter. (Note that if multiplication or decimal multiplication is used when the PLU is registered, the resulting quantity of activity will subtract from the stock counter. Stock is maintained in increments to the second decimal position, i.e. "X.XX".) See "PLU Stock" on page 189 for more information.
17	<b>LINK PLU#</b>	If you wish the registration of the PLU assigned to this PLU status group to automatically cause the registration of another PLU, enter the number of the PLU you wish to register automatically here.
18 19	<b>PRODUCT MIX #1</b> <b>PRODUCT MIX #2</b>	If you are using product mix reporting, enter the number of the product mix item or items here. Note the following related programs and activities: <ul style="list-style-type: none"> <li>• See "Product Mix Groups" on page 181 to set up product mix items.</li> <li>• See "PLU Programming" on page 61 to enter the number of pieces to be counted to the product mix item with each activity.</li> <li>• See Report #35, Product Mix Report to report product mix item usage.</li> <li>• See Report #36, Product Projections for a history of each item's sales by day of week.</li> </ul>
20	<b>NEGATIVE INVENTORY</b>	Use this option only if you are using the recipe and ingredient inventory system and you are using PLUs to designate subtractions from a menu item. For example, a PLU may be designated "No Cheese" by designating a PLU to print this instruction. By assigning the "No Cheese" PLU to a PLU Status Group with this setting at Y (yes), the inventory records for cheese will be maintained correctly.
21	<b>ALLOW PROMO</b>	Choose Y if you wish to allow the PROMO operation, i.e. buy two, get one free. PROMO activity will remove the item cost from the sale, but the count will include the promo item.

#	FIELD	Notes
22	<b>ALLOW WASTE</b>	If Y, the WASTE function is allowed on PLUs reporting to this group.
23	<b>ALLOW DISCOUNT</b>	If Y, the operation of an item discount after registration of a PLU reporting to this group is allowed.
24	<b>ALLOW SURCHARGE</b>	If Y, the operation of an item surcharge after registration of a PLU reporting to this group is allowed.
25	<b>COMPULSORY VALIDATION</b>	If Y, validation must be performed after registration of a PLU reporting to this group before any other register activity is allowed.
26	<b>IS NON-ADD# COMPULSORY?</b>	If Y, a numeric entry must be made into the Non-Add # key before registration of a PLU reporting to this group is allowed
27	<b>PRINT ON KV?</b>	Select Y if PLUs in this group are to be sent to a kitchen video.
28	<b>KITCHEN VIDEO GROUP#</b>	Select the kitchen video group to which PLUs in this group are to be sent. Condiment PLUs with a "0" status here will "follow" the last main item.
29	<b>COLOR TO DISP ON KV (0-31)</b>	The color code set here will control the color or screen format displayed on an optional kitchen video system requisition screen. Color codes vary by KVS system. Refer to the documentation for your video system for specific information.
30	<b>PRINT ON KP?</b>	Select Y if PLUs in this group are to be sent to a kitchen printer.
31	<b>PRINT ON KP GROUP#</b>	Select the kitchen printer group or groups to which PLUs in this group are to be sent.
32	<b>PRINT RED ON KP</b>	Set to Y if you wish PLUs in this group to print in red on the kitchen printer, i.e. condiments might be printed red. Red/black printer must be used.
33	<b>PRINT RED ON RECEIPT</b>	Set to Y if you wish PLUs in this group to print in red on the receipt. Red/black printer must be used.
34	<b>PRINT ON RECEIPT</b>	Must be set to Y for PLUs in this group to print on the receipt.
35	<b>PRINT ON JOURNAL</b>	Must be set to Y for PLUs in this group to print on the journal or collect in the electronic journal.

#	FIELD	Notes
36	<b>DISPLAY ON REGISTER SCREEN</b>	Set to N if you wish the registration of PLUs in this group not to display on the register operator screen.
37	<b>PRINT ON GUEST CHECKS</b>	Must be set to Y for PLUs in this group to print on the guest check.
38	<b>PRT PRICE ON GUEST CHECKS</b>	Prints the descriptor only, rather than descriptor and price on guest checks.
39	<b>PRT PRICE ON RECEIPT/DETAIL</b>	Prints descriptor only, rather than descriptor and price on receipt and detail.
40	<b>AUTO GRILL?</b>	Select Y for this option to send items in this group to the kitchen printer designated in the next field. Items are sent with a one-item delay (at the next item or at subtotal.)
41	<b>AUTO GRILL KP GROUP#</b>	Enter the kitchen printer number for printing of auto grill items.
42	<b>ELIGIBLE FOR CANADI-DONUT LAW</b>	<p>Special Provincial or State sales tax laws might change the taxable status of an item depending upon the quantity sold. Donuts, for example, might be taxable when sold individually at a bakery, but be non-taxable when sold by the dozen.</p> <p>In such a case select Y in this field, and also select Y to the appropriate tax status. Also, set tax option #3 (see "Tax Options" on page 107) with the quantity at which you wish tax to be exempted, for example 12. Registration of PLUs reported to this status group will charge tax until the quantity with the transaction reaches 12. When 12 or more are registered, all will be sold without tax.</p>
43	<b>AGE VERIFICATION (0-5)</b>	Enter 1-5 to set the age category. The operator will be forced to enter a date of birth that indicates an age higher than the age of this category before items assigned to this group can be entered. See "Age Verification" on page 208 to set the minimum age for each of up to 5 categories.
45	<b>IS PLU GIFT CARD</b>	Default is NONE. Select ACTIVATE or ADD if PLUs linked to this group activate or add to an integrated payment gift card program.

---

## Group

Groups are designated to accumulate PLU sales for convenient reporting totals. A PLU can send its' sales information to up to 3 groups. Group Link #1 is set in PLU programming. Group Links #2 and #3 are set in PLU Status Group programming.

This program allows you to set up the groups that PLU sales will report to. There are 99 groups. Here you can program the group descriptor that appears on reports, and you can determine whether that group will add to the total of all groups that appears at the end of the Group report.

1. Select **GROUP** from the P-MODE PROGRAMMING MENU to view the GROUP PROGRAMMING screen.
2. Select the group you wish to program by typing the group number and pressing **ENTER**, or by pressing **PAGE UP** or **PAGE DN** until the appropriate group displays.
3. Enter a descriptor of up to 12 characters in the descriptor field.
4. Select Y or N at the "Do Not add to Group Total?" field. Press **ENTER** to set the field and advance to the next group.
5. Press **ESC** to return to the P-MODE PROGRAMMING MENU.

```
GROUP #01 PROGRAMMING
DESCRIPTOR :          GROUP1
ADD TO GROUP TOTAL?          Y

          ESC Y/N ENT PAGE UP/DN ↑↓→←
```



---

## Function Key

Function key options vary by key. Since function keys may exist on different levels of the keyboard, or they may only be accessed through WLUs, they may be addressed for programming by directly pressing the key, or by entering the function key code number.

In this chapter you will find:

- A "Function Key Program Summary" on page 76 with a list of functions and their codes.
- A sample of program screens for each function key. (Sample screens for keys with only descriptor programming and X-mode security are not shown.)

---

**Note: Although each 12 character function key descriptor is set here, if a function key appears on the financial or employee report, the descriptor that prints on the report may be set separately. See "Report Descriptors" on page 142 to set descriptors for function keys that appear on the financial or employee report. See "Report Printing Options" on page 124 to determine which descriptors are used on reports.**

---

1. Select FUNCTION KEY from the P-Mode menu to display the FUNCTION KEY PROGRAMMING Screen.
2. Select a function to program.
3. The programming option screen for the function will display.

FUNCTION KEY # ████████ PROGRAMMING

- PRESS THE KEY TO BE PROGRAMMED
- ENTER KEY NUMBER - [ENTER]
- PRESS ENTER TO VIEW KEY LIST
- PRESS WLU WHERE THE FUNCTION IS LOCATED AND SELECT THE APPROPRIATE FUNCTION KEY

## Function Key Program Summary

Code# & Function	Programmability
1. NUMERIC 1	Descriptor
2. NUMERIC 2	Descriptor
3. NUMERIC 3	Descriptor
4. NUMERIC 4	Descriptor
5. NUMERIC 5	Descriptor
6. NUMERIC 6	Descriptor
7. NUMERIC 7	Descriptor
8. NUMERIC 7	Descriptor
9. NUMERIC 9	Descriptor
10. NUMERIC 0	Descriptor
11. NUMERIC 00	Descriptor
12. NUMERIC 000	Descriptor
13. ADD CHECK	Descriptor & X-Mode Control
14. BACK SPACE	Descriptor
15. BOLD	Descriptor
16. CANCEL	See program screen on page 79
17. CAPS	Descriptor
18. CASH	See program screen on page 79
19. TIP DECLARE	See program screen on page 98
20.	
21. CHECK	See program screen on page 80
22. CHECK CASH	See program screen on page 81
23. CHECK ENDORSE	See program screen on page 81
24. CLEAR	Descriptor
25. CONTINUE	Descriptor
26. CURR. CONV. 1	See program screen on page 82
27. CURR. CONV. 2	See program screen on page 82
28. CURR. CONV. 3	See program screen on page 82
29. CURR. CONV. 4	See program screen on page 82
30. CURR. CONV. 5	See program screen on page 82
31. CURSOR DOWN (↓)	Descriptor
32. CURSOR LEFT (←)	Descriptor
33. CURSOR RIGHT (→)	Descriptor
34. CURSOR UP (↑)	Descriptor
35. DECIMAL (.)	Descriptor
36. DELETE	Descriptor
37. DONE	Descriptor
38. DRIVE THRU	See program screen on page 83
39. EAT-IN	See program screen on page 83
40. EMPLOYEE	Descriptor
41. EMPLOYEE 1	Descriptor
42. EMPLOYEE 2	Descriptor
43. EMPLOYEE 3	Descriptor
44. EMPLOYEE 4	Descriptor
45. EMPLOYEE 5	Descriptor
46. EMPLOYEE 6	Descriptor
47. EMPLOYEE 7	Descriptor
48. EMPLOYEE 8	Descriptor

Code# & Function	Programmability
49. EMPLOYEE 9	Descriptor
50. EMPLOYEE 10	Descriptor
51. ENTER	Descriptor
52. ERR.CORR	See program screen on page 83
53. FD STMP SHIFT	Descriptor
54. FD STMP SBTL	Descriptor
55. FD STMP TEND	See program screen on page 84
56. GUEST #	See program screen on page 84
57. HOLD	Descriptor & X-Mode Control
58. INACTIVE (CAN RE-USE)	Descriptor
59. KEYBOARD LEVEL 1	Descriptor & X-Mode Control
60. KEYBOARD LEVEL 2	Descriptor & X-Mode Control
61. KEYBOARD LEVEL 3	Descriptor & X-Mode Control
62. KEYBOARD LEVEL 4	Descriptor & X-Mode Control
63. KEYBOARD LEVEL 5	Descriptor & X-Mode Control
64. LIST CHECK 1	Descriptor & X-Mode Control
65. LIST CHECK 2	Descriptor & X-Mode Control
66. LIST CHECK 3	Descriptor & X-Mode Control
67. LIST CHECK 4	Descriptor & X-Mode Control
68. MACRO OFF	Descriptor & X-Mode Control
69. MACROP	Descriptor & X-Mode Control
70. MACRO PAUSE	Descriptor & X-Mode Control
71. MACROR	Descriptor & X-Mode Control
72. MAC5ROS	Descriptor & X-Mode Control
73. MACRO SET	Descriptor & X-Mode Control
74. MACRO VOID	Descriptor & X-Mode Control
75. MACRO X	Descriptor & X-Mode Control
76. MACRO Z	Descriptor & X-Mode Control
77. MACRO 1	See program screen on page 84
78. MACRO 2	See program screen on page 84
79. MACRO 3	See program screen on page 84
80. MACRO 4	See program screen on page 84
81. MACRO 5	See program screen on page 84
82. MACRO 6	See program screen on page 84
83. MACRO 7	See program screen on page 84
84. MACRO 8	See program screen on page 84
85. MACRO 9	See program screen on page 84
86. MACRO 10	See program screen on page 84
87. MACRO 11	See program screen on page 84
88. MACRO 12	See program screen on page 84
89. MACRO 13	See program screen on page 84
90. MACRO 14	See program screen on page 84
91. MACRO 15	See program screen on page 84
92. MACRO 16	See program screen on page 84
93. MACRO 17	See program screen on page 84
94. MACRO 18	See program screen on page 84
95. MACRO 19	See program screen on page 84
96. MACRO 20	See program screen on page 84
97. MACRO 21	See program screen on page 84

Code# & Function	Programmability
98. MACRO 22	See program screen on page 84
99. MACRO 23	See program screen on page 84
100. MACRO 24	See program screen on page 84
101. MACRO 25	See program screen on page 84
102. MACRO 26	See program screen on page 84
103. MACRO 27	See program screen on page 84
104. MACRO 28	See program screen on page 84
105. MACRO 29	See program screen on page 84
106. MACRO 30	See program screen on page 84
107. MACRO 31	See program screen on page 84
108. MACRO 32	See program screen on page 84
109. MACRO 33	See program screen on page 84
110. MACRO 34	See program screen on page 84
111. MACRO 35	See program screen on page 84
112. MACRO 36	See program screen on page 84
113. MACRO 37	See program screen on page 84
114. MACRO 38	See program screen on page 84
115. MACRO 39	See program screen on page 84
116. MACRO 40	See program screen on page 84
117. MACRO#	Descriptor
118. MDSE RETURN	See program screen on page 86
119. MISC TEND 1	See program screen on page 87
120. MISC TEND 2	See program screen on page 87
121. MISC TEND 3	See program screen on page 87
122. MISC TEND 4	See program screen on page 87
123. MISC TEND 5	See program screen on page 87
124. MISC TEND 6	See program screen on page 87
125. MISC TEND 7	See program screen on page 87
126. MISC TEND 8	See program screen on page 87
127. MISC TEND 9	See program screen on page 87
128. MISC TEND 10	See program screen on page 87
129. MISC TEND 11	See program screen on page 87
130. MISC TEND 12	See program screen on page 87
131. MISC TEND 13	See program screen on page 87
132. MISC TEND 14	See program screen on page 87
133. MISC TEND 15	See program screen on page 87
134. MISC TEND 16	See program screen on page 87
135. MISC TEND#	Descriptor
136. MODIFIER 1	See program screen on page 88
137. MODIFIER 2	See program screen on page 88
138. MODIFIER 3	See program screen on page 88
139. MODIFIER 4	See program screen on page 88
140. MODIFIER 5	See program screen on page 88
141. MODIFIER 6	See program screen on page 88
142. MODIFIER 7	See program screen on page 88
143. MODIFIER 8	See program screen on page 88
144. MODIFIER 9	See program screen on page 88
145. MODIFIER 10	See program screen on page 88
146. NEXT RECORD	Descriptor
147. #/NO SALE	See program screen on page 89

Code# & Function	Programmability
148. P/BAL	See program screen on page 89
149. PAGE DOWN	Descriptor
150. PAGE UP	Descriptor
151. PAID OUT 1	See program screen on page 89
152. PAID OUT 2	See program screen on page 89
153. PAID OUT 3	See program screen on page 89
154. PAID OUT 4	See program screen on page 89
155. PAID OUT 5	See program screen on page 89
156. PAID RECALL	Descriptor & X-Mode Control
157. % 1	See program screen on page 90
158. % 2	See program screen on page 90
159. % 3	See program screen on page 90
160. % 4	See program screen on page 90
161. % 5	See program screen on page 90
162. % 6	See program screen on page 90
163. % 7	See program screen on page 90
164. % 8	See program screen on page 90
165. % 9	See program screen on page 90
166. % 10	See program screen on page 90
167. PLU	Descriptor
168. PREV. RECORD	Descriptor
169. PRICE INQ	Descriptor
170. PRICE LVL1	Descriptor & X-Mode Control
171. PRICE LVL2	Descriptor & X-Mode Control
172. PRICE LVL3	Descriptor & X-Mode Control
173. PRICE LVL4	Descriptor & X-Mode Control
174. PRICE LVL5	Descriptor & X-Mode Control
175. PRICE LVL6	Descriptor & X-Mode Control
176. PRICE LVL7	Descriptor & X-Mode Control
177. PRICE LVL8	Descriptor & X-Mode Control
178. PRICE LVL9	Descriptor & X-Mode Control
179. PRICE LVL10	Descriptor & X-Mode Control
180. PRICE LVL11	Descriptor & X-Mode Control
181. PRICE LVL12	Descriptor & X-Mode Control
182. PRICE LVL13	Descriptor & X-Mode Control
183. PRICE LVL14	Descriptor & X-Mode Control
184. PRICE LVL15	Descriptor & X-Mode Control
185. PRICE LVL16	Descriptor & X-Mode Control
186. PRICE LVL17	Descriptor & X-Mode Control
187. PRICE LVL18	Descriptor & X-Mode Control
188. PRICE LVL19	Descriptor & X-Mode Control
189. PRICE LVL20	Descriptor & X-Mode Control
190. PRINT	See program screen on page 92
191. PRINT CHECK	See program screen on page 92
192. PRINT HOLD	Descriptor & X-Mode Control
193. PROMO	See program screen on page 93
194. PRINT SCREEN	Descriptor
195. QUIT	Descriptor
196. RECEIPT ON/OFF	Descriptor
197. RECALL CHECK 1	See program screen on page 93

<b>Code# &amp; Function</b>	<b>Programmability</b>
198. RECALL CHECK 2	See program screen on page 93
199. RECALL CHECK 3	See program screen on page 93
200. RECALL CHECK 4	See program screen on page 93
201. RECD ACCT 1	See program screen on page 89
202. RECD ACCT 2	See program screen on page 89
203. RECD ACCT 3	See program screen on page 89
204. RECD ACCT 4	See program screen on page 89
205. RECD ACCT 5	See program screen on page 89
206. RECEIPT	Descriptor
207. REPEAT	Descriptor & X-Mode Control
208. SCALE	See program screen on page 95
209. SEAT #	Descriptor & X-Mode Control
210. SHIFT	Descriptor
211. SPLIT ITEM	Descriptor & X-Mode Control
212. SPLIT PAYMENT	Descriptor & X-Mode Control
213. STOCK INQ	Descriptor
214. STORE CHECK 1	See program screen on page 96
215. STORE CHECK 2	See program screen on page 96
216. STORE CHECK 3	See program screen on page 96
217. STORE CHECK 4	See program screen on page 96
218. SUBTOTAL	Descriptor
219. TABLE # 1	Descriptor
220. TABLE # 2	Descriptor
221. TABLE # 3	Descriptor
222. TABLE # 4	Descriptor
223. TAKE-OUT	See program screen on page 83
224. TAX EXEMPT	See program screen on page 97
225. TAX SHIFT 1	Descriptor
226. TAX SHIFT 2	Descriptor
227. TAX SHIFT 3	Descriptor
228. TAX SHIFT 4	Descriptor
229. TAX SHIFT 5	Descriptor
230. TAX SHIFT 6	Descriptor
231. TIME IN/OUT	See program screen on page 97
232. TIP 1	See program screen on page 97
233. TIP 2	See program screen on page 97
234. TIP 3	See program screen on page 97
235. TRANS CHK1	Descriptor & X-Mode Control

<b>Code# &amp; Function</b>	<b>Programmability</b>
236. TRANS CHK2	Descriptor & X-Mode Control
237. TRANS CHK3	Descriptor & X-Mode Control
238. TRANS CHK4	Descriptor & X-Mode Control
239. TRAY SUBTOTAL	See program screen on page 98
240. VALIDATE	Descriptor
241. VOID ITEM	See program screen on page 99
242. WASTE	See program screen on page 99
243. WLU	Descriptor & X-Mode Control
244. X/TIME	See program screen on page 99
245. YES/NO	Descriptor
246. PARK ORDER	Descriptor & X-Mode Control
247. SERVE ORDER	Descriptor & X-Mode Control
248. KP ROUTING	See program screen on page 85
249. SPLIT CHECK	Descriptor
250. ALPHA TEXT	Descriptor
251. NOT FOUND PLU	See program screen on page 89
252. NEXT DOLLAR	Descriptor
253. PRINT ALL	Descriptor
254.	
255.	
256.	
257.	
258.	
259.	
260.	
261.	
262.	
263.	
264.	
265.	
266.	
267.	
268.	
269.	
270.	

## Cancel

```

FUNC. KEY #016 PROGRAMMING
DEFAULT DESC:          CANCEL
DESCRIPTOR:           CANCEL
HALO (0:NO LIMIT)      00000.00
ACTIVE IN X ONLY      N
COMPULSORY VALIDATION  N
PRINT RECEIPT         Y
          ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

## Cash

```

FUNC. KEY #018 PROGRAMMING
DEFAULT DESC :         CASH
DESCRIPTOR :          CASH
HALO (0=NO LIMIT)     00000.00
                        1 2 3 4 5 6
EXEMPT TAX :          N N N N N N
OPEN DRAWER           Y
▼          ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

```

FUNC. KEY #018 PROGRAMMING
COMPULSORY VALIDATION  N
AMOUNT TENDER COMPULSORY  N
DISABLE UNDER TENDERING  N
UNDER TENDERING IN X ONLY  N
COIN CHANGER PORT# (0-4)  0
▲          ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

### Cash Key Program Note

FIELD	Notes
COIN CHANGER PORT# (0-4)	Enter the number of the serial port to which the coin changer is attached.

## Check

```

FUNC. KEY #021 PROGRAMMING
DEFAULT DESC :          CHECK
DESCRIPTOR :          CHECK
HALO (0=NO LIMIT)          00000.00
                               1 2 3 4 5 6
EXEMPT TAX :              N N N N N N
OPEN DRAWER                  Y
▼      ESC Y/N ENT PAGE UP/DN ↑↓→←
  
```

```

FUNC. KEY #021 PROGRAMMING
COMPULSORY VALIDATION          N
COMPULSORY CHECK ENDORSEMENT  N
AMOUNT TENDER COMPULSORY      N
DISABLE UNDER TENDERING       N
UNDER TENDERING IN X ONLY      N
NON-ADD# ENTRY COMPULSORY      N
◆      ESC Y/N ENT PAGE UP/DN ↑↓→←
  
```

```

FUNC. KEY #021 PROGRAMMING
HALO : Y=CHANGE/N=TENDER          N
COIN CHANGER PORT# (0-4)          0
▲      ESC Y/N ENT PAGE UP/DN ↑↓→←
  
```

### Check Key Program Note

FIELD	Notes
COIN CHANGER PORT# (0-4)	Enter the number of the serial port to which the coin changer is attached.

## Check Cash

```
FUNC. KEY #022 PROGRAMMING
DEFAULT DESC:          CHECK CASH
DESCRIPTOR:           CHECK CASH
HALO (0:NO LIMIT)      00000.00
ACTIVE IN X ONLY      N
ALLOW HALO OVERRIDE IN X ONLY  N
COMPULSORY VALIDATION  N
ESC Y/N ENT PAGE UP/DN ↑↓→←
```

## Check Endorse

```
FUNC. KEY #023 PROGRAMMING
DEFAULT DESC:          CHK ENDORSE
DESCRIPTOR:           CHK ENDORSE
PRINTING PORT# (0-4)  0
ESC Y/N ENT PAGE UP/DN ↑↓→←
```

## Currency Conversion 1-5

```

FUNC. KEY # 026 PROGRAMMING
DEFAULT DESC:          CURR.CONV1
DESCRIPTOR:           CURR.CONV1
RATE                  00.000000
CHANGE IN FOREIGN CURRENCY      N
LINKED DRAWER # (0-2)          0

          ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

### Currency Conversion Key Program Notes

FIELD	Notes
<b>RATE</b>	The value of foreign currency can be express in two ways: foreign currency in US dollars, and the inverse, US dollars in foreign currency. For example a Canadian dollar may be worth \$.70 US. The inverse of that value statement would be that a US dollar is worth \$1.428571 Canadian dollars. Look for the rate expressed as US dollars in foreign currency (i.e. \$1.428571 as in the example above) and enter that value in this field. Note: this field can contain 8 digits, with the decimal in any position. For example, you can enter 4 digits, the decimal, and four fractional digits.
<b>CHANGE IN FOREIGN CURRENCY</b>	Select whether any change from an over-tender is issued in foreign currency (Y) or home currency (N).
<b>LINKED DRAWER # (0-3)</b>	Select the drawer to be opened on foreign currency tender transactions.



## Drive Thru/Eat In/Take Out

Shown below is a sample screen showing the identical function options for all the functions listed above:

```

FUNC. KEY #038 PROGRAMMING
DEFAULT DESC :      DRIVE THRU
DESCRIPTOR :      DRIVE THRU
                1 2 3 4 5 6
EXEMPT TAX :      N N N N N N
COMPULSORY VALIDATION?      N
KP PERIOD OVERRIDE (0=NO OVER)  0
                ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

### Drive Thru/Eat In/Take Out Key Program Notes

FIELD	Notes
<b>KP PERIOD OVERRIDE (0=NO OVER)</b>	Entry of a KP Period here allows kitchen printer routing based upon destination (Eat-in/Take-out/Drive thru). Selection of a KP Period here would also override KP Time Period programs. Enter 0 for no override.

## Error Correct

```

FUNC. KEY #052 PROGRAMMING
DEFAULT DESC:      ERR.CORR.
DESCRIPTOR:      ERR.CORR.
HALO (0:NO LIMIT)      00000.00
ACTIVE IN X ONLY      N
COMPULSORY VALIDATION      N
                ESC Y/N ENT PAGE UP/DN ↑↓→←
    
```

## Food Stamp Tend

```
FUNC. KEY #055 PROGRAMMING
DEFAULT DESC :          FD/S TEND
DESCRIPTOR :          FD/S TEND
HALO (0=NO LIMIT)          00000.00
                               1 2 3 4 5 6
EXEMPT TAX :          N N N N N N
OPEN DRAWER                Y
▼      ESC Y/N ENT PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #055 PROGRAMMING
ALLOW DECIMAL ENTRY                N
FOOD STAMP CHANGE IS CASH          N
ALLOW OVER TENDER                  N
▲      ESC Y/N ENT PAGE UP/DN ↑↓→←
```

## Guest #

```
FUNC. KEY #056 PROGRAMMING
DEFAULT DESC:          GUEST #
DESCRIPTOR:          GUEST #
COMP AFTER BEGINNING OF CHECK      N
COMPULSORY FOR ALL SALES           N
PRINT ON KP                        N
PRINT ON RECEIPT                   N
      ESC Y/N ENT PAGE UP/DN ↑↓→←
```

## KP Routing

```

FUNC. KEY #248 PROGRAMMING
DEFAULT DESC :      KP ROUTING
DESCRIPTOR :      KP ROUTING
ACTIVE IN X ONLY?                                N
ROUTING PERIOD IS :      STAYDOWN ▶
    
```

ESC Y/N ENT PAGE UP/DN ↑↓→←

### *KP Routing Key Program Note*

FIELD	Notes
ROUTING PERIOD IS	The <b>KP ROUTING</b> key is used to override KP Time Period control. For example, a restaurant might normally operate two kitchens at one time and one kitchen at other times. In case the volume of business changes, the manager might want to control the KP routing manually. Also, a single item, or large order might be required to be sent to a different printer than normal. Select STAYDOWN, TRANS (transaction), POP UP or ITEM POP up operation.

## Macro 1-40

Each Macro can execute up to 50 keystrokes.

1. Press keys to be recorded in the macro sequence.
2. Press the **PAGE UP** or **PAGE DN** keys to view the entire macro, if necessary.
3. Press **ESC** to exit the function key program.

```
MACRO KEY# 1 PROGRAMMING ALPHA
DESCRIPTOR          MACRO1
ACTIVE IN X ONLY?  N
--  -----
01  █                [ DONE ]
02                               [ C LEFT ]
03
▼ESC ENT PAGE UP/DN ↑↓ FUNC. KEY
```

## Mdse Return

```
FUNC. KEY #118 PROGRAMMING
DEFAULT DESC :      MDSE RETURN
DESCRIPTOR :      MDSE RETURN
HALO (0=NO LIMIT)      00000.00
ACTIVE IN X ONLY      N
COMPULSORY VALIDATION  N
ADD TO NET GRAND TOTAL  N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #118 PROGRAMMING
SKIP ADJUSTMENT OF PLU TOTAL  N
RETURN CURRENT PRC LEVEL ONLY  N

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Misc Tend 1-16

```

FUNC. KEY #119 PROGRAMMING
DEFAULT DESC :          MISC TEND1
DESCRIPTOR :          MISC TEND1
HALO (0=NO LIMIT)          00000.00
                                1 2 3 4 5 6
EXEMPT TAX :          N N N N N N
OPEN DRAWER                      Y
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

FUNC. KEY #119 PROGRAMMING
COMPULSORY VALIDATION          N
AMOUNT TENDER COMPULSORY      N
DISABLE UNDER TENDERING       N
UNDER TENDERING IN X ONLY     N
NON-ADD# ENTRY COMPULSORY     N
ALLOW OVER TENDER             N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

FUNC. KEY #119 PROGRAMMING
COIN CHANGER PORT# (0-4)      0
CONNECT EFT TERMINAL          N
KEY IS                          CREDIT ▶
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

### Misc Tend Key Program Note

FIELD	Notes
<b>COIN CHANGER PORT# (0-4)</b>	Enter the number of the serial port to which the coin changer is attached.
<b>CONNECT EFT TERMINAL</b>	Select Y if DataTran is connected for integrated payment operations.
<b>KEY IS</b>	Select CREDIT, DEBIT or GIFT to indicate integrated payment function of the key.

## Modifier 1-10

```

FUNC. KEY #136 PROGRAMMING
DEFAULT DESC :          MODIFIER1
DESCRIPTOR :          MODIFIER1
ACTIVE IN X ONLY                                N
MODIFY DESC ONLY (NOT PLU#)                     N
PRINT DESC ON GUEST CHECK                       Y
PRINT DESC ON RECEIPT                           Y
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

FUNC. KEY #136 PROGRAMMING
PRINT DESC ON KP                                Y
AFFECT DIGIT 1-14 OF PLU#                      00
VALUE OF AFFECTED DIGIT (0-9)                 0

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

### Modifier Key Program Notes

FIELD	Notes
<b>AFFECT DIGIT 1-14 OF PLU#</b>	Preceding a PLU with a Size and/or Modifier key manipulates the PLU code assigned to the PLU key, causing a different PLU to be registered when the PLU key is pressed. Enter the digit of the PLU number you wish to be changed when using this key. (Digit #1 is the rightmost digit; digit #14 is the leftmost digit.)
<b>VALUE OF AFFECTED DIGIT (0-9)</b>	Enter the value you wish to be added in the digit position selected. For example, if you wish to affect PLU digit #4 with a value of 1, then pressing this modifier key prior to the registration of PLU #17 will result in the registration of PLU #1017.

## Not Found PLU

```
FUNC. KEY #251 PROGRAMMING
DEFAULT DESC :          NOTFOUND PLU
DESCRIPTOR :          NOTFOUND PLU
SKIP IN NOT FOUND PLU REGISTRATE
GROUP LINK #1          N
DESCRIPTOR              N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## #/No Sale

```
FUNC. KEY #147 PROGRAMMING
DEFAULT DESC :          #/NOSALE
NOSALE DESCRIPTOR :    #/NOSALE
HALO DIGITS FOR NON-ADD(0-14) 00
ALLOW NOSALE FUNCTION    Y
ALLOW NON-ADD FUNCTION    Y
NOSALE IN X ONLY        N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #147 PROGRAMMING
NOSALE INACT AFT NON-ADD ENTRY Y
COMP. VALIDATION ON NOSALE    N
COMP. NON-ADD AT BEGIN OF SALE N
NON-ADD# MUST MATCH HALO     N
NOSALE : PRINT ON RECEIPT    N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## P/Bal

```
FUNC. KEY #148 PROGRAMMING
DEFAULT DESC :          P/BAL
DESCRIPTOR :          P/BAL
MUST BE ENTERED SALE START    N
COMPULSORY P/BAL              N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Paid Out 1-5/Recd Acct 1-5

Shown below is a sample screen showing the identical function options for all the functions listed above:

```
FUNC. KEY #151 PROGRAMMING
DEFAULT DESC :      PAID OUT1
DESCRIPTOR :      PAID OUT1
HALO (0:NO LIMIT)      00000.00
ACTIVE IN X ONLY      N
COMPULSORY VALIDATION      N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```



## %1 - %10

```

FUNC. KEY #157 PROGRAMMING
DEFAULT DESC :           %1
DESCRIPTOR :           %1
HALO/RATE                               00.000
                                     1 2 3 4 5 6
TAXABLE :                   N N N N N N
FUNCTION IS INACTIVE                               N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

FUNC. KEY #157 PROGRAMMING
FUNCTION IS ACTIVE IN X ONLY           N
FUNCTION : Y=SALE/N=ITEM               N
FUNCTION : Y=AMOUNT/N=PERCENT         N
FUNCTION : Y=PLUS/N=MINUS              N
FUNCTION : Y=PRESET/N=OPEN             N
COMPULSORY VALIDATION                   N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

FUNC. KEY #157 PROGRAMMING
ALLOW PRESET OVERRIDE                   N
PRESET OVERRIDE IN X ONLY               N
FUNCTION NETS ITEM TOTAL                 N
IS FOOD STAMP ELIGIBLE                  N
MULTIPLE SALE COUPONS W/O SBTL         N
ONLY ONE DISCOUNT PER TRANS           N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

FUNC. KEY #157 PROGRAMMING
KEY IS "DO IT" DISCOUNT
FUNCTION?                                N

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### % Key Program Note

FIELD	Notes
KEY IS "DO IT" DISCOUNT FUNCTION?	If a tender is short of the amount due, the operator has the option of accepting the amount tendered thus far as total payment for the transaction. Press the % key programmed with the "do it" function to finalize the sale with an amount still due. The amount due that is forgiven will be added to this key total.

## Price Inquiry/Stock Inquiry

```
FUNC. KEY #169 PROGRAMMING
DEFAULT DESC :      PRICE INQ
DESCRIPTOR :      PRICE INQ
ACTIVE IN X ONLY?      N
FUNC IS : Y=STAY DOWN/N=POP UP N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

### Price Inquiry Program Note

FIELD	Notes
Y=Stay Down/N=Pop Up	If a Stay Down, when a second PLU is registered after a stock or price inquiry, the result will be an inquiry on the second item. If Pop Up, when a second PLU is registered after a stock or price inquiry, the result will be the registration of the item rather than an inquiry for the item.

## Print

```
FUNC. KEY #190 PROGRAMMING
DEFAULT DESC :      PRINT
DESCRIPTOR :      PRINT
OUTPUT PRINTER # (0-40)      00

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Print Check

```
FUNC. KEY #191 PROGRAMMING
DEFAULT DESC :      PRINT CHECK
DESCRIPTOR :      PRINT CHECK
PRT CHK AUTOMATIC SERVICE CHK? N
PRINT CONSEC# ON GUEST CHECK? Y

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Promo

```
FUNC. KEY #193 PROGRAMMING
DEFAULT DESC :          PROMO
DESCRIPTOR :          PROMO
                1 2 3 4 5 6
TAXABLE :              Y Y Y Y Y Y
ACTIVE IN X ONLY                                N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Recall Check 1-4

```
FUNC. KEY #197 PROGRAMMING
DEFAULT DESC :          RECALL CHK1
DESCRIPTOR :          RECALL CHK1
ACTIVE IN X ONLY                                N
ENFORCE SEAT#                                    N
TABLE ENTRY REQUIRED                              N
MULTIPLE CHECKS FOR EACH TABLE Y
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #197 PROGRAMMING
GUEST COUNT ENTRY REQUIRED                        N
COMPULSORY FOR ALL SALES                        N
ASSIGNED BY REGISTER                            N
OPENING EMP. HAS EXCL. ACCESS                  Y
PRINT CHECK ON RECEIPT                          N
PRINT CHECK ON JOURNAL                          N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #197 PROGRAMMING
PRINT CHECK ON KP                                N
DRIVE THRU FEATURE ENABLED                      N
PRT RCPT AFTER STORE CHECK                      N
LENGTH OF CHECK# (0-10)                        00
SCAN CHECK#?                                    N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

### ***Recall Check Key Program Note***

<b>FIELD</b>	<b>Notes</b>
<b>DRIVE THRU FEATURE ENABLED?</b>	Set to Y if the tracking file is used for drive thru windows in fast food operations. In this case, the recall key will automatically recall the lowest tracking number from the appropriate tracking file. Note: see “Store Check 1-4” on page 96. You must also set the appropriate Store Check key with the drive thru option enabled.
<b>SCAN CHECK#</b>	Allows use of scanner to enter check number.

## Scale

Select "SET TARE WEIGHTS" and press ENTER to access the TARE WEIGHT PROGRAMMING screen.

```
FUNC. KEY #208 PROGRAMMING
DEFAULT DESC :      SCALE
DESCRIPTOR :      SCALE
ACTIVE IN X ONLY                                N
INHIBIT TARE WEIGHT ENTRY                       N
TARE ENTRY IN X ONLY                           N
TARE ENTRY IS COMPULSORY                       N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #208 PROGRAMMING
WEIGHT SYMBOL : Y=kg/N=lb                      N

SET TARE WEIGHTS ▸

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
TARE WEIGHT PROGRAMMING
TARE01  00.00  TARE 06  00.00
TARE02  00.00  TARE 07  00.00
TARE03  00.00  TARE 08  00.00
TARE04  00.00  TARE 09  00.00
TARE05  00.00  TARE 10  00.00
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
TARE WEIGHT PROGRAMMING
TARE11  00.00  TARE 16  00.00
TARE12  00.00  TARE 17  00.00
TARE13  00.00  TARE 18  00.00
TARE14  00.00  TARE 19  00.00
TARE15  00.00  TARE 20  00.00
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Store Check 1-4

```

FUNC. KEY #214 PROGRAMMING
DEFAULT DESC :          STORE CHK1
DESCRIPTOR :          STORE CHK1
HALO (0:NO LIMIT)          00000.00
                               1 2 3 4 5 6
EXEMPT TAX :          N N N N N N
ACTIVE IN X ONLY          N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

FUNC. KEY #214 PROGRAMMING
COMPULSORY VALIDATION          N
NON-ADD# COMPULSORY          N
PRINT ON RECEIPT          Y
PRINT ON JOURNAL          Y
NEGATIVE BALANCE IN X ONLY    N
HARD CHECK PRINTER# (0-40)    00
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

FUNC. KEY #214 PROGRAMMING
ENABLE DRIVE THROUGH OPTION    N

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

### Store Check Key Program Note

FIELD	Notes
<b>ENABLE DRIVE THROUGH OPTION</b>	Set to Y if the tracking file is used for fast food operations. In this case, the store key will automatically assign the next tracking number from the appropriate tracking file and store the transaction. Note: see "Recall Check 1-4" on page 93. You must also set the appropriate Recall Check key with the drive thru option enabled.

## Tax Exempt

```
FUNC. KEY #224 PROGRAMMING
DEFAULT DESC :      TAX EXEMPT
DESCRIPTOR :      TAX EXEMPT
HALO (0:NO LIMIT)      00000.00
                        1 2 3 4 5 6
EXEMPT TAX :      Y Y Y Y Y Y
NON-ADD# COMPULSORY      N
      ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Time In/Out

```
FUNC. KEY #231 PROGRAMMING
DEFAULT DESC :      TIME IN/OUT
DESCRIPTOR :      TIME IN/OUT
ACTIVE IN X ONLY      N
COMPULSORY VALIDATION      N
      ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Tip 1-3

```
FUNC. KEY #232 PROGRAMMING
DEFAULT DESC :      TIP1
DESCRIPTOR :      TIP1
HALO/RATE      00000.00
TIP : Y=PERCENTAGE/N=AMOUNT      N
TIP : Y=OPEN/N=PRESET      N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #232 PROGRAMMING
                        1 2 3 4 5 6
TIP IS TAXABLE BY :  Y Y Y Y Y Y
MUST PAY BY MISC AFTER TIP      N
TIP AMT ADDS TO NET/GROSS TTL  N
CHARGE TIP IS DEDUCTED FM CASH  N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Tip Declare

```
FUNC. KEY #019 PROGRAMMING
DEFAULT DESC :      TIP DECLARE
DESCRIPTOR :      TIP DECLARE
KEY IS ACTIVE IN X ONLY          N
COMPULSORY VALIDATION            N
CHARGE TIP IS DEDUCTED FM CASH N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Tray Subtotal

```
FUNC. KEY #239 PROGRAMMING
DEFAULT DESC :      TRAY SUBTL
DESCRIPTOR :      TRAY SUBTL
                        1 2 3 4 5 6
EXEMPT TAX :      N N N N N N
ACTIVE IN X ONLY          N
COMPULSORY BEFORE TENDER  N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
FUNC. KEY #239 PROGRAMMING
COMPULSORY VALIDATION            N
ADVANCES CONSEC# AT FINAL       N

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```



## Void Item

```

FUNC. KEY #241 PROGRAMMING
DEFAULT DESC :      VOID ITEM
DESCRIPTOR  :      VOID ITEM
HALO (0:NO LIMIT)      00000.00
ACTIVE IN X ONLY      N
COMPULSORY VALIDATION      N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

## Waste

```

FUNC. KEY #242 PROGRAMMING
DEFAULT DESC :      WASTE
DESCRIPTOR  :      WASTE
ALLOW IN X ONLY      N
COMPULSORY VALIDATION      N
AFFECT ON PROJECTIONS      Y

ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### Waste Key Program Note

FIELD	Notes
AFFECT ON PROJECTIONS	If Y, the projection report will consider actual sale plus waste. If N, the projection report will only consider sales.

## X/Time

```

FUNC. KEY #244 PROGRAMMING
DEFAULT DESC :      X/TIME
DESCRIPTOR  :      X/TIME
ALLOW SPLIT PRICING      N

ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

---

# System Options

Options are sorted by category to assist the programmer in finding a specific option. Within each category, options are also referenced by number for easy retrieval.

1. Select **SYSTEM OPTION** from the P-Mode menu to display the System Option Programming Screen.
2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the **↑** or **↓** keys to move the cursor to your choice and press **ENTER**.

SYSTEM OPTION PROGRAMMING

- 1. GENERAL FUNCTION OPTIONS**
- 2. TAX OPTIONS
- 3. CASH DRAWER OPTIONS
- 4. TRAINING MODE OPTIONS
- 5. LEVEL/MODIFIER OPTIONS

SYSTEM OPTION PROGRAMMING

- 6. TRACKING FILE OPTIONS**
- 7. KP/KV OPTIONS
- 8. VALID/SBTL PRINT OPTIONS
- 9. GENERAL PRINTING OPTIONS
- 10. REPORT PRINTING OPTIONS

SYSTEM OPTION PROGRAMMING

- 9. GENERAL PRINTING OPTIONS
- 10. REPORT PRINTING OPTIONS
- 11. REPORT OPTIONS**
- 12. TIME KEEPING OPTIONS
- 13. E.J. & DETAIL PRINTING OPT

## General Function Options

1. Select **GENERAL FUNCTION OPTIONS** from the **SYSTEM OPTION PROGRAMMING** screen. The first page of general options displays with the first option field selected.

```

GENERAL FUNCTION OPTIONS
1.  MANAGER CONTROL (IN X-MODE) :
    NEGATIVE SALES                N
    NEGATIVE TENDER                N
    ZERO SALES                     N
2.  ENFORCE EAT-IN/T-OUT/D-THRU :
    AT BEGIN OF SALE                N
▼  ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

2. Press the **↑↓←→** keys to select a field to edit:
3. Type a new value and press **ENTER** or **↓** to accept the entry and advance to the next field.

```

GENERAL FUNCTION OPTIONS
    BEFORE TENDER                N
3.  DEFAULT DESTINATION          NONE ▶
4.  ROUNDING ON % :              UP AT .5 ▶
5.  ROUNDING ON SPLIT PRICE/MULT
    UP AT .5 ▶
6.  CONSOLIDATE LIKE ITEMS        Y
◆  ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

4. From the last field on the screen press **↓** to view the next page of options, or from any point on the screen press **PAGE DN** to view the next page of options.

```

GENERAL FUNCTION OPTIONS
7.  HASH OPTIONS :
    UPDATE SALE (RECEIPT) TOTAL    N
    ADD TO GROSS SALE TOTAL        N
    ADD NET SALE TOTAL              N
    UPDATE HASH TTL ON FIN/SFT     N
    UPDATE TIME PERIOD REPORT      N
◆  ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

5. Press **PAGE UP** to return to the previous screen.

```

GENERAL FUNCTION OPTIONS
    UPDATE EMPLOYEE REPORT         N
    UPDATE GROUP REPORT             N
    UPDATE IND. PLU TOTALS          N
    ADD TO OVERALL PLU TOTALS       N
    UPDATE DRAWER TOTALS RPT        N
    UPDATE DAILY SALES REPORT        N
◆  ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

GENERAL FUNCTION OPTIONS
8.  ACTIVATE ROUNDING ON CASH      N
9.  ACTIVATE ROUNDING ON SBTL      N
10. ROUNDING SYSTEM ▶
11. GLOBAL ENTRY LIMIT (0-7)      0
12. DIRECT MULTIPLICATION :
    ENABLE                          N
◆  ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

GENERAL FUNCTION OPTIONS
      MAXIMUM DIGIT (1-5)           1
13.PLU PRESET/HALO OVERRIDE       N
14.SILENT KEY DEPRESSION          N
15.Y=CODE ENTRY/N=A/N OVERLAY    N
16.OPEN ENTRY FOR SCALE PLUS     N
17.DEACTIVATE VOID MODE          N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL FUNCTION OPTIONS
18.DISABLE TIME/DATE PROGRAM      N
19.ALLOW PLU COPY BY RANGE        N
20.ALLOW POST TENDERING           N
21.EMP.: Y=POP UP/N=STAY DOWN    N
22.EMP. SIGN ON: EMPLOYEE# ▶
23.QTY LIMIT FOR X/TIME 000.000
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL FUNCTION OPTIONS
24.EMP. # LINKED "EMP.1" KEY      01
25.EMP. # LINKED "EMP.2" KEY      00
26.EMP. # LINKED "EMP.3" KEY      00
27.EMP. # LINKED "EMP.4" KEY      00
28.EMP. # LINKED "EMP.5" KEY      00
29.EMP. # LINKED "EMP.6" KEY      00
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL FUNCTION OPTIONS
30.EMP. # LINKED "EMP.6" KEY      00
31.EMP. # LINKED "EMP.6" KEY      00
32.EMP. # LINKED "EMP.6" KEY      00
33.EMP. # LINKED "EMP.6" KEY      00
34.AUTO CLEAR ERROR CONDITION     Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL FUNCTION OPTIONS
35.GUEST CHECK BALANCE HALO
      (0=NO LIMIT) 000000.00
36.SET DEFAULT SEAT# TO 1         N
37.CONT MACRO IF MACRO IS LOOP   N
38.ENTER TIME FOR TRANS. VOID    Y
39.START AT PRICE1 IN PLU PGM    Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL FUNCTION OPTIONS
40.SCREEN SAVER (MINUTES)      00
41.MENU SELECT WITHOUT ENTER   N
42.RECEIPT STATUS ON DISPLAY   Y
43.CARD READER ENABLE         N
44.SALES FOR 0 STOCK ITEMS     Y
45.DATE OF BIRTH ENTRY COMP.  Y
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

6. Press **PAGE DN** to view the last of the GENERAL FUNCTION OPTIONS. Note that the scroll indicators tell you when more information is located on pages above or below the current page.

```

GENERAL FUNCTION OPTIONS
46.CHECK DIGIT OF NONPLU CODE  Y
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

**General Function Options Program Notes**

#	FIELD	Notes
1	<b>MANAGER CONTROL (IN X-MODE): NEGATIVE SALES NEGATIVE TENDER ZERO SALES</b>	Determine which of the listed functions require the key lock to be placed in the X position. Settings here do not affect transactions performed in the <b>VOID</b> key lock mode.
2	<b>ENFORCE EAT-IN/T-OUT/D-THRU: AT BEGIN OF SALE BEFORE TENDER</b>	You can enforce EAT-IN, TAKE-OUT, or DRIVE THRU either at the beginning of a sale, or before a tender by selecting Y for either option.
3	<b>DEFAULT DESTINATION</b>	You have the option of selecting a default destination selection: NONE, EAT-IN, TAKE-OUT, or DRIVE-THRU.
4 5	<b>ROUNDING ON % ROUNDING ON SPLIT PRICE/ MULT</b>	When calculations result in a fraction of a cent, you have the option of rounding UP AT .5 (\$0.005 or greater rounds up; less than 0.005 rounds down) or you can choose to round any fractional calculation ALWAYS UP or ALWAYS DOWN.
6	<b>CONSOLIDATE LIKE ITEMS</b>	If Y, like items are added, i.e. "2 COKES". If N, like items are on separate lines, i.e. "1 COKE" and "1 COKE".

#	FIELD	Notes
7	<b>HASH OPTIONS</b>	Here you can define the meaning of HASH by selecting Y or N to each item in the list of calculation options. See option #9 in "PLU Status Group" on page 36 to apply HASH status to PLUs assigned to a particular status group.
8 9 10	<b>ACTIVATE ROUNDING ON CASH</b> <b>ACTIVATE ROUNDING ON SBTL</b> <b>ROUNDING SYSTEM ▶</b>	Use this option to eliminate the use of small value coins (i.e. pennies). Rounding up or down occurs at subtotal or cash.  Select the ROUNDING SYSTEM field and press ENTER to display the ROUNDING SYSTEM PROGRAMMING SCREEN where up to five ranges can be set. For example if you wish to eliminate pennies, the ranges could be set as:  #1 00-02 000 (.00-.02 rounds to .00) #2 03-07 005 (.03-.07 rounds to .05) #3 08-09 010 (.08-.09 rounds up to .10)
11	<b>GLOBAL ENTRY LIMIT (0-7)</b>	Select an entry limit that applies to all numeric entries (i.e. amounts for PLU entry, tenders, or multiplication.) The global entry limit will override any individually programmed limits.
12	<b>DIRECT MULTIPLICATION: ENABLE</b> <b>MAXIMUM DIGIT (1-5)</b>	Direct multiplication allows you to enter a quantity, then press a preset key without using the X/TIME key. You can enable direct multiplication here, and also determine the maximum number of digits for the multiplier.
13	<b>PLU PRESET/HALO OVERRIDE</b>	Override of a preset (entry of a price into a preset key) or override of a HALO (entry of a price greater than the PLUs high amount limit can be allowed. Note: In order to override, you must also set the flag for each individual PLU to allow override, and you must operate an employee with the authority level #18 set to allow override.
14	<b>SILENT KEY DEPRESSION</b>	If Y, both the key depression tone and the error tone are silenced. (Error messages continue to display.)
15	<b>Y= CODE ENTRY/ N=A/N OVERLAY</b>	Select the method you wish to use when programming alpha characters in descriptor fields.
16	<b>OPEN ENTRY FOR SCALE PLUS</b>	If Y, amount entries are allowed for open scale PLUs.

#	FIELD	Notes
17	DEACTIVATE VOID MODE	Set to Y to deactivate any activity in the VOID key lock position.
18	DISABLE TIME/DATE PROGRAM	Set to Y to remove the ability to change or reprogram the current date/time.
19	ALLOW PLU COPY BY RANGE	If yes, the COPY PLU and COPY PLU STATUS GROUP commands allow you to copy statuses from a single PLU or GROUP to a range of PLUs or GROUPS. If no, you can only copy from a single PLU or STATUS GROUP to another individual PLU or GROUP. See "Copy Program" on page 192.
20	ALLOW POST TENDERING	Choose Y to allow tendering after the sale has been finalized, for the purpose of computing change
21	EMPLOYEE: Y=POP UP/N=STAY DOWN	Choose Y to automatically sign off at the completion of a transaction. Choose N to register sales continuously for the same employee.
22	EMP. SIGN ON	Select the method you wish to use when signing on to operate the <i>SER-7000</i> : PUSH BUTTON, SECRET CODE, EMPLOYEE# or MCR. See "Employee Sign-On/Sign-Off" in the <i>SER-7000 Operation Manual</i> for more information.
23	QTY LIMIT FOR X/TIME	Determine the maximum quantity that can be used for a multiplier.
24-33	EMPLOYEE # LINKED "EMPOYEE1" KEY	The 10 push button employee functions (codes 41-50) can be used to sign on specific employees. The specific employee for each key is assigned here.
34	AUTO CLEAR ERROR CONDITION	If Y, error conditions will clear automatically after a momentary error tone and display of an error message. You can continue with the correct sequence without first pressing the <b>CLEAR</b> key. If No, you must press <b>CLEAR</b> to clear any error before continuing.
35	GUEST CHECK BALANCE HALO (0=NO LIMIT)	You can place a high amount limit on the balance that is stored in a tracking file. If
36	SET DEFAULT SEAT# TO 1	If yes, each item that does not receive a seat # will be assigned the default seat number of 1. Using a seat number system assists prep staff in assembling orders correctly and facilitates payment of separate parts of a check.

#	FIELD	Notes
37	<b>CONT MACRO IF MACRO IS LOOP</b>	If Y, continuous macros can be created by including a macro in a macro sequence. A continuous macro might be used to run a test sequence.
38	<b>ENTER TIME FOR TRANS. VOID</b>	If yes, you must enter a time before beginning a transaction void. This allows sales by time reports to be adjusted appropriately.
39	<b>START AT PRICE1 IN PLU PGM</b>	To facilitate price changes on an existing program, you can choose Y to automatically place the cursor in the first price field when a PLU Program screen is opened. In the default condition (N) the cursor is placed at the PLU# field.
40	<b>SCREEN SAVER (MINUTES)</b>	Enter the number of minutes before an inactive screen will automatically blank. Press any key to refresh the screen.
41	<b>MENU SELECT WITHOUT ENTER</b>	You can select an item from a menu (or from a WLU that does not allow functions) by entering only the item number, rather than the item number then <b>ENTER</b> . Note: If there are more than 9 selections on the menu, you must enter single digit selections with a preceding 0, i.e. enter <b>01</b> to select item #1.
42	<b>RECEIPT STATUS ON DISPLAY</b>	Choose Y to display the receipt on/off status on the operator display. Receipt on displays as "Ron"; receipt off displays as "Rof".
43	<b>CARD READER ENABLE</b>	Choose Y to enable optional magnetic stripe reader.
44	<b>SALES FOR 0 STOCK ITEMS</b>	If Y, sale of items with zero stock is allowed.
45	<b>DATE OF BIRTH ENTRY COMP.</b>	If Y, date of birth for age verification items must be entered at prompt. Operator may press escape to sell items when set to N.
46	<b>CHECK DIGIT OF NONPLU CODE</b>	If N, Check digit is not required for scanning price embedded bar code.



## Tax Options

1. Select TAX OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The tax options display with the first option field selected. (There is only one page of tax options.)

```
TAX OPTIONS
1. TAX ROUND FACTOR      UP AT .5
2. VAT SUBTRACT FROM IND. PLU  N
3. TAX EXEM. QTY (CANADA DONUT) 00
4. PRT TAXABLE AMOUNTS ON R/J  N

▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

2. Select fields and change information in the same manner as described for general options.

```
TAX OPTIONS
5. TAXABLE STATUS INDICATORS:
   DISPLAY                Y
   PRINT                  Y
6. PRINT TAX AMOUNTS AT TENDER Y
7. PRT VAT TAX AMT SEPARATELY  N

◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
TAX OPTIONS
8. TAX PRT: Y=COMBIN/N=ITEMIZ  N
9. PRT TAX EXEM.  DESC/TTLS    N
10. PRINT SUBTOTAL WITHOUT TAX  N
11. NOT SHOW FOOD STAMP INDICAT N
12. PRINT TAX ON VAT            N
13. IS MNM TAXABLE?            Y

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

### Tax Options Program Notes

#	FIELD	Notes
1	TAX ROUNDING FACTOR	When tax calculations result in a fraction of a cent, you have the option of rounding UP AT .5 (\$0.005 or greater rounds up; less than 0.005 rounds down) or you can choose to round any fractional calculation ALWAYS UP or ALWAYS DOWN.
2	VAT SUBTRACTED FROM IND. PLU	Choose Y to subtract the VAT tax amount from the PLU totals on the PLU report. If N, the PLU report total reflects the items price and the value added tax.

#	FIELD	Notes
3	TAX EXEM. QTY (CANADA DONUT)	Enter the quantity at which you wish tax to be exempted. For example if set at 12, registration of PLUs reported to status groups with eligibility for Canadian donut law selected will charge tax until the quantity with the transaction reaches 12. When 12 or more are registered, all will be sold without tax. See "PLU Status Group" on page 36 for more information.
4	PRINT TAXABLE AMOUNTS ON R/J	Choose Y to print the tax eligible subtotals for each tax on the receipt and/or journal, if printed.
5	TAXABLE STATUS INDICATORS: DISPLAY PRINT	In the default condition (Y), tax eligibility indicators, i.e. T <sub>X</sub> 1 display on the screen and print on printers adjacent to the item. Choose N to selectively remove the indicators from the display and/or print.
6	PRINT TAX AMOUNTS AT TENDER	When set to N, the tax charged will not print on the receipt (TAX1, TAX2, etc.)
7	PRINT VAT TAX AMT SEPARATELY	If there are multiple value added taxes, choose Y to print tax amounts separately for each tax, rather than a single tax total.
8	TAX PRT: Y=COMBIN/N=ITEMIZ	If N, each tax amount will print separately. If Y, one TAX total will print.
9	PRINT TAX EXEM. DESC/TTLS	If Y, a tax-exempt total will print on the receipt.
10	PRINT SUBTOTAL WITHOUT TAX	If Y, the merchandise subtotal does not include tax.
11	NOT SHOW FOOD STAMP INDICAT	In the default condition (Y), the food stamp indicator, F <sub>S</sub> displays on the screen and prints on printers adjacent to the item. Choose N to remove the indicator from the display and print.
12	PRINT TAX ON VAT	If Y, prints breakout tax amount on VAT tax sales receipts.
13	IS MNM TAXABLE?	If Y, the mix & match discount reduces the taxable itemizer, resulting in tax calculation on the net amount after the discount is applied.

## Cash Drawer Options

1. Select CASH DRAWER OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The cash drawer options display with the first option field selected. (There is only one page of cash drawer options.)
2. Select fields and change information in the same manner as described for general options.

```

CASH DRAWER OPTIONS
1. SALES WITH DRAWER OPEN      Y
2. C-I-D AMOUNT LIMIT      00000.00
3. OPEN DRAWER DURING X-RPT      N
4. OPEN DRAWER DURING Z-RPT      N
5. ACTIVATE OPEN DRAWER ALARM      N
6. OPEN DRAWER ALARM TIME      030
ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### Cash Drawer Options Program Notes

#	FIELD	Notes
1	SALES WITH DRAWER OPEN	Choose Y to force the drawer to be closed before registrations are allowed.
2	C-I-D AMOUNT LIMIT	Set the maximum amount of cash in drawer before a error tone and message display. The error can be cleared and continued sales are allowed, however the warning continues to sound at the completion of each transaction, until cash is removed from the drawer. Set the amount to 0 to disable the cash in drawer limit warning.
3	OPEN DRAWER DURING X-RPT	Choose Y to open the drawer at the completion of any X report.
4	OPEN DRAWER DURING Z-RPT	Choose Y to open the drawer at the completion of any Z report.
5	ACTIVATE OPEN DRAWER ALARM	If Y, an error tone sounds when the cash drawer remains open the length of time specified in option #6 below.
6	OPEN DRAWER ALARM TIME	Enter length of time the drawer may be open (in seconds) before the open drawer alarm sounds.

## Training Mode Options

1. Select TRAINING MODE OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The training mode options display with the first option field selected. (There is only one page of training mode options.)
2. Select fields and change information in the same manner as described for general options.

```

TRAINING MODE OPTIONS
1. TRAINING MODE PASSWORD      0000
2. OPEN DRAWER IN TRAIN MODE   N
3. TRAINING EMPLOYEE FILE #    00
4. ALLOW REAR DSP IN TRAINING  N
5. SEND ORDER TO KP/V IN TRAIN N
6. PRINT JOURNALS IN TRAINING  N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

TRAINING MODE OPTIONS
7. PRINT RECEIPTS IN TRAINING  N
8. PRINT "TRAINING"           Y
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### Training Mode Options Program Notes

#	FIELD	Notes
1	<b>TRAINING MODE PASSWORD</b>	Enter a 4 digit numeric password that must be used to access the TRAINING option on the X-MODE MANAGER MENU. If the password is 0, password entry is not required.
2	<b>OPEN DRAWER IN TRAIN MODE</b>	Choose Y to open the appropriate cash drawer during training operations.
3	<b>TRAINING EMPLOYEE FILE #</b>	Choose the employee file # that is updated with training activity.
4	<b>ALLOW REAR DSP IN TRAINING</b>	Choose Y to activate the rear display during training activity. If N, the rear display indicates CLOSED during training.
5	<b>SEND ORDER TO KP/V IN TRAIN</b>	Choose Y to send orders to the kitchen printer and/or kitchen video during training.
6	<b>PRINT JOURNALS IN TRAINING</b>	Choose Y to print (or update, in the case of an electronic journal) the journal in training.
7	<b>PRINT RECEIPTS IN TRAINING</b>	Choose Y to print receipts (if receipts are normally printed) during training.
8	<b>PRINT "TRAINING"</b>	If receipts are printed they are normally printed with the message TRAINING and the message "***TRAINING***" displays on the operator screen. Choose N to remove these messages.

# Level/Modifier Options

1. Select LEVEL/MODIFIER OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The level/modifier options display with the first option field selected. (There is only one page of level/modifier options.)
2. Select fields and change information in the same manner as described for general options.

```

LEVEL/MODIFIER OPTIONS
1.  DEFAULT KEYBOARD LEVEL      1
2.  KEYBOARD LVL:                STAYDOWN ▶
3.  DEFAULT PRICE LEVEL          01
4.  PRICE LEVEL:                 ITEM POP UP ▶
5.  PLU MOD KEYS:                ITEM POP UP ▶
▼  ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

LEVEL/MODIFIER OPTIONS
6.  APPLY MOD TO CODE ENT PLU    N
7.  MODE OVERWRITES PREV MODE   N
▲  ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### Level/Modifier Options Program Notes

#	FIELD	Notes
1	DEFAULT KEYBOARD LEVEL	If keyboard levels are pop-up (see option #2), enter the level you wish to return to after an entry in a different level.
3	DEFAULT PRICE LEVEL	If price levels are pop-up (see option #4), enter the level you wish to return to after an entry in a different level.
2 4 5	KEYBOARD LVL: PRICE LEVEL: PLU MOD KEYS:	<p>Select the field and press <b>ENTER</b>. Choose STAY DOWN, TRANS POP UP, or ITEM POP UP.</p> <p>STAY DOWN: Once chosen, will remain active until the next choice.</p> <p>ITEM POP UP: Choice remains active for the next PLU only, then returns to the default.</p> <p>TRANS POP UP: Choice remains active for the remainder of the transaction, then returns to the default with the transaction is finalized.</p>
6	APPLY MOD TO CODE ENT PLU	If Y, PLU modifier keys may be used with both keyboard PLU keys and code entry PLUs.
7	MOD OVERWRITES PREV MOD	If Y, only the last modifier entry will affect the PLU number. Use this setting when a PLU is modified only once, i.e. small/med/large. If N, several modifiers affecting different digit positions could be entered and then affect the PLU registered. For example, size, crust type, and/or toppings could be indicated on pizza items.

## Tracking File Options

1. Select TRACKING FILE OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The tracking file options display with the first option field selected. (There are two pages of tracking file options.)
2. Select fields and change information in the same manner as described for general options.

```

TRACKING FILE OPTIONS
1.AUTOMATIC TRANSFER CHECK      N
2.CHECKS PAID SLIP IS STUB      N
3.PRINT GUEST CHECK AT TENDER   N
4.SELECT HELD ITEMS ON RECALL    Y
5.WARN IF HELD ITEMS AT FINAL    Y
6.TRK2 HOLD CLOSED CHK FM TRK1  N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

TRACKING FILE OPTIONS
7.TRK4 HOLD CLOSED CHK FM TRK3  N
8.STARTING CHECK#:
   CHECK #1          0000000001
   CHECK #2          0000000001
   CHECK #3          0000000001
   CHECK #4          0000000001
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

TRACKING FILE OPTIONS
9. CHECK# LIMIT (0=NO LIMIT):
   CHECK#1          0000000000
   CHECK#2          0000000000
   CHECK#3          0000000000
   CHECK#4          0000000000
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

TRACKING FILE OPTIONS
10.RESET CHECK #1  Z1 FINANCIAL ▶
11.RESET CHECK #2  Z1 FINANCIAL ▶
12.RESET CHECK #3  Z1 FINANCIAL ▶
13.RESET CHECK #4  Z1 FINANCIAL ▶
14.DISABLE GC PRT ON RECEIPT    N
15.GC PRINTER #(0-40)          00
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### Tracking File Options Program Notes

#	FIELD	Notes
1	<b>AUTOMATIC TRANSFER CHECK</b>	If Y, the check will be assigned to the last person who posted to the check.
2	<b>CHECKS PAID SLIP IS STUB</b>	If Y, the PRINT CHECK function produces a guest check with totals only, without item detail.
3	<b>PRINT GUEST CHECK AT TENDER</b>	When Y, the PRINT CHECK is active and guest check will print.
4	<b>SELECT HELD ITEMS ON RECALL</b>	Items may be "held" to temporarily postpone kitchen printing (or display). If Y, held items are automatically selected when a check is recalled so they may be sent to the appropriate printers/screens.
5	<b>WARN IF HELD ITEMS AT FINAL</b>	If a check with held items is paid, a warning will display.
6 7	<b>TRK 2 HOLD CLOSED CHK FM TRK 1 TRA 4 HOLD CLOSED CHK FM TRK 3</b>	The SER-7000 system does not feature a standard closed check file. However, if you do not require all four of the available check files, unused tracking files can be utilized to store closed checks as indicated in options #9 & #10. (See "Memory Allocation " in S-Mode Programming.)
8	<b>STARTING CHECK#:</b>	For each tracking file that you are using, if you are automatically assigning tracking numbers, you can enter the first number of the tracking file to be issued after the check number is reset.
9	<b>CHECK# LIMIT</b>	Sets the upper limit for the check #. If set to "10", once check #10 is used, the next check will be the starting check number.
11 12 13 14	<b>RESET CHECK #1 RESET CHECK #2 RESET CHECK #3 RESET CHECK #4</b>	Select when you wish the check number to reset: Z1 FINANCIAL, Z1 OPEN CHECK or NEVER.



## Kitchen Printing/Video Options

1. Select KITCHEN PRINTING/VIDEO OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The kitchen printing/video options display with the first option field selected. (There are three pages of kitchen printing/video options.)
2. Select fields and change information in the same manner as described for general options.

```

KITCHEN PRINTING/VIDEO OPTI
1. PRINT AT KP:
   TOTAL AMOUNT LINE      N
   PRINT SEAT #           Y
   ORDER #                Y
   TRANSACTION VOID ITEMS N
   PLU CODE                N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

KITCHEN PRINTING/VIDEO OPTI
1. PRINT AT KP:
   PLU PRICE              N
   BITMAP                 N
   NUMBER OF ITEMS        N
   LOGO MESSAGE           N
2. SORT KP BY KP GROUP #  Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

KITCHEN PRINTING/VIDEO OPTI
3. LINE FEED AT KP PRT START 00
4. LINE FEED AT KP END      00
5. COMBINE LIKE ITEMS ON KPV  Y
6. SEND ORDER TO KP:        N
   AT SUBTOTAL               N
7. SEND ORDER TO KVS ON SBTL N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

KITCHEN PRINTING/VIDEO OPTI
8. PRINT VOIDED ORDERS AT KPV N
9. KP IS: Y=REAL TIME/N=BATCH N
10.KV IS: Y=REAL TIME/N=BATCH N
11.USE KP THE SAME FOR ALL REG▸
12.KP COMBINATION OF REG#&CONS#▸
13.DISPLAY KP TIME PERIOD#    N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

KITCHEN PRINTING/VIDEO OPTI
14.DISPLAY KP ORDER#         N
15.SEPARATE KP BY KP GROUP#  N
16.SEPARATE KP BY KP ITEM    N
17.SORT KP BY SEAT #
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### ***Kitchen Printing/Video Options Program Notes***

<b>#</b>	<b>FIELD</b>	<b>Notes</b>
1	<b>PRINT AT KP: TOTAL AMOUNT LINE PRINT SEAT # ORDER # TRANSACTION VOID ITEMS PLU CODE PLU PRICE BITMAT NUMBER OF ITEMS LOGO MESSAGE</b>	You can determine the content of each kitchen printer chit. For each item listed, select N to remove print from the kitchen printer.  Note: the TOTAL AMOUNT line includes a line for TOTAL and TAX..
2	<b>SORT KP BY KP GROUP #</b>	Use this option to create "priority print". For example, if you wish to group appetizers at the beginning of the chit, then entrees next, place appetizers in a kitchen printer group (see "PLU Status Group (PLU Status Link)" on page 67) with a lower numeric value than the value of the group to which entrees are reported.
3	<b># LINE FEED AT KP PRT START</b>	Enter the number of lines you wish to feed before beginning kitchen printer print.
4	<b># LINE FEED AT KP END</b>	Enter the number of lines you wish to feed after beginning kitchen printer print.
5	<b>COMBINE LIKE ITEMS ON KPV</b>	If Y, for example, if two hamburgers are entered and sent to the printer, they will print as "2 HAMBURGERS", rather than "1 HAMBURGER" and "1 HAMBURGER" on a second line. If condiments are entered, they will be separated and printed below the items.
6	<b>SEND ORDER TO KP: AT SUBTOTAL</b>	Choose Y if you wish to print when the subtotal key is pressed, instead of when the sale is finalized.
7	<b>SEND ORDER TO KVS ON SBTL</b>	Choose Y if you wish to send items to the KVS when the subtotal key is pressed, instead of when the sale is finalized.
8	<b>PRINT VOIDED ORDERS AT KPV</b>	If N, then transaction void orders will not print or display at the appropriate printer/screen.
9	<b>KP IS: Y=REAL TIME/N=BATCH</b>	Real time means that each item will print at the printer when the next item is entered (one item delay). Batch means that the entire order will print when the order is finalized.

#	FIELD	Notes
10	<b>KV IS: Y=REAL TIME/N=BATCH</b>	Real time means that each item will display at the screen when the next item is entered (one item delay). Batch means that the entire order will display when the order is finalized.
11	<b>USE KP</b>	Choose from "THE SAME FOR ALL REG" if all registers in the IRC system use the same kitchen printer routing or "REGISTER SEPARATELY" if different registers have different routing. See "Kitchen Printer Routing" on page 168
12	<b>KP</b>	Choose from "COMBINATION OF REG#&CONS#" or "GLOBAL ORDER#".
13	<b>DISPLAY KP TIME PERIOD#</b>	You can program four different KP routings by time period (see "Kitchen Printer Routing" on page 168). If Y, the operator display will which of KP routing periods is active in the lower left portion of the display.
14	<b>DISPLAY KP ORDER #</b>	Choose Y if you wish to display the order # in the lower left portion of the operator screen when the order is finalized.
15	<b>SEPARATE KP BY KP GROUP #</b>	Choose Y if you wish to separate items from different KP Groups and issue separate kitchen printer tickets for items from each KP Group.
16	<b>SEPARATE KP BY KP ITEM</b>	Choose Y to produce a separate requisition for each main item.
17	<b>SORT KP BY SEAT #</b>	If seat # system is used, will sort kitchen printer orders by seat #, for example:  Seat #1 01 Eggs 01 Coffee Cream ----- Seat #2 01 Eggs 01 Orange Juice

## Validation/Subtotal Print Options

1. Select VALIDATION/SUBTOTAL PRINT OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The validation and subtotal print options display with the first option field selected. (There is only one page of validation and subtotal print options.)
2. Select fields and change information in the same manner as described for general options.

```
VALIDATION/SUBTOTAL OPTIONS
1. VALID AMT: Y=TOTAL/N=TENDER N
2. CHK VALID AMT:Y=TTL/N=TEND  N
3. ACTIVATE VALIDATION SENSOR  N
4. ALLOW MULTIPLE VALIDATIONS  Y
5. PRINT VALIDATION MESSAGE    Y
6. PRT SBTL WHEN SBTL PRESSED  N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
VALIDATION/SUBTOTAL OPTIONS
7. VALIDATION PORT# (0-7) 00
8. DISP RUNNING SUBTL ON POLE  N

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

### **Validation/Subtotal Print Options Program Notes**

**NOTE:** To validate, you must attach a printer with validation capability to each register that will validate. Use option #7 to identify the port to which the printer is attached.

<b>#</b>	<b>FIELD</b>	<b>Notes</b>
1	<b>VALIDATION AMT: Y=TOTAL/N=TENDER</b>	For sale validation, you can select either the amount of the sale or the amount of the tender as the amount to print on the validation.
2	<b>CHK VALID AMT: Y=TTL/N=TEND</b>	For check sale validation, you can select either the amount of the sale or the amount of the tender as the amount to print on the validation.
3	<b>ACTIVATE VALIDATION SENSOR</b>	The printer must be equipped with validation option and sensor.
4	<b>ALLOW MULTIPLE VALIDATIONS</b>	If Y, the validation can be done more than once.
5	<b>PRINT VALIDATION MESSAGE</b>	See "Validation Message" on page 145 to program a message of up to three lines.
6	<b>PRINT SBTL WHEN SBTL PRESSED</b>	If Y, the receipt (if applicable) will print the subtotal at the point in the transaction when the key was pressed.
7	<b>VALIDATION PORT# (0-4)</b>	Indicate the port on the register that is connected to the validation printer.
8	<b>DISPLAY RUNNING SUBTL ON POLE</b>	Allows the pole display to show a running subtotal as items are entered.

## General Printing Options

1. Select GENERAL PRINTING OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The general printing options display with the first option field selected. (There are four pages of general printing options.)

```

GENERAL PRINTING OPTIONS
1. PRINT ON RECEIPT:
    EMPLOYEE NAME           Y
    CONSECUTIVE #           Y
    ITEMS BY GROUP          N
    DATE                     Y
    TIME                     Y
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

GENERAL PRINTING OPTIONS
1. PRINT ON RECEIPT:
    PREAMBLE/POSTAMBLE     Y
    ORDER #                 Y
    SEAT #                   Y
2. RCPT FEED LINES AFTER PRT 00
3. LINES AFTER PREAMBLE      00
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

GENERAL PRINTING OPTIONS
4. LINES BEFORE POSTAMBLE   00
5. BUFF RECEIPT: Y=STUB/N=FULL N
6. PRT RCPT WHEN SIGN ON/OFF Y
7. PRT RCPT WHEN CLOCK IN/OUT Y
8. CONDENSE TRAY SBT L RECEIPTS N
9. JOURNAL: =REAL TIME/N=BATCH N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

GENERAL PRINTING OPTIONS
10.PRT PLU CODE WITH DESC   Y
11.TRANSACTION # IS RANDOM  N
12.HOME CURRENCY SYMBOL     $
13.CURRENCY 1 SYMBOL        @
14.CURRENCY 2 SYMBOL        @
15.CURRENCY 3 SYMBOL        @
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

GENERAL PRINTING OPTIONS
16.CURRENCY 4 SYMBOL       @
17.CURRENCY 5 SYMBOL       @
18.PRINT TENDER ON RECEIPT N
19.DISABLE LINE FIND ON SLIP N
20.GUEST CHECK PRE/POSTAMBLE
                                NONE ▶
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

GENERAL PRINTING OPTIONS
21.PRINT RECEIPT AUTOMATICALLY N
22.PRT RCPT AFT TIME CLK EDIT Y
23.PRINT GROUP NAME WHEN
    PRINTING ITEMS BY GROUP N
24.PRT GUEST CHK PRT CNT ON GC N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL PRINTING OPTIONS
25.PRINT IN DOUBLE
    TOTAL N
    TENDER N
    CHANGE N
    ORDER # N
26.PRT RCPT AUTOMATIC. IN VOID N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL PRINTING OPTIONS
27.PRT # OF ITEMS ON RECEIPT N
28.ALLOW MULTIPLE RECEIPTS Y
29.ITEMS ON RCPT IS # OF ITEMS
    PRINTED ONLY N
30.PRINT TIP ON EFT RECEIPT N
31.COPY OF LANTRAN RECEIPT 01
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

```

GENERAL PRINTING OPTIONS
32.TURN OFF AUTO CUTTER N
33.PRE LOGO IMAGE ON RCT(0-22) 0
34.POST LOGO IMAGE ON RCT(0-22) 0
35.PRE LOGO IMAGE ON GC(0-22) 0
36.POST LOGO IMAGE ON GC(0-22) 0
37.MASK # ON CREDIT DRAFTS N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←

```

**General Printing Options Program Notes**

#	FIELD	Notes
1	<b>PRINT ON RECEIPT:</b>	Determine the content of each receipt by selecting Y or N for each item.
2	<b>RCPT FEED LINES AFTER PRT</b>	Enter the number of lines you wish to feed after each receipt is printed. (Makes chit larger.)

#	FIELD	Notes
3	<b>LINES AFTER PREAMBLE</b>	Enter the number of lines you wish to feed after the preamble and before the first receipt print line.
4	<b>LINES BEFORE POSTAMBLE</b>	Enter the number of lines you wish to after the last receipt line and before the postamble.
5	<b>BUFF RECEIPT: Y=STUB/N=FULL</b>	A stub receipt contains only the total, tender and transaction information. A full receipt includes item detail.
6	<b>PRT RCPT WHEN SIGN ON/OFF</b>	If Y, a receipt is printed whenever an employee signs off or on.
7	<b>PRT RCPT WHEN CLOCK IN/OUT</b>	If Y, a receipt is printed whenever an employee clocks in or out.
8	<b>CONDENSE TRAY SBTL RECEIPTS</b>	Prints each separate tray subtotal receipt without preamble/postamble.
9	<b>JOURNAL: Y=REAL TIME/N=BATCH</b>	Prints journal on journal printer (or updates electronic journal) line by line (real time) or at transaction finalization (batch).
10	<b>PRT PLU CODE WITH DESC</b>	If Y, both the PLU# and descriptor will print when a PLU is registered.
11	<b>TRANSACTION # IS RANDOM</b>	If Y, the transaction # is generated randomly, rather than sequentially.
12	<b>HOME CURRENCY SYMBOL</b>	Select the currency symbol for display, receipts, etc. (\$ is default.)
13- 17	<b>CURRENCY (1-5)SYMBOL</b>	Select the currency symbols to be used for the currency conversion function keys.
18	<b>PRINT TENDER ON RECEIPT</b>	If N, the tender will not print on the receipt.
19	<b>DISABLE LINE FIND ON SLIP</b>	If an optional slip printer is used for hard check operation, set this flag to Y to print without automatic line feed.
20	<b>GUEST CHECK PRE/POSTAMBLE</b>	Select NONE, GUEST CHECK LOGO MESSAGE, or LOGO MESSAGE to determine the content of the guest check preamble/postamble
21	<b>PRINT RECEIPT AUTOMATICALLY</b>	Choose Y to generate a receipt automatically when transactions are tendered.
22	<b>PRT RCPT AFT TIME CLK EDIT</b>	If Y, a receipt is printed whenever an employee's time is edited.
23	<b>PRINT GROUP NAME WHEN PRINTING ITEMS BY GROUP</b>	If you set PRINT ON RECEIPT:ITEMS BY GROUP to Y (General Printing Option #1), and if you set this option to Y, then the group name will be printed on the receipt.



#	FIELD	Notes
24	<b>PRT GUEST CHK PRT CNT ON GC</b>	If Y, a counter of the number of times the guest check has been printed appears on the check.
25	<b>PRINT IN DOUBLE</b>	You can choose double-width printing for Total, Tender, Change, and/or Order #
26	<b>PRT RCPT AUTOMATIC. IN VOID MODE</b>	If Y, a receipt will automatically be printed for transactions in VOID mode.
27	<b>PRT # OF ITEMS ON RECEIPT</b>	If Y, a count of the number of items will appear on each receipt.
28	<b>ALLOW MULTIPLE RECEIPTS</b>	If Y, more than one copy of the receipt can be issued after the sale.
29	<b>ITEMS ON RCPT IS # OF ITEMS PRINTED ONLY</b>	If Y, the item count on the receipt will include only items printed on the receipt, and will not include items programmed not to print on the receipt.
30	<b>PRINT TIP ON EFT RECEIPT</b>	If Y, prints tip line on credit card receipt.
31	<b>COPY OF EFT RECEIPT</b>	If Y, prints copy of credit card transaction receipt.
32	<b>TURN OFF AUTO CUTTER</b>	If Y, auto cutter is not enabled.
33	<b>PRE LOGO IMAGE ON RCT(0-22)</b>	Select one of the loaded bit map images.
34	<b>POST LOGO IMAGE ON RCT(0-22)</b>	Select one of the loaded bit map images.
35	<b>PRE LOGO IMAGE ON GC (0-22)</b>	Select one of the loaded bit map images.
36	<b>POST LOGO IMAGE ON GC (0-22)</b>	Select one of the loaded bit map images.

## Report Printing Options

1. Select REPORT PRINTING OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The report printing options display with the first option field selected. (There are two pages of report printing options.)

```

REPORT PRINTING OPTIONS
1. ZERO SKIP:
    FINANCIAL REPORT      Y
    PLU REPORT            Y
    EMPLOYEE REPORT      Y
    GROUP REPORT         Y
    TIME PERIOD REPORT   Y
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

2. Select fields and change information in the same manner as described for general options.

```

REPORT PRINTING OPTIONS
1. ZERO SKIP:
    ALL OTHER REPORTS    Y
2. PRT % OF SALES ON PLU RPT  Y
3. PRT LINKED GROUP ON PLU RPT Y
4. PROMO/WASTE TTL ON PLU RPT  N
5. INDIV ITEM USAGE QTY ON PLU N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

REPORT PRINTING OPTIONS
6. CNT ON TIME RPT IS CUSTOMER▶
7. USE FUNC KEY DESC IN REPORT:
    REPORT DESCRIPTOR▶
8. PRT MIN.STK RPT AFTER FIN.  N
9. PRT GRAND TTL ON FINAN RPT  Y
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

REPORT PRINTING OPTIONS
10.PRT GROUPS BY EMPLOYEE RPT
    AFTER EMPLOYEE REPORT  N
11.PRT INDIV PLU ON FOOD COST  N
12.AUTO CUT STRING REPORT     N
13.PRT CLK IN/OUT ON TM KEEP  N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

### Report Printing Options Program Notes

#	FIELD	Notes
1	ZERO SKIP	Choose whether to print or skip totals with a zero value on each of the listed reports.
2	PRINT % OF SALES ON PLU RPT	If Y, the percentage of each PLUs sales is calculated and printed on the PLU report.
3	PRT LINKED GROUP ON PLU RPT	If Y, each item on the PLU report will also print the group number of each group to which the PLU is linked.
4	PROMO/WASTE TTLS ON PLU RPT	If Y, the promo and waste detail for each PLU will print on the PLU report.
5	INDIV ITEM USAGE QTY ON PLU	If Y, PLU report is adjusted to reflect promo/waste totals.
6	CNT ON TIME RPT IS	Select Customer or Guest.
7	USE FUNC KEY DESC IN REPORT	Financial/employee reports include totals for some function keys. The descriptor that appears on the report can be the programmed function key descriptor (see "Function Key" on page 75) or can be the report descriptor (see "Report Descriptors" on page 142.)
8	PRT MIN.STK RPT AFTER FIN.	If Y, an X1 minimum stock report will automatically follow any financial X or Z report.
9	PRT GRAND TTL ON FINAN RPT	If Y, the Grand Total will print on the Financial report.
10	PRT GROUPS BY EMPLOYEE RPT AFTER EMPLOYEE REPORT	If Y, the Groups by Employee report will automatically print after the Employee report.
11	PRT INDIV PLU ON FOOD COST	If Y, Food Cost report will print out costs for each individual PLU. If, N will print a summary.
12	AUTO CUT STRING REPORT	If Y, auto cutting printers will auto cut between reports.
13	PRT CLK IN/OUT ON TM KEEP	If Y, each time clock entry will print out on the Time Keeping report. If N, only total hours will print.

## Report Options

1. Select REPORT OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The report options display with the first option field selected. (There are two pages of report printing options.)

```

REPORT OPTIONS
1. ONLY TTL ON PROD MIX GRP R.  N
2. ONLY ITEM W ACT. INV ENTRY  Y
3. CASH DECLARATION COMPULSORY  N
4. SIGN ON EMP. BEFORE REPORTS  N
5. ENFORCE ACT. INV BEFORE Z1  N
6. RETAIN ACT. INV ENTRY IN X1  N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

2. Select fields and change information in the same manner as described for general options.

```

REPORT OPTIONS
7. RESET PLU RPT AT INVEN Z1  N
8. RESET INVEN RPT AT PLU Z1  N
9. TIME KEEPING: Y=MIN/N=100  Y
10. OMIT TAX TTL FM NET SALE GT  N
11. ALLOW Z OF OPEN CHECK RPT  Y
12. CONFIRM B4 TTL RESET ON Z  N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

REPORT OPTIONS
13. RESET AFTER FINANL Z REPORT:
    GROSS SALES GT  N
    NET SALES GT  N
    NEGATIVE SALES GT  N
    Z COUNTER  N
    CONSECUTIVE #  N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

REPORT OPTIONS
14. VOID MODE TTL ADD TO GT  Y
15. ALLOW Z WITH OPEN ORDERS  N
16. ALLOW Z STOCK REPORT  N
17. ALLOW Z1 TIME KEEPING REPORT
    WHEN EMP. ARE CLOKED IN  N
18. AVG. GST ON FIN IS FROM GST  N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

### Report Options Program Notes

#	FIELD	Notes
1	<b>ONLY TTL ON PROD MIX GROUP R.</b>	If Y, skips sales by time period on the Product Mix report.
2	<b>ONLY ITEMS W ACT. INV ENTRY</b>	Affects the Inventory report (reporting ingredients from the recipe system). If Y, the Inventory report will report only those items where actual inventory has been entered through the EDIT INVENTORY ITEM function of X-mode.
3	<b>CASH DECLARATION COMPULSORY</b>	If Y, you must declare the amount of cash before taking any report that reveals the expected cash-in-drawer. This encourages accurate reporting and over/short amounts are calculated and printed.
4	<b>SIGN ON EMP. BEFORE REPORTS</b>	If Y, an employee must be signed on in REG mode before a report may be taken.
5	<b>ENFORCE ACT. INV BEFORE Z1</b>	If Y, you must enter actual inventory before running an inventory report.
6	<b>RETAIN ACT. INV ENTRY IN X1</b>	If Y, actual inventory entries are retained after an X Inventory report. Use N, if you are doing inventory spot-checks on selected items.
7	<b>RESET PLU RPT AT INVEN Z1?</b>	If Y, a Z1 PLU report will automatically be generated when an Inventory Z1 is taken.
8	<b>RESET INVEN RPT AT PLU Z1?</b>	If Y, an Inventory Z1 will automatically be generated when a Z1 PLU report is taken.
9	<b>TIME KEEPING: Y=MIN/N=100</b>	Determine whether hours worked are recorded and calculated in minutes or decimal units of an hour.
10	<b>OMIT TAX TTL FM NET SALE GT</b>	Choose Y, to omit tax totals from the Net Sales Grand total on the financial report.
11	<b>ALLOW Z OF OPEN CHECK RPT</b>	Choose Y, to allow a Z open check report.
12	<b>CONFIRM B4 TTL RESET ON Z</b>	If Y, a warning will display before any Z report is initiated.
13	<b>RESET AFTER FINANL Z REPORT:</b>	Select which totals and counters are reset when a Z1 Financial report is executed.
14	<b>VOID MODE TTL ADD TO GT</b>	If Y, activity in the VOID key lock position adds to grand totals.
15	<b>ALLOW Z WITH OPEN ORDERS</b>	If Y, any Z report is disabled until open orders are closed.

#	FIELD	Notes
16	ALLOW Z STOCK REPORT	If Y, resetting the Stock report is allowed.
17	ALLOW Z1 TIME KEEPING REPORT WHEN EMP. ARE CLOCKED IN	If Y, the time keeping report can be run when employees are clocked in.
18	AVG. GST ON FIN IS FROM GST	If N, the AVG/GST (average sale per guest or customer) is calculated from customer count; if Y, is calculated from guest count from GUEST key use.

## Time Keeping Options

1. Select TIME KEEPING OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The time keeping options display with the first option field selected. (There is one page of time keeping options.)

```

TIME KEEPING OPTIONS
1. OVERTIME HOUR IS USED F DAY
2. HOURS PER OVERTIME STARTS 008
3. OVERTIME FACTOR 1.5
4. COMP OUT FOR BREAK OR OUT Y
5. TIP REPORTING % OF SAL15.0000
6. EMP. TIME-IN/O EMPLOYEE#
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

2. Select fields and change information in the same manner as described for general options.

```

TIME KEEPING OPTIONS
7. CLK IN/OUT EMP ON Z TM KEEP N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### Time Keeping Option Program Notes

#	FIELD	Notes
1	OVERTIME HOUR IS USED F	Select Day or Week for overtime hours.
2	HOURS PER OVERTIME STARTS	Enter the number of hours that must be worked per day or week before overtime starts. For example, if field #1 is day, enter 8 hours, or if field #1 is week, enter 40 hours.
3	OVERTIME FACTOR	Enter the factor times which the standard pay rate is multiplied to determine overtime pay, i.e. enter 1.5 if rate is time and one half, or enter 2.0 if rate is double time.
4	COMP OUT FOR BREAK OR OUT	When clocking out there is a choice for [OUT FOR BREAK] or [OUT]. If Y, you must enter the appropriate number for either choice, rather than just pressing ENTER to choose the default.
5	TIP REPORTING % OF SAL	If Y, the percentage entered here is calculated and reported on the Employee report.
6	EMPLOYEE TIME-IN/O	Select Employee # or Secret Code.

#	FIELD	Notes
7	CLK IN/OUT EMP ON Z TM KEEP	If Y, all employees clocked in at the time of the Z Time Keeping report will be clocked out for the report and clocked back in after the report.



## E.J. (Electronic Journal) & Detail Printing Options

1. Select E.J. PRINTING OPTIONS from the SYSTEM OPTION PROGRAMMING screen. The first option field is selected. (There are two pages of E.J. & Detail Printing options.)
2. Select fields and change information in the same manner as described for general options.

```

E.J. & DETAIL PRINTING OPTI
1. ACTIVATE ELECTRONIC JOURNAL N
2. DISP E.J. BUFF FULL WARNING N
3. E.J. OVERRIDE ON BUFF FULL  N
4. SEND TO ELECTRONIC JOURNAL:
   CASH TRANSACTIONS           N
   CHECK TRANSACTIONS          N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

E.J. & DETAIL PRINTING OPTI
4. SEND TO ELECTRONIC JOURNAL:
   MISC TENDER TRANSACTIONS N
   TRANSACTIONS WITH %      N
   RECD ACCT & PAID OUT     N
   RETURN TRANSACTIONS      N
   TRANS. WITH ERR.CORR&VOID N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

E.J. & DETAIL PRINTING OPTI
4. SEND TO ELECTRONIC JOURNAL:
   NO SALES N
   CANCEL TRANSACTIONS  N
   TRANSACT WITH NEG. ITEMS N
   REPORTS              N
   PROGRAM SCANS       N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

E.J. & DETAIL PRINTING OPTI
4. SEND TO ELECTRONIC JOURNAL:
   CHECK TRACKING N
5. SEND TO DETAIL:
   ONLY TRANS WITH NEG ITEMS N
   REPORTS                  N
   PROGRAM SCANS           N
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

```

E.J. & DETAIL PRINTING OPTI
6. CONDENSED PRINT ON DETAIL N
7. PRINT NEGA. LINES IN BOLD  N
8. DISABLE REG. DETAIL PRINTER N
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

**E.J. (Electronic Journal) & Detail Printing Option Program Notes**

#	FIELD	Notes
1	<b>ACTIVATE ELECTRONIC JOURNAL</b>	Select Y to activate the electronic journal.
2	<b>DISP E.J. BUFF FULL WARNING</b>	Select Y to display a warning message when the electronic journal is full.
3	<b>E.J. OVERRIDE ON BUFF FULL?</b>	Select Y to allow operations to continue when the electronic journal is full. Only the most current transactions will be maintained as memory allows.
4	<b>SEND TO ELECTRONIC JOURNAL:</b>	<p>For each type of function or transaction listed, select Y or N to determine it will be recorded in the electronic journal.</p> <ul style="list-style-type: none"> <li>• CASH TRANSACTIONS</li> <li>• CHECK TRANSACTIONS</li> <li>• MISC TENDER TRANSACTIONS</li> <li>• TRANSACTIONS WITH %</li> <li>• RECD ACCT &amp; PAID OUT</li> <li>• RETURN TRANSACTIONS</li> <li>• TRANSACTIONS WITH ERR CORR&amp;VOID</li> <li>• NO SALES</li> <li>• CANCEL TRANSACTIONS</li> <li>• TRANSACTIONS WITH NEGATIVE ITEMS**</li> <li>• REPORTS</li> <li>• PROGRAM SCANS</li> <li>• CHECK TRACKING</li> </ul> <p>**Regardless of other settings, will send only transactions with negative items, % entries, tenders, etc. to the journal.</p>
5	<b>SEND TO DETAIL:</b>	<p>For each type of function or transaction listed, select Y or N to determine it will be sent to the appropriate detail/journal printer.</p> <ul style="list-style-type: none"> <li>• TRANSACTIONS WITH NEGATIVE ITEMS**</li> <li>• REPORTS</li> <li>• PROGRAM SCANS</li> </ul> <p>**Regardless of other settings, will send only transactions with negative items, % entries, tenders, etc. to the detail.</p>
6	<b>CONDENSED PRINT ON DETAIL</b>	If Y, produces small print on detail
7	<b>PRINT NEGA. LINES IN BOLD</b>	If Y, negative lines are reverse print.
8	<b>DISABLE REG. DETAIL PRINTER</b>	If Y, journal (detail) printer is turned off.

# Taxes

1. Select TAXES from the P-Mode menu to display the TAX PROGRAMMING Screen.
2. Choose a tax from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the  $\uparrow$  or  $\downarrow$  keys to move the cursor to your choice and press **ENTER**.

3. The tax calculation pop-up window displays. Select ADD ON, TAX TABLE, or VAT.

TAX PROGRAMMING

1. TAX 1	ADD ON
2. TAX 2	ADD ON
3. TAX 3	ADD ON
4. TAX 4	ADD ON

▼ ESC ENTER PAGE UP/DN  $\uparrow\downarrow$

TAX PROGRAMMING

3. TAX 1	ADD ON
4. TAX 2	ADD ON
5. TAX 5	ADD ON
6. TAX 6	ADD ON

▲ ESC ENTER PAGE UP/DN  $\uparrow\downarrow$

TAX PROGRAMMING

1. TAX 1	ADD ON
2. TAX 2	TAX TABLE
3. TAX 3	VAT
4. TAX 4	

▼ ESC ENTER PAGE UP/DN  $\uparrow\downarrow$

## Add On Taxes

Options for add on taxes 1-5 are shown on the screen at the right.

1. Press the ↑ ↓ ← → keys to select the field you wish to edit. Type new information and press **ENTER**.
2. Press **ESC** to return to the TAX PROGRAMMING MENU.

```
TAX#1 BY ADD ON
RATE                00.000
THRESHOLD           00.00
HIGH HOLD          0000000.00
```

**NOTE: Options for add on tax 6 are shown on the screen at the right. Tax 6 should be used for the Canadian Goods and Services tax (GST). Here you have the option of taxing the GST by other applicable rates (tax on tax).**

```
TAX#6 BY ADD ON
RATE                00.000
THRESHOLD           00.00
HIGH HOLD          0000000.00
                   1 2 3 4 5
GST (TAX6) IS TAXABLE : N N N N N
```

### Add On Taxes Program Notes

FIELD	Notes
RATE	Enter the tax rate. If fractional, press the decimal and up to three digits.
THRESHOLD	Enter the lowest amount where tax is charged.
HIGH HOLD	Tax is no longer charged after the amount entered here.
GST(TAX6) IS TAXABLE	Indicate the tax number of any taxes that accrue on the GST tax amount (tax on tax).

## Tax Table

Options for taxes by tax table are shown on the screen at the right.

1. Press the ↑ ↓ ← → keys to select the field you wish to edit. Type new information and press **ENTER**. Press **PAGE UP** or **PAGE DN** to access additional break point differences. You can program a maximum of 100 break points.
2. Press **ESC** to return to the TAX PROGRAMMING MENU.

TAX#1 BY TABLE	
MAXIMUM NON-TAXABLE AMOUNT	00.10
FIRST TAX AMOUNT CHARGED	00.01
# OF NON REPEAT BREAKS	05
# OF REPEAT BREAKS	03
BREAK POINT 1	00.21
BREAK POINT 2	00.38

Entries shown are for the Illinois 6% sample table shown on the next page.

### Tax Table Programming Notes

Field	Note
<b>FIRST TAX AMOUNT CHARGED</b>	Enter the first tax amount that is charged. For this example the entry is 0.01.
<b>MAXIMUM NON-TAXABLE AMOUNT</b>	Enter the highest amount where no tax is charged. For this example the entry is 0.10.
<b># OF NON-REPEAT BREAKS</b>	Enter the number of Non-repeat breaks. For this example the entry is 5.
<b># OF REPEAT BREAKS</b>	Enter the number of repeat breaks. For this example the entry is 3.
<b>BREAK POINT (1-100)</b>	Enter the high amount in the range. For example, if the break point is .22 - .38, enter .38 for the break point.

### **Tax Table Programming Example - Illinois 6% Tax Table**

1. Examine the printed tax table for the tax you are programming.
2. Examine the pattern of break point differences to determine when the break points begin to repeat. Mark the beginning break points that do not fit a pattern as “non-repeat breaks.” Mark the break points that are repeating in a pattern as “repeat breaks.” Count the number of repeat and non-repeat breaks.

<b>Tax Charged</b>	<b>Sale Amount Range</b>	<b>Break point s</b>
\$0.00	\$0.00 - \$0.10	Non-Repeat
\$0.01	\$0.11 - \$0.21	
\$0.02	\$0.22 - \$0.38	
\$0.03	\$0.39 - \$0.56	
\$0.04	\$0.57 - \$0.73	
\$0.05	\$0.74 - \$0.91	Repeat
\$0.06	\$0.92 - \$1.08	
\$0.07	\$1.09 - \$1.24	
\$0.08	\$1.25 - \$1.41	
\$0.09	\$1.42 - \$1.58	
\$0.10	\$1.59 - \$1.74	
\$0.11	\$1.75 - \$1.91	
\$0.12	\$1.92 - \$2.08	
\$0.13	\$2.09 - \$2.24	
\$0.14	\$2.25 - \$2.41	

## VAT

Options for VAT taxes 1-5 are shown on the screen at the right.

1. Press the ↑ ↓ ← → keys to select the field you wish to edit. Type new information and press **ENTER**.
2. Press **ESC** to return to the TAX PROGRAMMING MENU.

TAX#1	BY	VAT	
RATE			00.000

---

**Options for VAT tax 6 are shown on the screen at the right. Tax 6 should be used for the Canadian Goods and Services tax (GST). Here you have the option of taxing the GST by other applicable rates (tax on tax).**

---

TAX#6	BY	VAT	
RATE			00.000
GST (TAX6) IS TAXABLE :			1 2 3 4 5 N N N N N

### *VAT Program Notes*



FIELD	Notes
<b>GST(TAX6) IS TAXABLE</b>	Indicate the tax number of any taxes that accrue on the GST tax amount (tax on tax).

# Messages

1. Choose MESSAGES from the P-MODE PROGRAMMING MENU to display the MESSAGES MENU screen.
2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

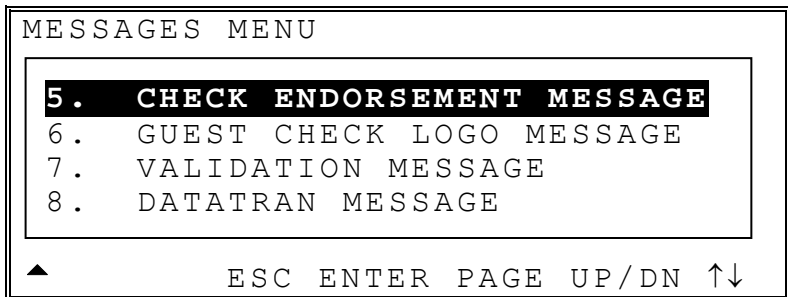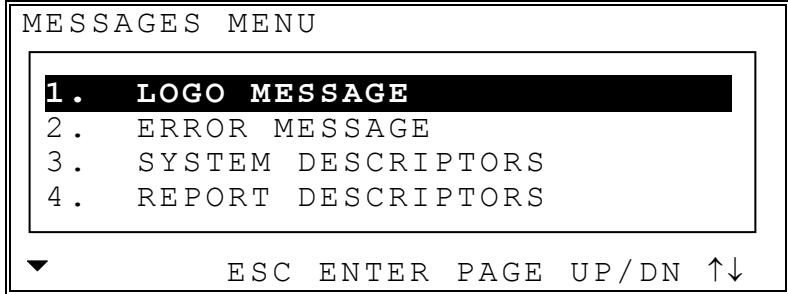

Press **↑** or **↓** to move the cursor to your choice and press **ENTER**.











## Logo Message

1. Choose **LOGO MESSAGE** to display the **LOGO MESSAGE PROGRAMMING** screen.
2. Set the **JUSTIFY** option to center, left or right justify your message.
3. Type the preamble message in the space provided, up to 40 characters per line. Press the  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  keys to move the cursor to a new position.
4. Press **PAGE DN** to program the logo postamble. Type the message in the space provided. Up to 40 characters per line. Press the  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  keys to move the cursor to a new position.
5. Press **ESC** to exit the screen and return to the **MESSAGES MENU** screen.

```
LOGO MESSAGE PROGRAMMING
JUSTIFY:                                CENTER 
PREAMBLE #1:
PREAMBLE #2:

```

```
LOGO MESSAGE PROGRAMMING ALPHA
PREAMBLE #3:

PREAMBLE #4:
PREAMBLE #5:

```

```
LOGO MESSAGE PROGRAMMING ALPHA
POSTAMBLE #1:

POSTAMBLE #2:
POSTAMBLE #3:

```

```
LOGO MESSAGE PROGRAMMING ALPHA
POSTAMBLE #4:

POSTAMBLE #5:

```

## Error Messages

Using this program, you can change the standard error messages from the default settings to messages that meet your language or application needs.

---

**Note: Use (22) P-Mode Program Scan Printing to print a list of error messages.**

---

1. Choose **ERROR MESSAGE** from the **MESSAGES MENU** to display the **ERROR MESSAGE PROGRAMMING** screen.
2. Select a message to edit. Press the **↑** or **↓** keys and the **PAGE UP** or **PAGE DN** keys as necessary.
3. With a message selected, type a new message up to 30 characters in length.
4. Press **ENTER** to finalize each message entry.
5. Press **ESC** to exit the screen and return to the **MESSAGES MENU** screen.

```
ERROR MESSAGE PROGRAMMING ALPHA
  

(NOT USE)
(NOT USE)
AMOUNT REQUIRED
BAD VALUE
BUFFER FULL
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## System Descriptors

Using this program, you can change the standard system descriptors from the default settings to messages that meet your language or application needs.

The length of each descriptor varies. For example day of week fields are 3 characters, while other printed messages are 5 characters or more.

---

**Note: Use (22) P-Mode Program Scan Printing to print a list of system descriptors.**

---

1. Choose **SYSTEM DESCRIPTORS** to display the **SYSTEM DESCRIPTOR PROGRAMMING** screen.

2. Press the **↑↓←→** keys to move the cursor to a new position. Type a new message over the default descriptor.

3. Press **ESC** to exit the screen and return to the **MESSAGES MENU** screen.

SYSTEM	DESCRIPTOR	PGM	ALPHA
#001			<b>SUN</b>
#002			MON
#003			TUE
#004			WED
#005			THU
▼	ESC	Y/N	ENTER PAGE UP/DN ↑↓←→

## Report Descriptors

Using this program, you can change the standard descriptors that appear on financial and employee reports from the default settings to descriptors that meet your language or application needs.

1. Choose **REPORT DESCRIPTORS** from the **MESSAGES MENU**. From the pop-up menu, select **EMPLOYEE** or **FINANCIAL** report to edit the descriptors on the selected report.

```
MESSAGES MENU
1. LOGO MESSAGE
2. ERROR MESSAGE
3. SYSTEM DESCRIPTORS
4. REP 1.FINANCIAL REPORT
   2.EMPLOYEE REPORT
```

2. Select a descriptor to edit. Press the **↑** or **↓** keys and the **PAGE UP** or **PAGE DN** keys as necessary.

```
FIN. REPORT DESC. PROGRAM ALPHA
#001                +PLU LVL1 TTL
#002                -PLU LVL1 TTL
#003                +PLU LVL2 TTL
#004                -PLU LVL2 TTL
#005                +PLU LVL3 TTL
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

3. With a descriptor field selected, type a new descriptor up to 16 characters in length.
4. Press **ENTER** to finalize each descriptor entry, press **ESC** to exit the screen and return to the **MESSAGES MENU** screen.

## Check Endorsement Message

1. Choose **CHECK ENDORSEMENT MESSAGE** to display the **CHECK ENDORSEMENT MESSAGE PROGRAMMING** screen.

```
CHECK ENDORSEMENT MSG PROGR
JUSTIFY :                CENTER █
LINE #1
LINE #2
▼
```

2. Set the **JUSTIFY** option to center, left or right justify your message.

```
CHECK ENDORSEMENT MSG PROGRALPHA
LINE #3
█
LINE #4
LINE #5
◆
```

3. Type a message in the space provided. Up to 40 characters per line. Press the **↑↓←→** keys to move the cursor to a new position.

```
CHECK ENDORSEMENT MSG PROGRALPHA
LINE #6
█
LINE #7
LINE #8
◆
```



4. Press **PAGE DN** to program lines 6-10 of the message.



5. Press **ESC** to exit the screen and return to the **MESSAGES MENU** screen.



```
CHECK ENDORSEMENT MSG PROGRALPHA
LINE #9
█
LINE #10
▲
```



## Guest Check Logo Message

1. Choose **GUEST CHECK MESSAGE** to display the **GUEST CHECK MESSAGE PROGRAMMING** screen.
2. Set the **JUSTIFY** option to center, left or right justify your message
3. Type a message in the space provided. Up to 40 characters per line. Press the  $\uparrow \downarrow \leftarrow \rightarrow$  keys to move the cursor to a new position.
4. Press **PAGE DN** to program lines 6-10 of the message.
5. Press **ESC** to exit the screen and return to the **MESSAGES MENU** screen.

```
GUEST CHECK LOGO MSG PROGR
JUSTIFY :                CENTER 
LINE #1
LINE #2

```

```
GUEST CHECK LOGO MSG PROGRAALPHA
LINE #3

LINE #4
LINE #5

```

```
GUEST CHECK LOGO MSG PROGRAALPHA
LINE #6

LINE #7
LINE #8

```

```
GUEST CHECK LOGO MSG PROGRAALPHA
LINE #6

LINE #7

```

## Validation Message

1. Choose **VALIDATION MESSAGE** to display the **VALIDATION MESSAGE PROGRAMMING** screen.
2. Set the **JUSTIFY** option to center, left or right justify your message.
3. Type a message in the space provided. Up to 40 characters per line. Press the  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  keys to move the cursor to a new position.
4. Press **ESC** to exit the screen and return to the **MESSAGES MENU** screen.

```
VALIDATION MESSAGE PROGRAM
JUSTIFY :                               CENTER 
LINE #1
LINE #2

```

## DataTran Message

1. Choose DATATRAN MESSAGE to display the DATATRAN MESSAGE PROGRAMMING screen.
2. Set the JUSTIFY option to center, left or right justify your message.
3. Type a merchant information in the spaces provided. Up to 32 characters per line. Press the  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  keys to move the cursor to a new position.
4. Press **ESC** to exit the screen and return to the MESSAGES MENU screen.

```
DATATRAN MESSAGE PROGRAM
```

```
JUSTIFY : CENTER 
```

```
MERCHANT NAME
```

```
MERCHANT ADDRESS 1
```



```
DATATRAN MESSAGE PROGRAM ALPHA
```

```
MERCHANT ADDRESS 2
```

```
MERCHANT PHONE NO.
```





---

# Window Look Up (WLU)

## Overview

There are three types of items that can be found on a Window Look-Up (WLU): condiments, functions, and PLUs. The same WLU can contain any combination of condiments, functions, and PLUs.

Specific features and rules for WLUs are summarized below:

- A specific WLU can be activated automatically after a PLU is entered. (See "PLU Programming" on page 61.)
- Pressing a WLU key on the keyboard can activate a specific WLU. (See "Keyboard Key Relocation in S-Mode Programming.") Or, by placing the WLU# key on the keyboard, any number of WLUs can be accessed by typing the WLU number and pressing the WLU# key.
- A WLU can be linked to a subsequent WLU in order to prompt an operator through a sequence of selections.
- Adding them in a specific order can control the order in which items appear on a WLU. Items can be deleted or items can be added in the middle of a list.
- The total number of WLUs and the capacity of each WLU is set in memory allocation. (See "Memory Allocation " in S-Mode Programming.) The default capacity of each WLU is 28 items; the maximum capacity is 50 items.

## WLU Programming

The first step in WLU programming is to select individual options for the WLU. Next, a list of items (Condiments, PLUs and/or functions) is assigned.

1. Select WINDOW LOOK UP (WLU) from the P-MODE PROGRAMMING MENU to display the WLU# PROGRAMMING Screen.

```

WLU#01 PROGRAMMING
1. TITLE :                WLU#1
2. ALLOW CONDIMENT          N
   ALLOW PLU                N
   ALLOW FUNCTIONS          N
3. # OF ITEM CHOICE (0=UNLIMIT) 00
4. ITEM MULTIPLICATION      N
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

2. Type the WLU number and press **ENTER**, or press **PAGE UP** or **PAGE DN** to scroll to the WLU you wish to program.

```

WLU#01 PROGRAMMING
5. EXIT FROM TABLE WITH DONE  Y
6. LINK TO WLU# (0=NO LINK)    00

EDIT ITEMS ▶

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

3. Press the ↑↓←→ keys to select a field to edit:

⇒ For yes/no fields, press the **Y/N** key to toggle from yes to no.

⇒ For numeric fields, type new value.

### WLU Program Notes

#	Field	Notes
1	<b>TITLE</b>	Enter a descriptor up to 12 characters in length.
2	<b>ALLOW CONDIMENTS</b> <b>ALLOW PLU</b> <b>ALLOW FUNCTIONS</b>	Select Y or N to determine the type of items that are allowed to display on the WLU. For example, if you select N for <b>ALLOW FUNCTIONS</b> , you cannot add a function to this WLU.

#	Field	Notes
3	<b># OF ITEM CHOICE (0=UNLIMITED)</b>	If you select 1 in this field, when a condiment is selected from the WLU, the WLU is automatically closed. In the same manner, if you select 2, the WLU is automatically closed after the second WLU is registered. If you select 0, any number of selections can be made. Pressing DONE then closes the WLU.
4	<b>ITEM MULTIPLICATION</b>	If Y, when a quantity of main items are sold, then condiments are entered by multiplication until the quantity of condiments matches the quantity of main items. For example, 5 of the main item "chicken dinner" are entered. The WLU displays the selections "regular" and "crispy". The WLU will close when the quantity of 5 is reached, i.e. 3 times "regular" and 2 times "crispy".

## Editing WLU Items

1. If you wish to add or delete items from the WLU, select EDIT ITEMS and press ENTER.

```
WLU#01 PROGRAMMING
5. EXIT FROM TABLE WITH DONE      Y
6. LINK TO WLU# (0=NO LINK)        00

EDIT ITEMS ▶

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

2. On the right side of the screen, the WLU window will display looking exactly like it will when it is used in operations. An window on the left portion of the screen displays the options:

```
WLU#01 PROGRAMMING

PLU
FUNCTION
ESC
VOID ITEM
DONE

WLU#1
↑↓→← ENT DONE
```

## Adding PLUs or Condiments to a WLU

- To add PLUs or Condiments to the WLU:
  - Press the PLU key on the keyboard, or
  - Type the PLU number and press **PLU**, or
  - Press **PLU** directly to display the PLU list.

```

WLU#01 PROGRAMMING
          PLU LIST
00000000000120 ORIGINAL
00000000000123 CRISPY
00000000000135 BBQ
00000000000136 CATSUP
00000000000138 MUSTARD
00000000000140 ONION
  
```

- Press the **↑** or **↓** keys to select a PLU or condiment PLU from the list.

```

WLU#01 PROGRAMMING
          PLU LIST
00000000000141 PICKLE
00000000000142 RELISH
00000000000143 MAYO
00000000000144 BUTTER
00000000000145 NO
00000000000146 ADD
  
```

- Press **ENTER** to place the PLU or condiment PLU item on the WLU.

```

WLU#01 PROGRAMMING
PLU
FUNCTION
ESC
VOID ITEM
DONE
          WLU#1
1 PICKLE
          ↑ ↓ → ← ENT DONE
  
```

- Continue to add items by either pressing PLU key, typing the PLU number and pressing **ENTER**, or selecting the PLU from the PLU list. The last item entered on the WLU list remains selected.

```

WLU#01 PROGRAMMING
PLU
FUNCTION
ESC
VOID ITEM
DONE
          WLU#1
143 MAYO
142 RELISH
144 BUTTER
          ⬇ ↑ ↓ → ← ENT DONE
  
```

When a WLU contains more than 3 items, the scroll indicators (⬇, ⬆, or ⬇) show that more items appear below, above, or above and below the items currently displayed.

## Deleting Items From a WLU

- To delete an item, press  $\uparrow$  or  $\downarrow$  to select the item to delete. Press **DELETE** or **VOID ITEM** to delete the item.

WLU#01 PROGRAMMING	
PLU	WLU#1
FUNCTION	143 MAYO
ESC	<b>142 RELISH</b>
VOID ITEM	144 BUTTER
DONE	$\blacktriangleleft$ $\uparrow$ $\downarrow$ $\rightarrow$ $\blacktriangleright$ ENT DONE

- Note that items are automatically shifted up to fill the space the deleted item occupied.

WLU#01 PROGRAMMING	
PLU	WLU#1
FUNCTION	143 MAYO
ESC	<b>144 BUTTER</b>
VOID ITEM	145 NO
DONE	$\blacktriangleleft$ $\uparrow$ $\downarrow$ $\rightarrow$ $\blacktriangleright$ ENT DONE

## Add an Item In a Specific Position Within a WLU

- To add an item in a different position within the list, move the cursor to the position above where you wish to insert the item.

WLU#01 PROGRAMMING	
PLU	WLU#1
FUNCTION	<b>143 MAYO</b>
ESC	144 BUTTER
VOID ITEM	145 NO
DONE	$\blacktriangleleft$ $\uparrow$ $\downarrow$ $\rightarrow$ $\blacktriangleright$ ENT DONE

- Add a new PLU or condiment.

WLU#01 PROGRAMMING	
PLU	WLU#1
FUNCTION	143 MAYO
ESC	<b>147 LETTUCE</b>
VOID ITEM	144 BUTTER
DONE	$\blacktriangleleft$ $\uparrow$ $\downarrow$ $\rightarrow$ $\blacktriangleright$ ENT DONE

- Move the cursor to the end of the list where you can continue adding items to the end of the WLU list.

WLU#01 PROGRAMMING	
PLU	WLU#1
FUNCTION	147 LETTUCE
ESC	144 BUTTER
VOID ITEM	<b>145 NO</b>
DONE	$\blacktriangleleft$ $\uparrow$ $\downarrow$ $\rightarrow$ $\blacktriangleright$ ENT DONE

## Adding Functions to a WLU

1. To add functions to the WLU, press the function you wish to add or press **ESC** to view a function list.

**NOTE: ALLOW FUNCTIONS must be set to Y (yes) on the WLU programming window to allow functions to be included in the WLU.**

```
WLU#01 PROGRAMMING
┌───────────┬───────────┐
│ PLU        │ WLU#1     │
│ FUNCTION   │ 1  % 3   │
│ ESC        │ ↑↓→← ENT DONE │
│ VOID ITEM  │           │
│ DONE      │           │
└───────────┴───────────┘
```

2. Press **ESC**. The **FUNCTION LIST** displays.

```
WLU#01 PROGRAMMING
┌───────────┬───────────┐
│ FUNCTION LIST │           │
│ 1             │           │
│ 2             │           │
│ 3             │           │
│ 4             │           │
│ 5             │           │
│ 6             │           │
└───────────┴───────────┘
```

3. Use the **PAGE UP/PAGE** down or cursor keys select a function.


```
WLU#01 PROGRAMMING
┌───────────┬───────────┐
│ FUNCTION LIST │           │
│ ADD CHECK     │           │
│ BACK SPACE    │           │
│ BOLD          │           │
│ CANCEL        │           │
│ CAPS          │           │
│ CASH          │           │
└───────────┴───────────┘
```

4. Press **ENTER**. The updated WLU displays. Delete items and edit the WLU in the same manner as you would delete PLUs or condiments.

```
WLU#01 PROGRAMMING
┌───────────┬───────────┐
│ PLU        │ WLU#1     │
│ FUNCTION   │ 1  % 3   │
│ ESC        │ 2  ADD CHECK │
│ VOID ITEM  │ ↑↓→← ENT DONE │
│ DONE      │           │
└───────────┴───────────┘
```

## Exiting WLU Edit Items

1. Press **DONE** to exit the EDIT ITEMS window.
2. Continue to program WLUs as necessary or press **ESC** to return to the P-MODE PROGRAMMING MENU.

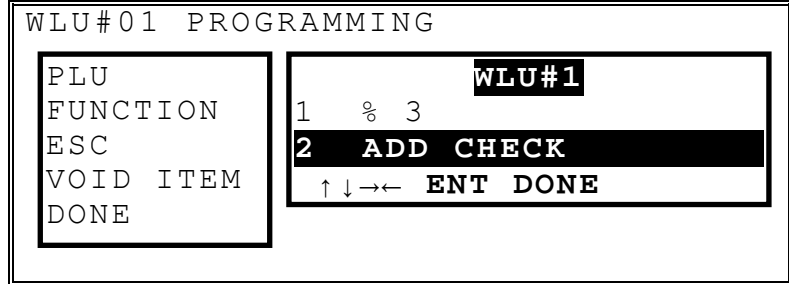



---

## Time Period

Memory allocation determines whether there are 24, 48, or 96 time periods. Time periods will default to hourly periods if 24 periods are selected in memory allocation; 30-minute periods if 48 periods are selected; 15-minute periods if 96 periods are selected.

Periods can be set to custom lengths using this program. If fewer periods are needed than are available, unneeded periods can be inactivated so that they will not appear on reports. To inactivate a period, replace the "Y" (active) for the period with an "N" (inactive).

All time units are based upon a 24-hour clock (military time).

1. Select **TIME PERIOD** from the **P-MODE PROGRAMMING MENU** to display the **TIME PERIOD PROGRAMMING** screen.

TIME PERIOD PROGRAMMING						
#	OF	PERIODS	SET	IN	MEMORY :	
1	<input checked="" type="checkbox"/>	0000-0029	6	Y	0230-0259	
2	<input type="checkbox"/>	0030-0059	7	Y	0300-0329	
3	<input type="checkbox"/>	0100-0129	8	Y	0330-0359	
4	<input type="checkbox"/>	0130-0159	9	Y	0400-0429	
5	<input type="checkbox"/>	0200-0229	10	Y	0430-0459	

2. Press the **↑ ↓ ← →** keys to select a field to edit.
3. Type new information into the field, press **ENTER**.
4. Press **ESC** to exit the **TIME PERIOD PROGRAMMING** screen.

---

# Employee

The employee file contains information for register operators as well as employees who use the register only to clock in or out (employee time keeping.) Specific functions that are allowed or disallowed for each employee are determined by assigning the employee to an authority level. (See "Authority Level" on page 160.)

Two 10 digit code numbers may be assigned for each employee. A time keeping code is used to clock in or out and a separate sign on code used to operate the register. The social security number is for reference only and appears only on reports.

The total number of employees (up to 999) is set in memory allocation. See "Memory Allocation" in "S-Mode Programming".

1. Select **EMPLOYEE** from the **P-MODE PROGRAMMING MENU** to display the **EMPLOYEE# PROGRAMMING** screen.
2. Type the **EMPLOYEE** number and press **ENTER**, or press **PAGE UP** or **PAGE DN** to scroll to the Employee you wish to program.
3. Press the **↑ ↓ ← →** keys to select a field to edit.
4. Enter the appropriate value using numeric keys. Values that are not allowed will not be accepted.
5. Press **ESC** to exit the **EMPLOYEE PROGRAMMING** screen.

```
EMPLOYEE# 01 PROGRAMMING
1. NAME EMPLOYEE1
2. SOCIAL SEC # 000-00-0000
3. CLOCK IN CODE 0000000000
4. OPERATING CODE 0000000000
5. LINK TO AUTHORITY LEVEL 1
6. OPEN DRAWER# (0-2) 1
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
EMPLOYEE# 01 PROGRAMMING
JOB1 J2 J3 J4 J5 J6
7. JOB CODE# 00 00 00 00 00 00
8. PAY RATE# 00 00 00 00 00 00
9. TRAINING MODE N
EDIT JOB CODES ▸
EDIT PAY RATES ▸
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

## Employee Program Notes

#	Field	Notes
3	<b>CLOCK IN CODE</b>	Enter a number (up to 10 digits in length) that will be used by this employee to clock in and/or out.
4	<b>OPERATING CODE</b>	Enter the secret code number (up to 10 digits in length) that can be used to sign in/out. Note that system option # 21 "EMPLOYEE SIGN-ON" must be set to "SECRET CODE" to use this number. See "General Function Options" on page 101.
5	<b>LINK TO AUTHORITY LEVEL</b>	Operations and programs that can be accessed by this employee are determined by selecting a authority level here. See "Authority Levels" on page 160 to define specific operations for each of 9 levels.
6	<b>OPEN DRAWER# (0-2)</b>	If drawer 0 is assigned, the employee can only perform check track postings (not payments).
7 8	<b>JOB CODE# PAY RATE#</b>	<p>An employee might have more than one job, possibly with a different pay rate for each job. For example, in a restaurant, an employee might work as a server one day, and on a different day or shift, work as a cashier.</p> <p>By assigning separate job codes and pay rates for each employee, the built in time clock can track and report hours and wage costs appropriately.</p> <p>See "Edit Job Codes" on page 158 and "Edit Pay Rates" on page 159 to set up the job codes and pay rates you need to use.</p> <p>See "Time Clock Procedures" in the <i>SER-7000 Operation Manual</i> for instructions on clocking on/off for different jobs. Note that the job code you assign for JOB1 is the default job code for clocking in/out.</p>
9	<b>TRAINING MODE?</b>	If Y, this employee will be in training, regardless of the training mode status of the entire register.

## Edit Job Codes

**Note: An employee with the appropriate authority level must be signed on to perform job code programming.**

Job codes are used to break down the hours worked for all employees into different categories (See "Labor Groups" report in the *Operation Manual*.) A breakdown of hours by job is also reported for each employee (See "Time Keeping" reports in the *Operation Manual*.)

The job codes to be used by all employees are set up here. There are 20 possible job codes. Each job code you wish to activate must be given a descriptor here.

- From any employee record screen, use the **CURSOR** keys to select **EDIT JOB CODES**.

```

EMPLOYEE#   01 PROGRAMMING
                JOB1 J2 J3 J4 J5 J6
7. JOB CODE#    00 00 00 00 00 00
8. PAY RATE#    00 00 00 00 00 00
9. TRAINING MODE                                N
EDIT JOB CODES ▶
EDIT PAY RATES ▶
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

- Press **ENTER** to display the **JOB CODE PROGRAMMING** screen.

- Up to twenty job codes can be programmed. Enter a descriptor to activate the associated job code#. Press **PAGE UP** or **PAGE DN** or press the **↑↓←→** to position the cursor for programming descriptors.

```

JOB CODE PROGRAMMING                ALPHA
JOB CODE1                            JOB#1
JOB CODE2                            JOB#2
JOB CODE3                            JOB#3
JOB CODE4                            JOB#4
JOB CODE5                            JOB#5
JOB CODE6                            JOB#6
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

- Press **ENTER** to finalize the descriptor entry and move to the next job code descriptor field.
- Continue to program job codes or press **ESC** to exit and return to the appropriate **EMPLOYEE # PROGRAMMING** screen.

## Edit Pay Rates

**Note: An employee with the appropriate authority level must be signed on to perform pay rate programming.**

The pay rates to be used by all employees are set up here. There are 50 pay rates.

1. From any employee record screen, press the **↑** or **↓** keys to select **EDIT PAY RATES**.

```
EMPLOYEE#  01PROGRAMMING
                JOB1 J2 J3 J4 J5 J6
7. JOB CODE#   00 00 00 00 00 00
8. PAY RATE#   00 00 00 00 00 00
9. TRAINING MODE                               N
EDIT JOB CODES ▸
EDIT PAY RATES ▸
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

2. Press **ENTER** to display pay rate **PROGRAMMING** screen.

3. Up to fifty pay rates can be programmed. Enter an amount to activate the associated pay rate#. Press **PAGE UP** or **PAGE DN** or press the **↑↓←→** to position the cursor for programming rates.

```
PAY RATE PROGRAMMING
PAY RATE1           00.00
PAY RATE2           00.00
PAY RATE3           00.00
PAY RATE4           00.00
PAY RATE5           00.00
PAY RATE6           00.00
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

4. Press **ENTER** to finalize the rate entry and move to the next job code descriptor field.
2. Continue to program pay rates or press **ESC** to exit and return to the appropriate **EMPLOYEE # PROGRAMMING** screen.

# Authority Levels

Each employee must be assigned to one of nine authority levels. See "Employee" on page 156 to assign an employee to an authority level. The selections made here for each authority level determine the operations that are allowed for each employee.

For example, in a restaurant an authority level with the descriptor *kitchen help* could be set to allow only clocking in/out, or an authority level with the descriptor *owner* could be set up to allow all functions. Other authority levels could be defined for servers, cashiers and managers that allow only the appropriate functions.

1. Select **AUTHORITY LEVELS** from the **P-MODE PROGRAMMING MENU** to display the **PROGRAMMING** screen.

```

AUTHORITY LEVEL PROGRAMMING
ALPHA DESCRIPTORS ▶
      AUTHORITY LEVEL : 123456789
1.CLK-IN/OUT ENTRY ONLYNNNNNNNNNN
2.CLOCK-IN BEFORE SALESNNNNNNNNNN
3.CLOCK-OUT W OPEN CHKSNNNNNNNNNN
4.GC ENTRIES ONLY          NNNNNNNNN
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

2. Press the **↑↓←→** keys, **PAGE UP** or **PAGE DN** to select the appropriate level and option. (Note that there are 4 pages of authority level options.)

```

AUTHORITY LEVEL PROGRAMMING
      AUTHORITY LEVEL : 123456789
5.GST# ENTRY ON NEW CHKNNNNNNNNNN
6.PAYMENT OF OWN GC          NNNNNNNNN
7.PAYMENT OF ANY GC         NNNNNNNNN
8.TRANSFER OF GC            NNNNNNNNN
9.VOID OF SERVICED ITEMNNNNNNNNNN
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

3. Press the **Y/N** key to toggle from yes to no.
4. Continue to select and change options as necessary. Press **ESC** to return to the **P-MODE PROGRAMMING** menu.

```

AUTHORITY LEVEL PROGRAMMING
      AUTHORITY LEVEL : 123456789
10.CANCEL AFTER RECALL  NNNNNNNNNN
11.CLOCK IN/OUT W MCR   NNNNNNNNNN
12.SIGN IN/OUT W MCR    NNNNNNNNNN
13.EDIT ANY CHECKS     NNNNNNNNNN
14.DESTINATION CHANGE  NNNNNNNNNN
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

AUTHORITY LEVEL PROGRAMMING
      AUTHORITY LEVEL : 123456789
15.COMBINE OWN SOFT CHKNNNNNNNNNN
16.COMBINE ANY SOFT CHKNNNNNNNNNN
17.TBL# TRANS IN R-MODENNNNNNNNNN
18.PLU PRC/HALO OVERRIDNNNNNNNNNN
19.SET DATE AND TIME    NNNNNNNNNN
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```
AUTHORITY LEVEL PROGRAMMING
  AUTHORITY LEVEL : 123456789
20.TIME CLOCK EDIT      NNNNNNNNNN
21.CASH DECLARATION     NNNNNNNNNN
22.K/B AND PRICE LEVEL  NNNNNNNNNN
23.EMPLOYEE FILE EDIT   NNNNNNNNNN
24.PRINT & RESET OF E. JNNNNNNNNN
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
AUTHORITY LEVEL PROGRAMMING
  AUTHORITY LEVEL : 123456789
25.JOB CODE EDIT        NNNNNNNNNN
26.PAY RATE EDIT        NNNNNNNNNN
27.INVENT. EDIT X MODE  NNNNNNNNNN
28.INVENT. EDIT P MODE  NNNNNNNNNN
29.AUTHORITY LEVEL EDITYYYYYYYYYY
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
AUTHORITY LEVEL PROGRAMMING
  AUTHORITY LEVEL : 123456789
30.SEAT# FOR EACH ENTRY NNNNNNNNNN
31.ENABLE TRAINING MODENNNNNNNNNN
32.ALLOW WLU FILE EDIT  NNNNNNNNNN
33.ALLOW NO SALE         NNNNNNNNNN
34.PAID BREAKS           NNNNNNNNNN
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
AUTHORITY LEVEL PROGRAMMING
  AUTHORITY LEVEL : 123456789
35.COMP. JOB CODE ENTRY NNNNNNNNNN
36.MAN. REQ. FOR CL INNNNNNNNNNNN
37.COMPULSORY TIP ENTRY NNNNNNNNNN
38.JOB CODE CHANGE      NNNNNNNNNN
39.PLU PRC CHANGE ONLY  NNNNNNNNNN
◆ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

```
AUTHORITY LEVEL PROGRAMMING
  AUTHORITY LEVEL : 123456789
40.EDIT PLU STOCK IN X  NNNNNNNNNN

▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
```

### **Authority Level Program Notes**

<b>#</b>	<b>FIELD</b>	<b>Notes</b>
<b>14</b>	<b>DESTINATION CHANGE</b>	If Y is set here, the operator has the option of selecting a destination (i.e. eat-in, take out, drive thru) other than the default.
<b>30</b>	<b>SEAT# FOR EACH ENTRY</b>	If seat # is implemented, and is not compulsory here, each item will default to seat "01".
<b>35</b>	<b>COMP. JOB CODE ENTRY</b>	If Y, a job code must be selected at clock in. If N, clock in will default to the first job code for the employee.
<b>37</b>	<b>COMPULSORY TIP ENTRY</b>	If Y, the employee is prompted to declare tips when clocking out.
<b>38</b>	<b>JOB CODE CHANGE</b>	If N, the employee can clock on using only the default job code; if Y, the employee can select of the job code displayed at clock in.
<b>39</b>	<b>PLU PRC CHANGE ONLY</b>	If Y, the employee can access the PLU programming screen, but can edit only the PRICE/HALO and PRICE LEVEL fields.
<b>40</b>	<b>EDIT PLU STOCK IN X</b>	If Y, the employee will be allowed to perform PLU stock edits in X mode.



## Authority Level Alpha Descriptors

1. Select **AUTHORITY LEVELS** from the **P-MODE PROGRAMMING MENU** to display the **PROGRAMMING Screen**.

```

AUTHORITY LEVEL PROGRAMMING
ALPHA DESCRIPTORS ▶
      AUTHORITY LEVEL : 123456789
1.CLK-IN/OUT ENTRY ONLYNNNNNNNNNN
2.CLOCK-IN BEFORE SALESNNNNNNNNNN
3.CLOCK-OUT W OPEN CHKSNNNNNNNNNN
4.GC ENTRIES ONLY      NNNNNNNNNN
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

2. Press **ENTER** to display the **AUTHORITY LEVEL ALPHA DESCRIPTORS screen**.
3. Press the **↑** or **↓** keys to select a descriptor field to edit.
4. Enter a descriptor. Press **ENTER** to finalize the entry and move to the next authority level descriptor field.
5. Continue to program descriptors or press **ESC** to exit and return to the **AUTHORITY LEVEL PROGRAMMING screen**.

```

AUTHORITY LEVEL DESCRIPTOR ALPHA
LEVEL 1  DESC      █
LEVEL 2  DESC
LEVEL 3  DESC
LEVEL 4  DESC
LEVEL 5  DESC
LEVEL 6  DESC
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

---

## Printer Tables & KV Routing


The printing system of an *SER-7000* register or system of registers is completely flexible. Up to 40 printers can be defined and connected to any available serial port on any register within a system. Multiple printer functions can be assigned to the same printer, giving added flexibility.

1. Before programming here, you must first:
  - See "Serial Port Device Selections" in S-Mode Programming to define the type of device (i.e. printer or kitchen video) that is connected to a serial port.
  - See "Define Serial Port Parameters" in S-Mode Programming to match the baud rate/parity/etc. between the serial port and the printer. This program also controls the feed lines before and after printing, the logo size, and cutting options.
  - See "Printer Driver Selections" if you are using a printer other than the printers with predefined drivers, or if you need to customize a driver for a printer.
2. Next, assign a port for each printer. See "System Printer Routing" on page 166 to assign printer number (1-40), give it a 10 character descriptor (i.e. salad prep, receipt, or detail) and identify the port # and the register # to which it is attached. In addition, you can identify a back-up location for information designated to go to the printer. (For example, if the salad printer is not functioning, then information destined for that printer could be sent to a different printer.)
3. Finally, proceed with the parts of this program that pertain to your application:
  - If you are using a kitchen video, see "Kitchen Video Routing" on page 167 to designate the port # and the register # where the video controller is attached. You can also define a backup printer in case communication with the video controller is disrupted.
  - If you are using kitchen printers, see "Kitchen Printer Routing" on page 168 to link kitchen printer groups with a printer. (The groups of items are defined by assigning PLU items to PLU Status groups where groups are identified.)

Because it is sometimes necessary to change kitchen printer routing depending upon the time of the day, (for example, separate hot and cold food kitchens may be active during lunch and a single kitchen active during dinner) you can make assignments for four different periods. The active routing period can be controlled automatically by time or set manually.

- If you are using receipt printers, see "Kitchen Printer Routing" on page 168 to set the receipt printer for each location.
- If you are using detail printers, see "Detail Printer Routing" on page 170 to designate the journal printer for each location.


1. Select **PRINTER TABLES & KV ROUTING** from the **P-MODE PROGRAMMING MENU** to display the **PRINTER & KV ROUTING MENU** screen.

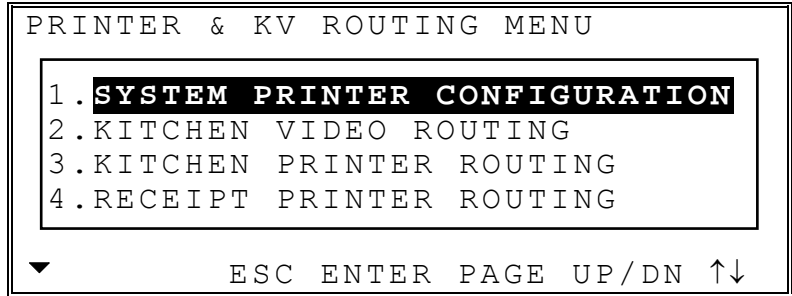

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the **↑** or **↓** keys to move the cursor to your choice and press **ENTER**.

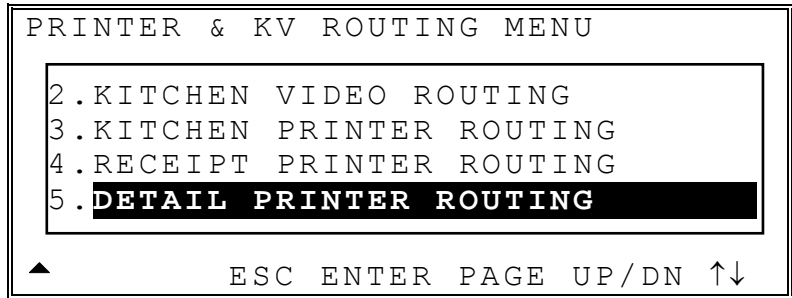

## System Printer Routing

Use System Printer Routing to define the locations within the system for up to 40 possible system printers.

1. Select **SYSTEM PRINTER ROUTING** from the **PRINTER ROUTING MENU** to display the **SYSTEM PRINTER ROUTING** screen. The selections for the first of 4 of 40 possible printers display.

SYSTEM PRINTER CONFIG			ALPHA
PRT	DESCRIPTOR	RG#-P#	RG#-P#
# 1	█	00-0	00-0
# 2		00-0	00-0
# 3		00-0	00-0
# 4		00-0	00-0
▼			ESC ENTER PAGE UP/DN ↑↓

2. If necessary, press **PAGE DN** to view or change location assignments for different printers.
3. Press **↑↓←→** to select the field you wish to edit. Type new information and press **ENTER**.
4. Press **ESC** to return to the **S-MODE PROGRAMMING MENU**

SYSTEM PRINTER CONFIG			ALPHA
PRT	DESCRIPTOR	RG#-P#	RG#-P#
# 5	█	00-0	00-0
# 6		00-0	00-0
# 7		00-0	00-0
# 8		00-0	00-0
▼			ESC ENTER PAGE UP/DN ↑↓

## Kitchen Video Routing

Use Kitchen Video Routing to define the location of the video controller. If you wish to designate a backup printer in the event that the video system is not operational, enter the location of the back-up printer here.

1. Select **KITCHEN VIDEO ROUTING** from the **PRINTER ROUTING MENU** to display the **KITCHEN VIDEO ROUTING** screen.
2. Press **↑ ↓ ← →** to select the field you wish to edit. Type new information and press **ENTER**.
3. Press **ESC** to return to the **S-MODE PROGRAMMING MENU**

KITCHEN VIDEO ROUTING			ALPHA
PRT	DESCRIPTOR	RG#-P#	PRT#
# 1	█	00-0	00

▼ ESC ENTER PAGE UP/DN ↑↓

## Kitchen Printer Routing

Use Kitchen Printer Routing to link the kitchen printer assignment made to items with actual printers. (See "PLU Status Group" on page 36 to link a group of PLUs to a printer assignment number.)

- Because different registers might route kitchen printer items to different printers, each register can be programmed separately in this program. (see "Kitchen Printing/Video Options" (option #11) on page 115 to allow separate routing by register.) All registers contain routing information for all of the registers in the system.

**NOTE: All registers are updated with changes made to this program at any register.**

- Because it is sometimes necessary to change kitchen printer routing depending upon the time of the day, (for example, separate hot and cold food kitchens may be active during lunch and a single kitchen active during dinner) you can make assignments for four different periods. The active routing period can be controlled automatically by time or set manually.
- Priority printing is also controlled with this program. The order in which items are printed on the kitchen printer ticket is determined by the order in which kitchen printer groups are listed for each printer #. (Groups at the left are printed first; groups at the right are printed last.)

1. Select **KITCHEN PRINTER ROUTING** from the **S-MODE PROGRAMMING MENU** to display the **KITCHEN PRINTER ROUTING - PERIOD #1** screen.

REG#	01	KITCHEN				PRT	ROUTI	PERIOD#1		
PT	—	KP	KP	KP	KP	KP	KP	KP	KP	KP
—	—	—	—	—	—	—	—	—	—	—
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
▼0	0	0	0	0	0	0	0	0	0	0

2. Enter a **REG# (1-40)** and press **ENTER**, or press **PAGE UP** or **PAGE DN** until the **REG#** you wish to program is selected.

REG#	01	KITCHEN				PRT	ROUTI	PERIOD#1		
PT	—	KP	KP	KP	KP	KP	KP	KP	KP	KP
—	—	—	—	—	—	—	—	—	—	—
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
▼0	0	0	0	0	0	0	0	0	0	0

3. Press **↑ ↓ ← →** to select the field you wish to edit. Type new information and press **ENTER**.

REG#	01	KITCHEN				PRT	ROUTI	PERIOD#1		
PT	—	KP	KP	KP	KP	KP	KP	KP	KP	KP
—	—	—	—	—	—	—	—	—	—	—
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
00	0	0	0	0	0	0	0	0	0	0
▼0	0	0	0	0	0	0	0	0	0	0

4. If necessary, press **PAGE DN** to view or change routing for periods 2, 3, and/or 4.
5. Press **ESC** to exit the **KITCHEN PRINTER ROUTING** screen.

## Receipt Printer Routing

1. Select RECEIPT PRINTER ROUTING from the S-MODE PROGRAMMING MENU to display the RECEIPT PRINTER ROUTING screen.
2. Press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  to select the field you wish to edit. Type new information and press **ENTER**.
3. If necessary, press **PAGE DN** to view or change routing for as many additional registers are defined in the system.

RECEIPT PRINTER ROUTING			
REG#	PRT#	REG#	PRT#
<b>00</b>	00	00	00
00	00	00	00
00	00	00	00
00	00	00	00
▼00	00	00	00

Note: Default setting sends receipt to the register printer.

## Detail Printer Routing

1. Select DETAIL PRINTER ROUTING from the S-MODE PROGRAMMING MENU to display the DETAIL PRINTER ROUTING screen.
2. Press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  to select the field you wish to edit. Type new information and press **ENTER**.
3. If necessary, press **PAGE DN** to view or change routing for as many additional registers are defined in the system.

DETAIL PRINTER ROUTING			
REG#	PRT#	REG#	PRT#
<b>00</b>	00	00	00
00	00	00	00
00	00	00	00
00	00	00	00
▼00	00	00	00

Note: Default setting sends detail to the register printer.



---

## Ingredient Inventory

A *menu-explosion type inventory system* is set up when PLUs are linked to a recipe# (see "PLU Status Group" on page 36.) Select INGREDIENT INVENTORY from the P-Mode Programming Menu to maintain recipe files and ingredient lists. Select EDIT INVENTORY ITEM from the X-MODE MANAGER MENU (see the *SER-7000 Operation Manual*) to receive, transfer in/out, or enter raw waste for ingredients in this system.

---

**NOTE: Be careful not to confuse the separate and distinct inventory features of the SER-7000:**

- **Recipes and Ingredients** (described here.)
  - **Product Mix Groups** (see "Product Mix Groups" on page 181.)
  - **PLU Stock** (see "PLU Stock" on page 189),
- 

1. Select INGREDIENT INVENTORY from the P-MODE PROGRAMMING MENU to display the INGREDIENT INVENTORY MENU screen.

INGREDIENT INVENTORY MENU	
1 .	<b>EDIT INGREDIENT</b>
2 .	RECIPE TABLE
▼	ESC ENTER PAGE UP/DN ↑↓

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the ↑ or ↓ keys to move the cursor to your choice and press **ENTER**.

## Edit Ingredient

1. Select **EDIT** **INGREDIENT** from the **INGREDIENT INVENTORY MENU** to display the **INGREDIENT PROGRAMMING** screen. The cursor is positioned at the next available ingredient.
2. Add or edit ingredients by moving the cursor to a field and filling in information according to the table below.
3. Press **ESC** to return to the **INGREDIENT INVENTORY MENU**

INGREDIENT PROGRAMMING		ALPHA
ING#	DESCRIPTOR	COST
001	█	000.000
002		000.000
003		000.000
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←		

### Ingredient Program Notes

FIELD	Notes
<b>ING#</b>	This field is the three-digit inventory number. The value begins at 001 and goes up to the maximum number that is assigned in memory allocation.
<b>DESCRIPTOR</b>	A 12-digit descriptor is set for the inventory item. (An inventory item is an “ingredient” of a PLU.)
<b>COST</b>	The <u>cost</u> of the item is the cost of the ingredient. The cost can be entered accurate to three places after the decimal.

## Recipe Table

1. Select **RECIPE TABLE** from the **INGREDIENT INVENTORY MENU** to display the **RECIPE # PROGRAMMING** screen.
2. Enter a **RECIPE** and press **ENTER**, or press **PAGE UP** or **PAGE DN** until the **RECIPE** you wish to program is selected.
3. Add or edit recipe components by moving the cursor to a field and filling information according to the table below.
4. Press **ESC** to return to the **INGREDIENT INVENTORY MENU**.

RECIPE # <b>1</b> PROGRAMMING			
DESCRIPTOR			
ING/REC	#	DESCRIPTOR	QTY
001	INGRED ▶ 00		00.000
002	INGRED ▶ 00		00.000
003	INGRED ▶		00.000
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←			


### Recipe Table Program Notes

FIELD	Notes
<b>ING/REC</b>	Choose whether this line corresponds to an INGredient or a RECIPE. (A recipe may be composed of recipes. For example, a special sauce (a recipe) may be an ingredient of a sandwich recipe.)
<b>#</b>	Enter the 3-digit number of the recipe or ingredient.
<b>DESCRIPTOR</b>	Display only. When a recipe or ingredient number is entered, the corresponding descriptor displays.
<b>QTY</b>	Enter the amount of inventory items used in the recipe, i.e. 1 patty for a regular hamburger, or 2 patties for double hamburger.

---

## Time Activated Functions


1. Select TIME ACTIVATED FUNCTIONS from the P-MODE PROGRAMMING MENU to display the TIME ACTIVATED FUNCTIONS MENU screen.

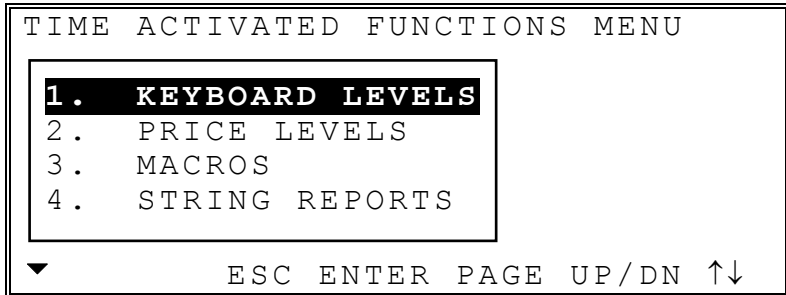

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the ↑ or ↓ keys to move the cursor to your choice and press **ENTER**.

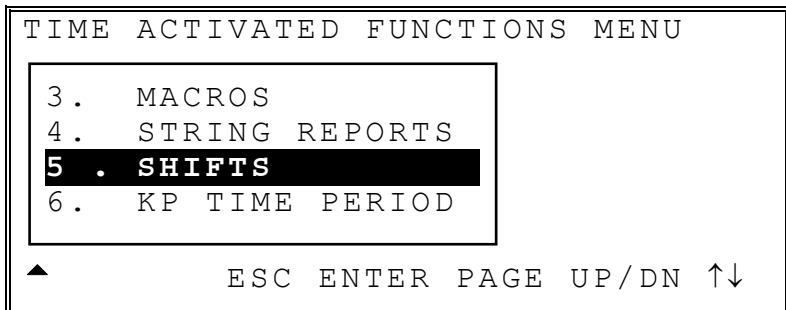

## Time Activated Keyboard Levels

1. Select **KEYBOARD LEVELS** from the **TIME ACTIVATED FUNCTIONS MENU** to display the **TIME ACTIVATED KEYBOARD LEVEL** screen.

```

TIME ACTIVATED KBD LEVEL# 1
ACTIVATE AT (99:99=DISABLE) 99:99
WEEK: SUN MON TUE WED THU FRI SAT
      Y   Y   Y   Y   Y   Y   Y
ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

2. Enter a level and press **ENTER**, or press **PAGE UP** or **PAGE DN** until the level you wish to program is selected.
3. Refer to “Time Activate Keyboard Levels Program Notes” on the following page for information about filling fields.
4. Press **ESC** at any point to exit the **TIME ACTIVATE KEYBOARD LEVELS** screen.

### *Time Activate Keyboard Levels Program Notes*

FIELD	Notes
<b>ACTIVATE AT</b>	Enter the time (24 hour/military time) you wish the keyboard level to activate. Enter 99:99 to inactivate the keyboard level changes.
<b>WEEK SUN MON TUE WED THU FRI SAT</b>	Press the <b>Y/N</b> key at each day of the week field to select which days the keyboard level change is to occur.

## Time Activated Price Levels

1. Select **PRICE LEVELS** from the **TIME ACTIVATED FUNCTIONS MENU** to display the **TIME ACTIVATED PRICE LEVEL** screen.
2. Enter a level and press **ENTER**, or press **PAGE UP** or **PAGE DN** until the level you wish to program is selected.
3. Refer to “Time Activate Price Levels Program Notes” below for information about filling fields.
4. Press **ESC** at any point to exit the **PRICE LEVEL** screen.

```

TIME ACTIVATED PRICE LEVEL# 1
ACTIVATE AT(99:99=DISABLE) 99:99
WEEK:SUN MON TUE WED THU FRI SAT
      Y   Y   Y   Y   Y   Y   Y
ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### *Time Activate Price Levels Program Notes*

FIELD	Notes
<b>ACTIVATE AT</b>	Enter the time (24 hour/military time) you wish the price level program to activate. Enter 99:99 to inactivate the price level program.
<b>WEEK SUN MON TUE WED THU FRI SAT</b>	Press the <b>Y/N</b> key at each day of the week field to select which days the price level program is to occur.

## Time Activated Macros

1. Select **MACROS** from the **TIME ACTIVATED FUNCTIONS MENU** to display the **TIME ACTIVATED MACROS** screen.
2. Type a macro number and press **ENTER**, or press **PAGE UP** or **PAGE DN** until the macro you wish to program is selected.
3. Refer to “Time Activate Macro Program Notes” on the following page for information about filling fields.
4. Press **ESC** at any point to exit the **TIME ACTIVATED MACRO** screen.

```

TIME ACTIVATED MACRO# 1
ACTIVATE AT(99:99=DISABLE) 99:99
REPEAT EVERY(MIN,0=NO REPEAT)000
WEEK:SUN MON TUE WED THU FRI SAT
      Y   Y   Y   Y   Y   Y   Y
ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

### *Time Activate Macro Program Notes*

FIELD	Notes
<b>ACTIVATE AT</b>	Enter the time (24 hour/military time) you wish the macro to activate. Enter 99:99 to inactivate the macro.
<b>REPEAT EVERY MINUTES</b>	If you wish the macro to repeat, enter the interval in minutes, i.e. 60 to repeat every sixty minutes.
<b>WEEK SUN MON TUE WED THU FRI SAT</b>	Press the <b>Y/N</b> key at each day of the week field to select which days the macro is to occur.

## Time Activated String Reports

1. Select **STRING REPORTS** from the **TIME ACTIVATED FUNCTIONS MENU** to display the **TIME ACTIVATED STRING REPORTS** screen.
2. Enter string report # and press **ENTER**, or press **PAGE UP** or **PAGE DN** until the string report you wish to program is selected.
3. Refer to “Time Activate String Report Program Notes” on the following page for information about filling fields.
4. Press **ESC** at any point to exit the **TIME ACTIVATE STRING REPORT** screen.

```

TIME ACTIVATE STRING REPORT# 1
ACTIVATE AT(99:99=DISABLE) 99:99
REPEAT EVERY(MIN,0=NO REPEAT)000
WEEK:SUN MON TUE WED THU FRI SAT
      Y   Y   Y   Y   Y   Y   Y
ESC Y/N ENTER PAGE UP/DN ↑↓→←
    
```

### *Time Activate String Report Program Notes*

FIELD	Notes
<b>ACTIVATE AT</b>	Enter the time (24 hour/military time) you wish the string report to activate. Enter 99:99 to inactivate the string report.
<b>REPEAT EVERY MINUTES</b>	If you wish the report to repeat, enter the interval in minutes, i.e. 60 to repeat every sixty minutes.
<b>WEEK SUN MON TUE WED THU FRI SAT</b>	Press the <b>Y/N</b> key at each day of the week field to select which days the string report is to occur.
<b>IRC OPTION</b>	Select the <b>IRC OPTION</b> field and press <b>ENTER</b> . Choose <b>STANDALONE</b> or <b>IRC ALL</b> from the pop-up window.



## Time Activated Shifts

Shift time programming determines the times of day financial totals are accumulated for the Shift Report.

1. Select SHIFTS from the TIME ACTIVATED FUNCTIONS MENU to display the SHIFT TIME PROGRAMMING screen.

SHIFT TIME PROGRAMMING			ALPHA
<u>SFT</u>	<u>DESCRIPTOR</u>	<u>START/END TIME</u>	
1	█	00:00 - 23:99	
2		99:99 - 99:99	
3		99:99 - 99:99	
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←			

2. The cursor displays in the *Descriptor* field for Shift 1. Enter a new descriptor, if necessary and press **ENTER**.

SHIFT TIME PROGRAMMING			ALPHA
<u>SFT</u>	<u>DESCRIPTOR</u>	<u>START/END TIME</u>	
4	█	99:99 - 99:99	
TTL			
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←			

3. The cursor moves to the *Start Time* field for Shift 1. The default start time is 00:00, if necessary, enter a new time and press **ENTER**.
4. Continue to set descriptors and start times for each of 4 possible shifts. Enter a start time of 99:99 to inactivate a shift.
5. Press **ESC** at any point to exit the SHIFT TIME PROGRAMMING screen.

## KP Time Period

Kitchen printer routing can be defined for four periods (see "Kitchen Printer Routing" on page 168.) If you define different routing for different periods, you can set the start and end times for the time periods here.

For example, a restaurant might require requisitions to be routed to separate hot and cold sandwich preparation areas during lunch (11:00 AM to 2:00 PM) and at all other times, all requisitions would be routed to the hot prep area. To meet this requirement, you could program different kitchen printer routing for periods 1 and 2 under the Kitchen Printer Routing program, then set the KP Time Periods as follows:

Period	Start	End Time
1	11:00	14:00
2	14:01	10:59
3	99:99	99:99
4	99:99	99:99

1. Select **KP TIME PERIOD** from the **TIME ACTIVATED FUNCTIONS MENU** to display the **KP TIME PERIOD PROGRAMMING** screen.

```

KP TIME PERIOD PROGRAMMING

PERIOD          START/END TIME
1                99:99 - 00:00
2                99:99 - 00:00
3                99:99 - 00:00
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

2. The cursor displays in the *Start Time* field for Period 1, enter a new time and press **ENTER**.

```

KP TIME PERIOD PROGRAMMING

PERIOD          START/END TIME
4                99:99 - 00:00
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

3. Continue to set start and end times for each of 4 possible periods. Enter a start time of 99:99 to inactivate a period.
4. Press **ESC** at any point to exit the **KP TIME PERIOD PROGRAMMING** screen.

---

## Product Mix Groups

*Product Mix Groups* can be used to implement a simplified ingredient system for tracking only essential ingredients associated with items (i.e. cups for beverages or number of pieces for chicken menus.)


Product mix groups also report usage by time period and optional Product Projections reporting is also available. The Product Projection report provides a history of each item's sales by day of week.

---

**NOTE: Be careful not to confuse the separate and distinct inventory features of the SER-7000:**

- **Product Mix Groups (described here.)**
  - **PLU Stock (see “PLU Stock” on page 189),**
  - **Recipes and Ingredients (see “Ingredient Inventory” on page 38)**
- 

1. Select PRODUCT MIX GROUPS from the P-MODE PROGRAMMING MENU to display the PRODUCT MIX GROUPS MENU screen.

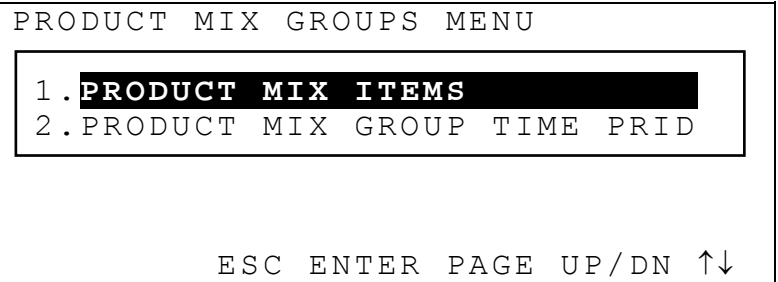

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the ↑ or ↓ keys to move the cursor to your choice and press **ENTER**.

## Product Mix Items

1. Select **PRODUCT MIX ITEMS** from the **PRODUCT MIX GROUPS MENU** to display the **PRODUCT MIX ITEM PROGRAMMING** screen.

PRODUCT MIX ITEM PGM	ALPHA
ITM#	DESCRIPTOR PCS/UNIT UNIT@
001	■ 000
002	000
003	000
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←	

2. Add or edit items by moving the cursor to a field and filling information according to the table below. Press **ENTER** to finalize each field entry, or press **↑**, **↓**, **←**, or **→** to finalize an entry and advance to the next field.
3. Press **ESC** to return to the **PRODUCT MIX GROUPS MENU**.

### Product Mix Item Program Notes

FIELD	Notes
<b>DESCRIPTOR</b>	Each product mix group item can have a 12 character alpha descriptor.
<b>PCS\UNIT</b>	Enter the number of pieces in the unit. For the example shown, 120 burgers to the case- Enter 120; 30 cups to the sleeve- Enter 30.
<b>UNIT@</b>	Enter a 4 Character descriptor for the unit, using the Alpha-keyboard overlay. This descriptor is for report purposes.

## Product Mix Group Time Periods

Memory allocation determines whether there are 24, 48, or 96 product mix group time periods. Product mix group time periods will default to hourly periods if 24 periods are selected in memory allocation; 30-minute periods if 48 periods are selected; 15-minute periods if 96 periods are selected.

Periods can be set to custom lengths using this program. If fewer periods are needed than are available, unneeded periods can be inactivated so that they will not appear on reports. To inactivate a period replace the "A" (active) for the period with an "I" (inactive).

All time units are based upon a 24-hour clock (military time).

1. Select **PRODUCT MIX GROUP TIME PERIODS** from the **PRODUCT MIX GROUPS MENU** to display the **PRODUCT MIX TIME PERIOD PROGRAMMING** screen.

PRODUCT #	MIX OF PERIODS	TIME SET	PERIOD IN MEMORY	PGM
1	<input checked="" type="checkbox"/>	0000-0059	6 Y	0500-0559
2	<input type="checkbox"/>	0100-0159	7 Y	0600-0659
3	<input type="checkbox"/>	0200-0359	8 Y	0700-0759
4	<input type="checkbox"/>	0300-0359	9 Y	0800-0859
5	<input type="checkbox"/>	0400-0459	10 Y	0900-0959
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←				

2. Press the **↑↓←→** keys to select a field to edit.
3. Type new information into the field. Press **ENTER**.
4. Press **ESC** to exit the **PRODUCT MIX TIME PERIOD PROGRAMMING** screen.

---

## Custom Report Programming

One custom report can be created. Also, on the financial or employee report, any total may be deleted, or printed in red (provided the printer has red/black printing capability.)

1. Select CUSTOM REPORT from the P-MODE PROGRAMMING MENU to display the REPORT PROGRAMMING menu.

REPORT PROGRAMMING

```
1.CUSTOM REPORT
2.MODIFY EXISTING REPORTS
```

ESC ENTER PAGE UP/DN ↑↓

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the ↑ or ↓ keys to move the cursor to your choice and press **ENTER**.

## Custom Report

One custom report can be created, with up to 50 totals and counters. The report is built by selecting totals that also appear on either the financial or sales by time period reports. When the custom report is created, totals and counters separate from the original report are also created (in other words, you can clear the custom reports independently without affecting totals in any other report.)

Another feature of the custom report is the ability to add or subtract selected totals to create a new subtotal of selected information.

1. Select CUSTOM REPORT from the REPORT PROGRAMMING MENU to display the CUSTOM REPORT PROGRAMMING screen.

CUSTOM REPORT PROGRAMMING					
#	RPT #	TTL #	RED	+/-	DESCRIPTOR
01	0	000	N	NON	▶
02	0	000	N	NON	▶
03	0	000	N	NON	▶
▼	ESC	Y/N	ENTER	PAGE	UP/DN ↑↓→←

2. Refer to "Custom Report Program Notes" on the following page to fill the fields for each line of the report.
3. Press **ESC** to exit the CUSTOM REPORT PROGRAMMING screen.

---

**Use the total #998 to create a dashed separator line on the report.**

**Use the total #999 to create a subtotal line. The subtotal line will calculate the totals designated "+" or "-" that appear sequentially after the previous subtotal line. Enter a custom descriptor for the subtotal line.**

---

### **Custom Report Program Notes**

<b>FIELD</b>	<b>Notes</b>
<b>RPT#</b>	With the field selected, press <b>DONE</b> to display the REPORT LIST. Enter or select the number of the report from which the total you wish to place on the custom report originates.
<b>TTL#</b>	With the field selected, press <b>DONE</b> to display the TOTAL LIST. Enter or select the number of the total you wish to place on the custom report. You must first select a RPT# before you can select a TTL#.
<b>RED?</b>	Enter Y if the line is to be printed in red ink, enter N for black.
<b>+/-</b>	Press <b>ENTER</b> to select "+", "-", or NON ADD from the pop-up window. When the subtotal TTL# code (i.e.'999') is entered on a later line, previous totals with a + or - designation are added and printed.
<b>DESCRIPTOR</b>	The default descriptor automatically displays when the TTL# is entered. If you wish, enter a new descriptor by replacing default descriptor. Type new information into the field, press <b>ENTER</b> .



## Edit Existing Reports

1. Select **EDIT EXISTING REPORTS** from the **REPORT PROGRAMMING** MENU, then from the pop-up menu, select **FINANCIAL REPORT** or **EMPLOYEE REPORT**.

```

REPORT PROGRAMMING
1. CUSTOM REPORTS
2. EDIT EXISTING REPORTS
1. FINANCIAL REPORT
2. EMPLOYEE REPORT
N ↑↓
    
```

2. The **EDIT** screen for the report selected displays. Each total that appears on the report is listed with the default status: **PRINT=Y** and **RED?=N**.

EDIT FINANCIAL REPORT					
TTL#	DESCRIPTOR	PRT?	RED?		
001	+PLU LVL1 TTL	<b>Y</b>	N		
002	-PLU LVL1 TTL	Y	N		
003	+PLU LVL2 TTL	Y	N		
004	-PLU LVL2 TTL	Y	N		
▼	ESC	Y/N	ENTER	PAGE	UP/DN ↑↓→←

3. If you wish to delete a total from the report move the cursor to the **PRINT?** field for the total you wish to remove from the report. Press the **Y/N** key to change the status to **NO**.
4. At the **RED?** field, enter **Y** if the line is to be printed in red ink, enter **N** for black.
5. Continue editing the report as necessary.
6. Press **ESC** to exit the **CUSTOM REPORT PROGRAMMING** screen.

# String Reports

1. Select **STRING REPORTS** from the **P-MODE PROGRAMMING MENU**.
2. Type a string report# and press **ENTER**, or press **PAGE UP** or **PAGE DN** until the string report# you wish to program is selected.
3. Refer to “String Report Program Notes” to fill each field.
4. Up to 24 reports may be executed on a string report. Press **PAGE UP** or **PAGE DN** or press the **↑↓** **← →** keys to view all of the sequence numbers in the report.
5. Press **ESC** to return to the **STRING REPORT PROGRAMMING MENU** screen.

STRING REPORT # <b>1</b> PROGRAMMING				
DESCRIPTOR STRING REPORT #1				
#	X/Z	LEVEL	RPT#	DESCRIPTOR
00	X ▶	0	00	
01	X ▶	0	00	
02	X ▶	0	00	
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←				

## String Report Program Notes

FIELD	Notes
<b>X/Z</b>	Select the X/Z field arrow. Press <b>ENTER</b> to open the window. Select the X, Z, or CURRENT option by highlighting your selection and pressing <b>ENTER</b> . Use the current option if you wish to use the string for either X or Z reports. The string report will look at the current control lock position (either X or Z) and generate the appropriate report.
<b>LEVEL</b>	At the RPT LVL field, select the X/Z level (i.e. Z1, X2, etc. Remember you must have allocated memory for the report level if you wish to execute that report.)
<b>RPT# DESCRIPTOR</b>	At the RPT# field, type the report number you wish to execute in the string. Press <b>ENTER</b> . The report descriptor will automatically display.

---

## PLU Stock

*PLU stock* is a simple inventory system where each whole unit PLU activity subtracts a value of "1" from the stock counter. (Note that if multiplication or decimal multiplication is used when the PLU is registered, the resulting quantity of activity will subtract from the stock counter. Stock is maintained increments to the second decimal position, i.e. "X.XX".)

PLU stock applies only to PLUs that are assigned to a PLU status group with the Stock PLU? setting set to Y (See "PLU Status Group" on page 36.)

Select PLU STOCK to maintain stock levels on PLUs selected for stock unit inventory.

---


**NOTE: Be careful not to confuse the separate and distinct inventory features of the SER-7000:**

- **PLU Stock (described here),**
  - **Recipes and Ingredients (see "Ingredient Inventory" on page 38)**
  - **Product Mix Groups (See "Product Mix Groups" on page 181.)**
- 

1. Select PLU STOCK from the P-MODE PROGRAMMING MENU to display the PLU STOCK MENU screen.
2. Choose ADD from the PLU STOCK MENU to add stock to the current level, or

Choose OVERRIDE from the PLU STOCK MENU to change the current stock amount to a new setting, or

Choose SUBTRACT from the PLU STOCK MENU to subtract stock from the current level.

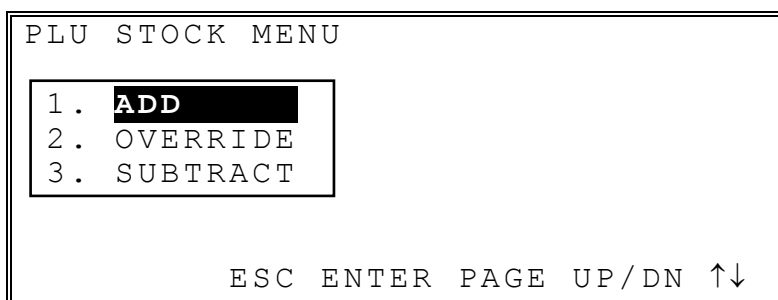

3. Press the PLU to be programmed or enter the PLU number and press ENTER.
4. Press the ↓ key to move the cursor to the stock field.
5. Enter a value assuming a two digit decimal position (i.e. enter 2000 to display 20.00 for 20 units.) Press **ENTER** or ↓ to set the entry and advance the cursor to the next PLU.
6. Continue to add, override or subtract stock as necessary. Press **ESC** to exit the program and save changes.

```

PLU# 00000000000000 STOCK-ADD
• PRESS PLU TO BE PROGRAMMED

OR

• ENTER PLU NUMBER - [ENTER]
  PLU# ESC ENTER INDIVIDUAL PLU

```

```

PLU# 000000000000001 STOCK-ADD

DESCRIPTOR : MMMMMMMMMMMMMMM
STOCK 0.00

```

---

## PLU Minimum Stock

1. Select PLU MINIMUM STOCK from the P-MODE PROGRAMMING MENU to set minimum stock amounts (for the PLU MINIMUM STOCK report.)
2. Press the PLU to be programmed or enter the PLU number and press ENTER.
3. Press the ↓ key to move the cursor to the stock field.
4. Enter a value assuming a two digit decimal position (i.e. enter 2000 to display 20.00 for 20 units.) Press **ENTER** or ↓ to set the entry and advance the cursor to the next PLU.
5. Press **ESC** to exit the program and save changes.

```
PLU# 0000000000000000 MIN.STOCK PGM
```

- PRESS PLU TO BE PROGRAMMED

OR

- ENTER PLU NUMBER - [ENTER]  
PLU# ESC ENTER INDIVIDUAL PLU

```
PLU#0000000000000000 MIN.STOCK PGM
```

```
DESCRIPTOR : MMMMMMMMMMMMMMM  
MINIMUM STOCK 0.00
```

---

# Copy Program

This function allows you to duplicate programs for:

- PLUs
- PLU Status Groups
- Keyboard Levels
- WLUs


For example, all program options for one PLU can be duplicated on another PLU.

---


**NOTE: See “General Function Options” on page 101. If General Function Option #16 “ALLOW PLU COPY BY RANGE” is set to “Y”, then the options from one PLU or PLU Status Group can be copied to a range of PLUs or PLU Status Groups. If option #18 is set to “N” then the options from an individual PLU or PLU Status Group can be copied only to another individual PLU or PLU Status Group.**

---

1. Select COPY PROGRAM from the P-MODE menu to display the COPY PROGRAM screen.
2. Choose
  - COPY PLU
  - COPY PLU STATUS GROUP
  - COPY KEYBOARD LEVEL, or
  - COPY WLU from the list.

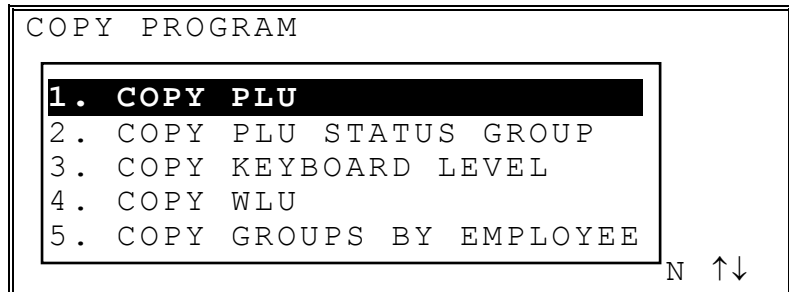

3. At the pop-up window, enter the # you wish to copy from, press **ENTER**, then enter the # you wish to copy to and press **ENTER**.

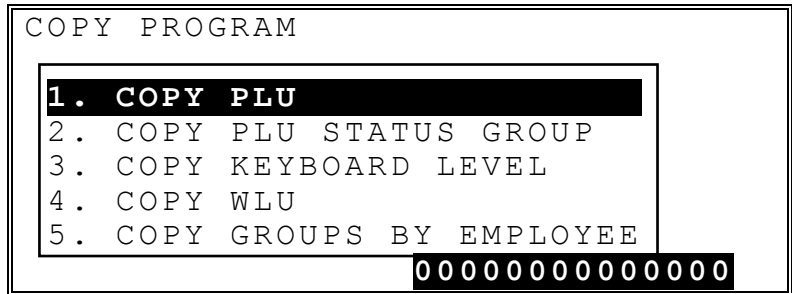

(NOTE: If you allow copying of PLUs/PLU Status Groups by range, enter the range to copy to.)


4. The warning: "COPY [Y]" displays.
5. Press **ENTER** to complete the copy function. Press the **Y/N** key, (to select NO) then **ENTER** to escape without copying.

---

## Program File Download

Download files only to RAM cleared registers. Download memory allocation separately first. The *All Files* selection does not include memory allocation.

1. Select PROGRAM FILE DOWNLOAD from the P-MODE PROGRAMMING MENU to display the PROGRAM FILE DOWNLOAD screen.

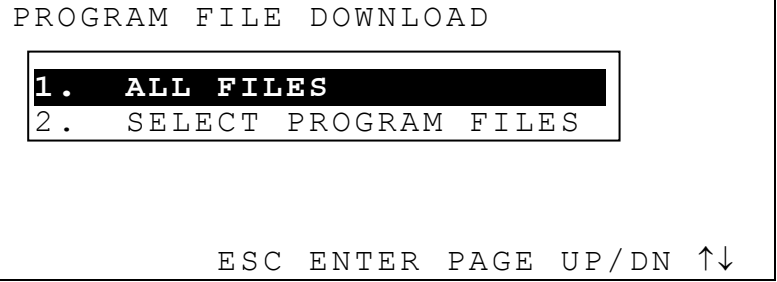

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the ↑ or ↓ keys to move the cursor to your choice and press **ENTER**.



## Select Program Files

1. Choose **SELECT PROGRAM FILES** from the **PROGRAM FILE DOWNLOAD** screen to display the **DOWNLOADING PROGRAM FILE SELECTION** screen.
2. At the **REGISTER** field, choose **ALL REGISTERS** or **SELECTED**. (If you choose selected, choose registers in the same manner as **ALL FILES** downloading.)
3. At the **PROGRAM FILE SELECTION** field, press **PAGE UP** or **PAGE DN** and/or the **↑↓** keys to select the items you wish to download. Press **Y/N** to toggle from yes to no.
4. When you have completed selecting programs, press **DONE** to download.

```

DOWNLOAD PROGRAM FILE SELEC
1.REGISTER :          ALL REGISTERS N
2.PROGRAM FILE SELECTION
   DATE & TIME                N
   PLU                          N
   PLU STATUS GROUP            N
   GROUP                        N
▼ FUNCTION KEY                N
  
```

```

DOWNLOAD PROGRAM FILE SELEC
   MACRO                        N
   TARE WEIGHT                   N
   GENERAL FUNCTION OPTION      N
   TAX OPTION                    N
   CASH DRAWER OPTION           N
   TRAINING MODE OPTION         N
◆ LEVEL/MODIFIER OPTION       N
  
```

```

DOWNLOAD PROGRAM FILE SELEC
   TRACKING FILE OPTION         N
   KITCHEN PRINTER/VIDEO OPT    N
   VALID/SUBTOTAL PRINT OPT     N
   GENERAL PRINTING OPTION      N
   REPORT PRINTING OPTION       N
   REPORT OPTION                 N
◆ TIME KEEPING OPTION         N
  
```

```

DOWNLOAD PROGRAM FILE SELEC
   E.J. & DETAIL PRINTING OPT N
   TAX                           N
   LOGO MESSAGE                   N
   ERROR MESSAGE                  N
   SYSTEM DESCRIPTOR              N
   FINANCIAL REPORT DESC.         N
◆ EMPLOYEE REPORT DESCRIPTOR N
  
```

```

DOWNLOAD PROGRAM FILE SELEC
   CHECK ENDORSEMENT MESSAGE N
   GUEST CHECK LOGO MESSAGE    N
   VALIDATION MESSAGE           N
   WINDOW LOOK UP (WLU)        N
   TIME PERIOD                  N
   EMPLOYEE                      N
◆ JOBCODE                      N
  
```

DOWNLOAD PROGRAM FILE SELEC	
PAYRATE	<b>N</b>
AUTHORITY LEVEL	N
SYSTEM PRINTER CONFIG.	N
KITCHEN VIDEO ROUTING	N
KITCHEN PRINTER ROUTING	N
RECEIPT PRINTER ROUTING	N
◆	DETAIL PRINTER ROUTING N

DOWNLOAD PROGRAM FILE SELEC	
INGREDIENT	<b>N</b>
RECEIPE TABLE	N
TIME ACTIVATED KBD LEVEL	N
TIME ACTIVATED PRICE LEVEL	N
TIME ACTIVATED MACRO	N
TIME ACTIVATED STRING RPT	N
◆	SHIFT TIME N

DOWNLOAD PROGRAM FILE SELEC	
KP TIME PERIOD	<b>N</b>
PRODUCT MIX ITEMS	N
PRODUCT MIX GRP TIME PERIODN	N
CUSTOM REPORT	N
EDIT FINANCIAL REPORT	N
EDIT EMPLOYEE RPOERT	N
◆	STRING REPORT N

DOWNLOAD PROGRAM FILE SELEC	
PLU MINIMUM STOCK	<b>N</b>
NON-PLU CODE	N
KEYBOARD KEY RELOCATION	N
S-MODE SYSTEM OPTION	N
PRINTER DRIVER	N
MEMORY ALLOCATION	N
◆	BITMAP IMAGE N

DOWNLOAD PROGRAM FILE SELEC	
GROUPS BY EMPLOYEE	<b>N</b>
EMPLOYEE CARD READ FORMAT	N
AGE VERIFICATION	N
MIX & MATCH TABLE	N
◆	

## All Files

1. Choose ALL FILES from the PROGRAM FILE DOWNLOAD screen to display the DOWNLOADING REGISTER SELECTION screen.

```

DOWNLOADING REGISTER SELECT
1. REGISTER : ALL REGISTERS ▶
ESC Y/N ENT PG UP/DN ↑↓ DONE
  
```

2. If you wish to download to selected registers, at the REGISTER field, press ENTER to open the pop-up window. Choose SELECTED and press ENTER to display the REGISTER SELECTION screen.

```

DOWNLOADING REGISTER SELECT
1. REGISTER :
                ALL REGISTERS
                SELECTED
ESC Y/N ENT PG UP/DN ↑↓ DONE
  
```

3. At the REGISTER SELECTION screen, press the ↑↓←→ keys to move to the field associated with the register you wish to choose. Press Y/N to toggle from yes to no.

```

REGISTER SELECTION:
01 02 03 04 05 06 07 08
  N  N  N  N  N  N  N  N
09 10 11 12 13 14 15 16
  N  N  N  N  N  N  N  N
ESC Y/N ENT PG UP/DN ↑↓ DONE
  
```

4. When you have completed selecting registers, press DONE to download.

```

REGISTER SELECTION:
17 18 19 20 21 22 23 24
  N  N  N  N  N  N  N  N
25 26 27 28 29 30 31 32
  N  N  N  N  N  N  N  N
ESC Y/N ENT PG UP/DN ↑↓ DONE
  
```

---

## P-Mode Program Scan Printing

This function allows you to print copies of the register's P-Mode programming.

1. Select PROGRAM SCAN PRINTING from the P-MODE PROGRAMMING MENU to display the P-MODE PROGRAM SCAN PRINTING screen.

P-MODE PROGRAM SCAN PRINTING

```
1. PLU BY RANGE
2. PLU BY PLU STATUS GROUP
3. PLU BY SELECTED PRICE LVL
4. PLU STATUS GROUP BY RANGE
5. GROUP BY RANGE
```

2. Choose an item from the menu in one of two ways:

Type the number for your choice and press **ENTER**.

Press the  $\uparrow$  or  $\downarrow$  keys to move the cursor to your choice and press **ENTER**.

3. After selection, the appropriate report is printed.

P-MODE PROGRAM SCAN PRINTING

```
6. ALL FUNCTION KEY
7. SYSTEM OPTION
8. TAXES
9. MESSAGES
10. WINDOW LOOK UP (WLU)
```

P-MODE PROGRAM SCAN PRINTING

```
11. TIME PERIOD
12. EMPLOYEE BY RANGE
13. JOB CODE
14. PAY RATE
15. AUTHORITY LEVEL
```

P-MODE PROGRAM SCAN PRINTING

```
16. PRINTER TABLE & KV ROUTING
17. INGREDIENT INVENTORY
18. TIME ACTIVATED FUNCTIONS
19. PRODUCT MIX GROUPS
20. CUSTOM REPORT
```

P-MODE PROGRAM SCAN PRINTING

**21.STRING REPORT**

22.PLU STOCK BY RANGE  
23.PLU MINIMUM STOCK BY RANGE  
24.NON-PLU CODE  
25.TARE WEIGHTS

P-MODE PROGRAM SCAN PRINTING


**26.KEYBOARD**

27.MACRO  
28.GROUPS BY EMP. BY RANGE  
29.EMPLOYEE CARD READ FORMAT  
30 AGE VERIFICATION

# NON-PLU Code

The NON-PLU Code program must be set if you wish to scan UPCs (using the EAN 13 code) with embedded prices, weights or quantities.

Within the EAN 13 code, the first two digits (part a) are used as an identifier and the last digit (part c) is used as a check digit. The remaining 10 digits (part b) contain the product code and the price (or weight or quantity).

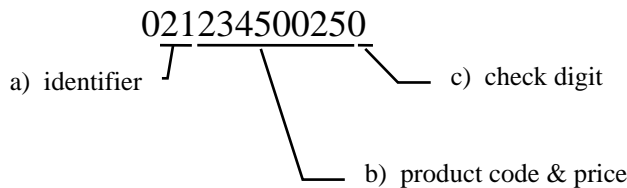


There are 11 identifier numbers available for non-PLU code programming: “02” and “20” through “29”. The purpose of this program is to define the format of the 10-digit part b for each possible identifier. For example:

- The structure of Non PLU identifier “02” can be defined to use 5 digits for the product code and 5 digits for the price.
- The structure of Non PLU identifier “20” can be defined to use 6 digits for the product code and 4 digits for the price.

### To Program Non-PLU codes:

1. Select NON-CODE PLU from the P-MODE MENU to display the NON-CODE PLU PROGRAMMING screen.
2. Choose one of the non-PLU identifiers (“02” or “20” through “29”).

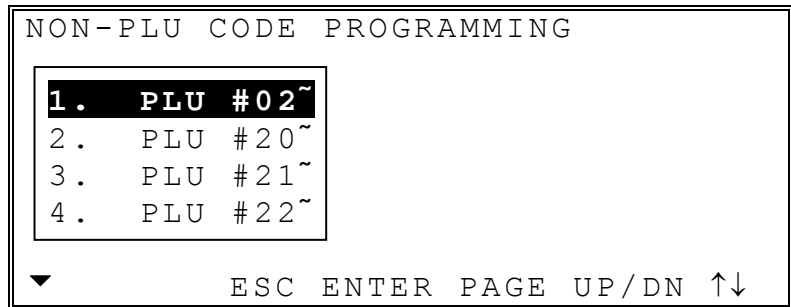

3. The NON-PLU# PROGRAMMING screen displays for the identifier you have chosen to program.
4. Use the table below as a reference in filling the fields of this screen.
5. Press **ESC** to return to the NON-CODE PLU PROGRAMMING screen.

NON-PLU# 1 (PLU#02~) PROGRA	0
LENGTH OF FIELD 1 (=PLU CODE)	0
LENGTH OF FIELD 2	0
CONTENT OF FIELD 2	PRICE ▶
USE PRICE CHECK DIGIT?	N
TAB OR DEC. POINT OF FIELD 2	0
ESC Y/N ENTER PAGE UP/DN ↑↓→←	


### ***NON-PLU Code Program Notes***

FIELD	Notes
<b>LENGTH OF FIELD 1</b>	Assign the length of the product code field. (The length of field 1 plus field 2 must equal 10.)
<b>LENGTH OF FIELD 2</b>	Assign the length of the price/weight/quantity field. (The length of field 1 plus field 2 must equal 10.)
<b>CONTENT OF FIELD 2</b>	Select the type of content for field 2: price, weight or quantity.
<b>USE PRICE CHECK DIGIT</b>	Select "Y" if the price field includes a check digit.
<b>TAB OR DECIMAL POINT OF FIELD 2</b>	Enter the decimal point position for the price/weight/quantity field.


---

## PLU & WLU Key Assignment

1. Select PLU & WLU KEY ASSIGNMENT from the P-MODE PROGRAMMING MENU to display the PLU & WLU KEY ASSIGNMENT screen.

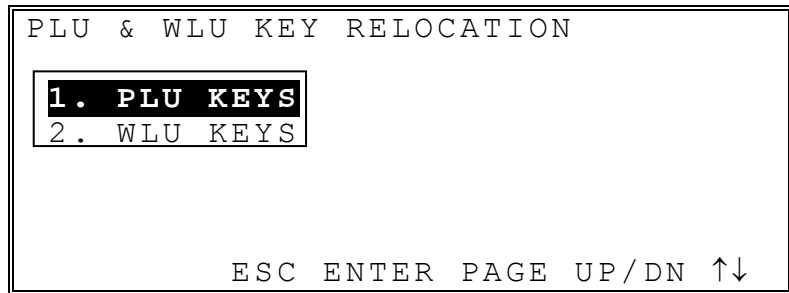

2. Press a numeric digit (1-2) or use the ↑ or ↓ keys to move the cursor to PLU KEYS or WLU KEYS, then press **ENTER** to indicate whether you wish to program a PLU or WLU.

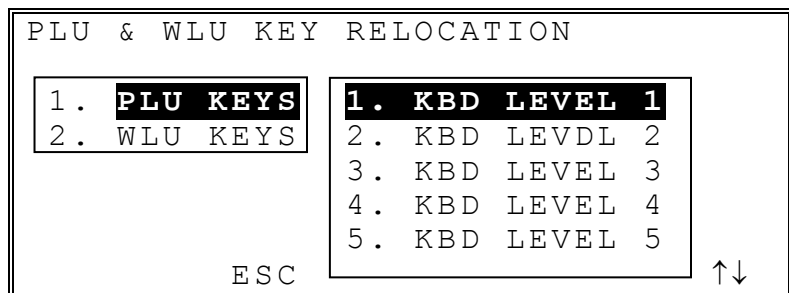

3. A pop up window displays the keyboard level selection. Select the keyboard level you wish to program, press **ENTER**.



## PLU Key Assignment

This process assigns the PLU number that is registered when a PLU key is operated.

1. Press any PLU key to read and/or change the current assignment, or press **ESC** to exit.

```
PLU KEY RELOCATION PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
```

2. Type the PLU number you wish to be located at this PLU key position. Press **ENTER** to assign the number, or press **ESC** to exit without changing the current assignment.

```
PLU KEY RELOCATION PROGRAM
KBD LEVEL : 1      KEY POS. : 1
CURRENT PLU# 00000000000001
                PLU1
```

3. The old and new assignments for the key you have just programmed display. Continue to program PLU key locations as necessary by pressing another key.

```
PLU KEY RELOCATION PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
KEY POSITION 1:
OLD=PLU# 00000000000001
NEW=PLU# 00000000000002
```

4. Press **ESC** to exit. At the prompt:  
EXIT? [Y] press **ENTER**.
5. At the prompt:  
SAVE KEY  
RELOCATION? [Y]  
press **ENTER**, or  
press the **Y/N** key,  
then press **ENTER** to  
exit without saving  
changes.

## WLU Key Assignment

This process assigns the WLU number that is displayed when a WLU key is operated.

1. Press any WLU key to read and/or change the current assignment, or press **ESC** to exit.

```
WLU KEY RELOCATION PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
```

2. Type the WLU number you wish to be located at this WLU key position. Press **ENTER** to assign the number, or press **ESC** to exit without changing the current assignment.

```
WLU KEY RELOCATION PROGRAM
KBD LEVEL : 1      KEY POS. : 1
CURRENT WLU#:      001 WLU#

                               ESC ENTER
```

3. The old and new assignments for the key you have just programmed display. Continue to program WLU key locations as necessary by pressing another key.

```
WLU KEY ASSIGNMENT PROGRAMMING
KEYBOARD LEVEL 1
• PRESS ANY KEY TO READ AND/OR
  CHANGE CURRENT ASSIGNMENT
• PRESS ESC TO EXIT
KEY POSITION 13:
  OLD=WLU# 01 WLU#1
  NEW=WLU# 02 WLU#2
```

4. Press **ESC** to exit. At the prompt:  
EXIT? [Y] press **ENTER**.
5. At the prompt:  
SAVE KEY  
RELOCATION? [Y]  
press **ENTER**, or  
press the **Y/N** key,  
then press **ENTER** to  
exit without saving  
changes.

---

## Bitmap File Download

If you are printing a bitmap image on a printer (use must be using a printer with bitmap image capability) you can send the bitmap to the printer using this program.

1. Select **BITMAP FILE DOWNLOAD** from the P-MODE PROGRAMMING MENU to display the **BITMAP FILE DOWNLOAD** Screen.

BITMAP FILE DOWNLOAD	
<b>PORT#1</b>	
PORT#2	
PORT#3	
PORT#4	
ESC ENTER PAGE UP/DN ↑↓	

2. Press the ↑↓ keys to select the port the appropriate printer is connected to and press **ENTER** to download the image

---

## Groups By Employee

If you choose to use groups by employee (see "Memory Allocation" on page 34) you can select which of the 99 available groups are reported for each employee. For example, you may wish to report only food related groups for servers and beverage related groups for bartenders.

1. Select **GROUPS BY EMPLOYEE** from the **P-MODE PROGRAMMING MENU** to display the **GROUPS BY EMPLOYEE** Screen.
2. Type the **EMPLOYEE** number and press **ENTER**, or press **PAGE UP** or **PAGE DN** to scroll to the Employee you wish to program.
3. Press the ↓ to advance the cursor to the **GROUP#** field for group #01.
4. Type the number of the group you wish to report, press **ENTER**. The descriptor for the group will automatically fill the **DESCRIPTOR** field.
5. Continue to program group selections for up to 30 possible reporting groups. Press **PAGE UP** or **PAGE DN** as necessary to view all 30 groups.
6. Press **ESC** to exit the **GROUPS BY EMPLOYEE** program screen

GROUPS BY EMPLOYEE# 01 PROG		
#	GROUP#	DESCRIPTOR
01	00	
02	00	
03	00	
▼ ESC Y/N ENTEOOPAG		

# Employee Card Read Format

1. Select EMPLOYEE CARD READ FORMAT from the P-MODE PROGRAMMING MENU to display the EMPLOYEE CARD READ FORMAT Screen.

```

EMPLOYEE CARD READ FORMAT
1 . READ                                TRACK1 
2 . CARD ID                             0000000000
3 . CHECK CARD ID                        N
4 . COLUMN OF CARD ID
    START                                00
    DIGIT                                00
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

```

EMPLOYEE CARD READ FORMAT
5 . COLUMN OF NUMBER
    START                                 00
    DIGIT                                00
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←
  
```

## Employee Card Read Format Program Notes

FIELD	Notes
READ	Set to the Track (1 or 2) that you wish to read.
CARD ID	If ID numbers are to be used, enter the ID number (up to 10 digits) from the magnetic cards that will be accepted. If ID numbers are not to be used, ignore this field.
CHECK CARD ID?	Enter Y to use card ID numbers, or N if you do not wish to use card ID numbers.
COLUMN OF CARD ID	Enter the number of the column that the Card ID starts.
CARD ID DIGITS	Enter the number of digits to be read for the Card ID.
COLUMN OF NUMBER	Enter the number of the column that the Card number starts.
CARD NUMBER DIGITS	Enter the number of digits to be read for the Card number.

---

## Age Verification

Sale of age-restricted items (i.e. alcohol, tobacco) can be controlled at the point of sale by forcing to operator to enter a date of birth before a controlled item can be registered. Because you may wish to use this feature for items controlled at a different age (i.e. alcohol may be allowed at age 21 and tobacco may be allowed at age 18), up to five different ages can be entered here. The age category (1-5) is entered at the appropriate PLU Status group program.

1. Select AGE VERIFICATION from the P-MODE PROGRAMMING MENU to display the AGE VERIFICATION Screen.

AGE VERIFICATION	
1 .	<b>00</b>
2 .	00
3 .	00
4 .	00
5 .	00

ESC Y/N ENTER PAGE UP/DN ↑↓→←

2. Type an age for the first age category, press **ENTER**.
3. If necessary enter ages for the remaining age categories.
4. Press **ESC** to return to the P-MODE MENU.

## Mix & Match Table

Retailers often offer discounts when multiples of different items are purchased. For example, the offer: “save \$5 on any three bottles of wine” can be handled by a mix and match discount. The default *SER-7000* can accommodate up to 5 different mix and match discounts, the total can be increased through memory allocation.

1. Select **MIX & MATCH TABLE** from the P-MODE PROGRAMMING MENU to display the **MIX & MATCH TABLE** Screen.
2. Enter a descriptor, trip# and price for each table, press **ENTER**.
3. If necessary data for additional discount tables.
4. Press **ESC** to return to the P-MODE MENU.

MIX & MATCH TABLE PGM			ALPHA
TBL	DESCRIPTOR	TRIP#	PRICE
001	<b>DISCOUNT#1</b>	00	000000.00
002	DISCOUNT#2	00	000000.00
003	DISCOUNT#3	00	000000.00
▼ ESC Y/N ENTER PAGE UP/DN ↑↓→←			

MIX & MATCH TABLE PGM			ALPHA
TBL	DESCRIPTOR	TRIP#	PRICE
004	<b>DISCOUNT#4</b>	00	000000.00
005	DISCOUNT#5	00	000000.00
▲ ESC Y/N ENTER PAGE UP/DN ↑↓→←			

### Mix & Match Discount Program Notes

FIELD	Notes
TRIP#	Trip# is s the number of items that must be purchased to receive the discount.
PRICE	Price is the amount of the discount.





# Appendices

# Register Communications Ports

## Standard Ports

PORT	CONNECTOR TYPE
ETHERNET	Standard RJ45/8 wire
SERIAL #1	PC type DB9/male
SERIAL #2	Standard RJ45/8 wire
SERIAL #3	Standard RJ45/8 wire
DRAWER 2	Standard RJ45/6 wire

## Optional Ports




PORT	CONNECTOR TYPE
SERIAL #4	Standard RJ45/8 wire

# Pin Descriptions

SIGNALS								
PIN#	Serial Port 1	Serial Port 2	Serial Port 3	Serial Port 4-7	IRC Port	Drawer Port 1	Drawer Port 2	Drawer Port 3
1	/DCD	Vcc	Vcc	NC	TPTx+	FGND	FGND	FGND
2	RxD	/DSR	/DSR	/DSR	TPTx-	Solenoid(-)	Solenoid(-)	Solenoid(-)
3	TxD	TxD	TxD	TxD	TPRx+	COMP1	COMP2	COMP3
4	/DTR	RxD	RxD	RxD	NC	24V	24V	24V
5	GND	NC	NC	NC	NC	Solenoid(-)	Solenoid(-)	Solenoid(-)
6	/DSR	NC	NC	NC	TPRx-	GND	GND	GND
7	/RTS	GND	GND	GND	NC	<b>RJ-11 (Modular 6Pin)</b>		
8	/CTS	/DTR	/DTR	/DTR	NC			
9	Vcc	<b>RJ-45 (Modular 8Pin)</b>						
CONN.	DSUB(Male)							

---

## Loop Back Connections

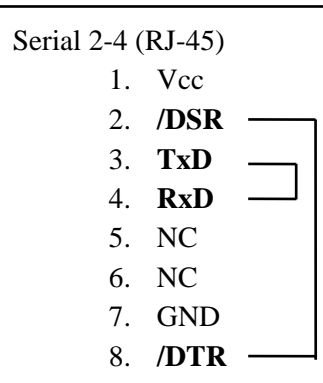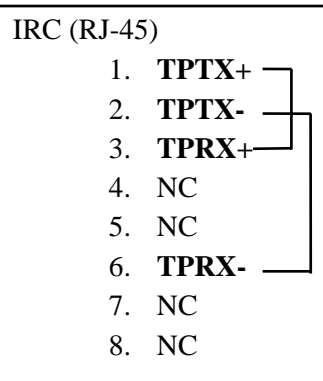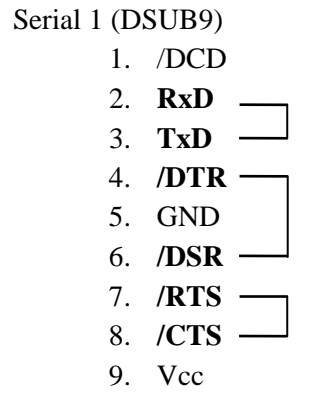

---


# System Configurations

## Inter Register Communications

Each SER-7000 includes a standard Ethernet communications port. This port is used for all register-to-register communications. Except for 2-registers configurations, registers are linked by connecting each register to an Ethernet hub.


### 2-Register Configuration

Two registers can be connected without a hub by a special cable. See "Crossover Cable" on the following page for cable construction.

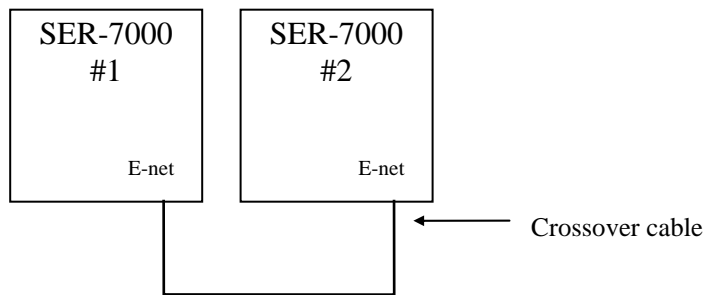


### 3 or More Register Configurations

For example, a 3-register installation might look like this:

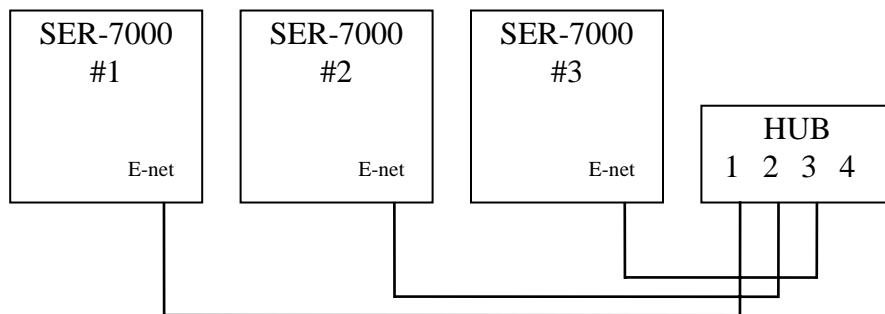

Contact your SAM4S sales representative to order the appropriate Ethernet hubs. Hubs will be stocked in 5 port and 8 port configurations.

### **Crossover Cable**

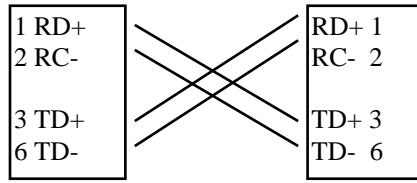


### **Ethernet Specifications**

*More information to be supplied at a later time.*

Hub Speed 10 Mbps (10 million bits per second)

## Requisition Printers

Requisitions can be directed from any register to any printer in the system. For example, at a food service counter with 3 registers and three preparation areas, registers and printers might be connected in a system as in the diagram below:

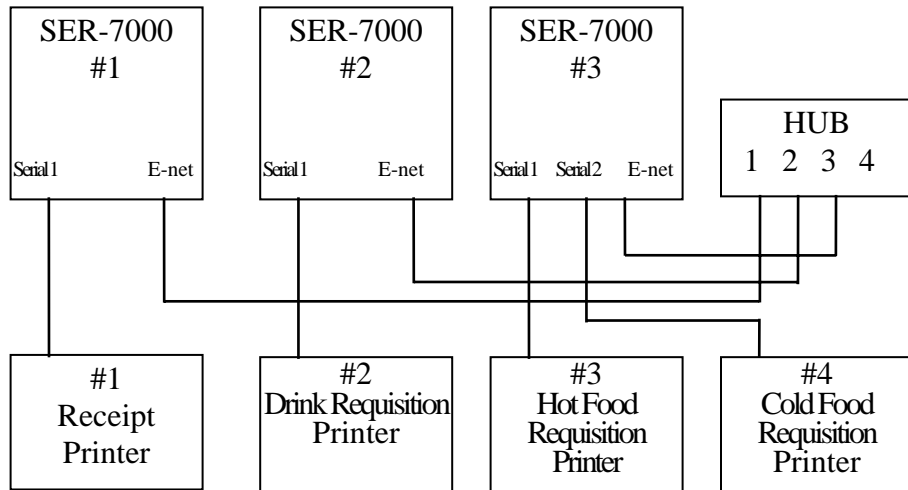

Within this system, printing instructions from any of the registers can be directed to the appropriate printer, for example:

- All registers direct receipts to printer #1.
- All registers direct drink items to printer #2
- All registers direct hot food items to printer #3
- All registers direct cold food items to printer #4

---

### Notes for the Programmer:

- Use P-Mode program #1 “PLU”, to assign a PLU to a PLU Status Group.
  - Use P-Mode program #2 “PLU Status Group” options #30 to enable printing on kitchen printer and option #31 to assign status groups to KP#’s.
  - Use P-Mode program #12 “Printer Tables & KV Routing”, selection #3 “Kitchen Printer Routing” assign KP#’s to printers.
  - Use P-Mode program #12 “Printer Tables & KV Routing”, selection #1 “System Printer Configuration” assign printers to specific ports on registers within the system.
-

---

## Integrated Payment Program Requirements

1. See Serial Port Device Selections on page 52 to assign the device to the appropriate serial port. For credit only select “EFT TERMINAL”; for debit select “PDC”.
2. See Define Serial Port Parameters on page 53 to set the baud rate, parity, and other options for each serial port. NOTE: Port Parameters are the same for the EFT Terminal and the PDC (2400 BAUD, parity NONE, data bits 8, stop bits 1).
3. See System Options (S-Mode) on page 48 to set the appropriate options:

Set option #13 to the number of the terminal in the IRC system where the DataTran is connected.

Set option #16 to DataTran if MSR is connected to DataTran. (Select Register if connected to register; use PDC for debit applications) Option #17 is set only if Debit is used.

Set option #18 for PIN encryption method: DUKPT or ROTATE KEY.

4. See General Printing Options on page 120 to set the appropriate options:

Set option #30 to the number of drafts you wish printed.

Set option #31 to Y if you wish a tip line printed on the draft.

Set option #32, if Y, all drafts will have the credit card # truncated (\*\*\*\*\*1234). If N, the merchant copy will show all numbers (1234567812345678 03/05)

5. See Misc Tend 1-16 Options on page 87 to identify payment key functions:

Set CONNECT EFT TERMINAL to Y.

Set KEY IS to CREDIT, DEBIT, or GIFT, depending upon function.

6. See PLU Status Group (PLU Status Link) Programming on page 67.

If you are using gift cards, you must create a PLU for gift card issuing and that PLU must be linked to a PLU Status Group with PLU status option #45 set to “ACTIVATE”.

If you are using gift cards and wish to add value to an existing card, you must create a PLU for gift card value adding and link it to a PLU status group with PLU status option #45 set to “ADD”.

## Clear Current Batch (S-Mode)

The clear batch command erases all the current batch transactions from the DataTran memory even if they have not been settled. *A LOCAL TRANSACTION INQUIRY should be printed prior to clearing the batch.* This will ensure that the operator has the transaction detail to re-enter if required.

This operation should only be done under the direction of DATACAP.

To clear a batch:

1. Turn the key lock to the S-Mode position.
2. From the S-Mode menu select #2 MEMORY CLEAR,
3. From the MEMORY CLEAR menu, select #20 CLEAR CURRENT BATCH.



# Glossary of Terms

## Activity Count

The activity counter keeps track of the number of times an entry is made on a PLU, or function key.

## Add Check

The Add Check function is used to add multiple guest checks (tracking balances or soft checks) for payment together. (Use Tray Subtotal to add separate transactions when you are not tracking balances.)

## Alpha Keyboard Overlay

The alpha keyboard overlay represents a new set of functions and characters for each key on the keyboard. When you are programming a field that requires alphanumeric entries, the keyboard automatically shifts into the alpha keyboard so that you can simply type the message or descriptor you wish to program. An overlay legend sheet is provided to place on the keyboard while you are programming.

## Audaction

Refers to the total of all sales ending in a negative balance.

## Authority Levels

Each employee must be assigned to one of nine authority levels. Each of the levels is set up to determine the operations that are allowed for each employee.

For example, in a restaurant an authority level with the descriptor kitchen help could be set to allow only clocking in/out, or an authority level with the descriptor owner could be set up to allow all functions. Other authority levels could be defined for servers, cashiers and managers that allow only the appropriate functions.

## **Auto Grill**

Use the Auto Grill option to send items individual items to the designated kitchen printer. Items are sent with a one-item delay (at the next item or at subtotal.)

## **Auto Scale**

Registrations of PLUs with auto scale status will automatically multiply by the weight placed upon a scale connected to the register. Use for items such as produce that are always sold by weight.

## **Auto Tare**

With auto tare status assigned, a preprogrammed tare weight will automatically subtract from the weight from the scale.

## **Bitmap File**

The bitmap file is an image, i.e. a logo that can be printed on a receipt or guest check. The bitmap file is downloaded to the SER-7000 from a PC, and then downloaded to the memory of the appropriate printer.

## **Canadian Donut Law**

Refers to special Provincial or State sales tax laws that change the taxable status of an item depending upon the quantity sold. Donuts, for example, might be taxable when sold individually at a bakery. However, if a customer purchases a dozen, the food sale is considered non-taxable.

## **Cancel**

Press the CANCEL function to abort a transaction in progress. All current items are removed (voided).

## **Check Cash**

Use the CHECK CASH function to exchange a check for cash outside of a sale.

## **Check Endorse**

If compulsory check endorsement is set with the CHECK key, use the CHECK ENDORSE function to print the endorsement message after a check is inserted into the appropriate printer.

## **Compulsory**

When an operation is programmed compulsory, a function (i.e. Non-add number entry) must be performed in order to complete the operation.

## Condiment

Condiments PLUs are different from non-condiment PLUs in the manner they display and print during operations. Non-condiment PLUs are used for "main" items. Condiment items are indented and displayed/printed below a main item so that condiments or cooking instructions are easily understood for each "main" item.

## Continue

Use the Continue function to override the pop-up employee function after a transaction. Allows the employee to post an additional transaction without signing on again.

## Currency Conversion

Use one of the 5 available currency conversion functions to convert and display the value of the transaction in foreign currency. Only cash tender is allowed after pressing a CURR CONV key. Change is calculated and issued in home currency.

## Custom Report

One custom report can be created, with up to 50 totals and counters. The report is built by selecting totals that also appear on either the financial or sales by time period reports. When the custom report is created, totals and counters separate from the original report are also created (in other words, you can clear either the custom independently without affecting totals in any other report.)

Another feature of the custom report is the ability to add or subtract selected totals to create a new subtotal of selected information.

## Default Program

The original program installed in the *ER-550*. The register has a default program, which makes it operational after a RAM clear. Nearly all option, rate, and status programs are set to zero as the default condition.

## Destination

Refers to the destination for the sale i.e. eat-in, take out, drive thru.

## Discount (Item)

An item discount (coupon or %) subtracts an amount or percentage from the price of an item. This subtraction nets the Department or PLU total.

## Discount (Sale)

A sale discount (coupon or %) subtracts an amount or percentage from the entire sale.

## Electronic Journal

The electronic journal is an area of memory designated to keep a sales journal. The electronic journal can be printed, if necessary, to provide a traditional record of all register activity.

## Error Condition

An error condition signals that an incorrect operation has occurred. It is identified by an audible tone and an error descriptor appearing on the display.

## Error Correct

An error correct operation voids the last item entered, it must be used within a sale.

## Food Stamps

In the United States, Food Stamps may be used to purchase eligible food items at food stores that participate in the program. The SER-7000 can assist a retailer in handling food stamp transactions by sorting food stamp and non-food stamp eligible items within each sale and tracking food stamp payments for eligible items.

## Gallonage

Gallonage is a status that can be assigned to a PLU. Gallonage PLUs accept a price, but print both the price and the quantity of gallons sold. The quantity of gallons is computed from the price per gallon, which is set as the preset price.

## Groups

Groups are totals that collect information from designated PLUs. For example all PLU dessert items could collect in a group total called "desserts". You can send each PLU to up to three groups. The first group is designated in PLU programming, the second and third groups are designated in PLU Status Group programming.

## HALO

The high amount lock-out (HALO) limits the amount allowed to be entered in a PLU, or function key.

## Ingredient Inventory

A menu-explosion type inventory system is set up when PLUs are linked to a recipe number. The X-MODE MANAGER MENU provides functions to receive, transfer in/out, or enter raw waste for ingredients used in the recipe system.

## Initial Clear

The initial clear function allows you to exit any register activity and return to a beginning or cleared state. Any transaction that is in progress will be exited and totals for that transaction will not be updated.

## IRC

Inter Register Communications (IRC) is the term used to describe communications within a network of registers. Information exchanged between registers includes check information for posting to guest check, information to be printed or displayed at printers or videos, and sales information for consolidated reporting.

The SER-7000 uses ETHERNET at 10Mbps for IRC.

## Job Codes

Job codes are used to break down the hours worked for all employees into different categories (See "Labor Groups" report in the Operation Manual.) A breakdown of hours by job is also reported for each employee (See "Time Keeping" reports in the Operation Manual.)

## Keyboard Level

Each keyboard level is a separately defined set of keyboard functions for each key on the keyboard. For example, separate levels might be required for different lunch/dinner menus. Or, within a restaurant different keyboards might be set up for pre-check, bar and/or cashier stations. Each register might contain the functions for each station on a separate level, so that any register could function at any station by simply changing keyboard levels and key legend sheets.

The SER-7000 has five keyboard levels.

## Link PLU

If you wish the registration a PLU to automatically cause the registration of another PLU, enter the number of the PLU you wish to register automatically in the LINK PLU field of the appropriate PLU Status Group.

## Macro

Macros record key sequences for later execution. Up to 40 macros may be recorded and executed by pressing a function key or by entering the appropriate macro number and pressing a function key.

## Memo PLUs

Use Memo PLUs to display a descriptor on the screen or print a descriptor at a printer. Memo PLUs do not add to any total in the SER-7000.

## Memory Allocation

Memory allocation is a program that determines how the system memory is divided to provide the correct features for your application. For example, you may require more or less employee memory, PLUs, or reporting. Memory allocation allows you to maximize the features you need while minimizing the features you do not need.

## Modifier

Preceding a PLU entry, a modifier key changes a digit of the PLU number, causing a different PLU to be registered. Modifier keys can be set to change any of the 14 PLU digit positions to any specified digit (0-9). More than one modifier key can be pressed in succession to alter the PLU code.

## No Sale

No sale is an operation to simply open the cash drawer.

## NON-PLU Code

The NON-PLU Code program must be set if you wish to scan UPCs (using the EAN 13 code) with embedded prices, weights or quantities.

Within the EAN 13 code, the first two digits (part a) are used as an identifier and the last digit (part c) is used as a check digit. The remaining 10 digits (part b) contain the product code and the price (or weight or quantity).

## Override

Override is an operation used to bypass a programmed price or HALO.

## Password

A four-digit password can be set to control access to reports. Different passwords can be set for X and Z1, Z2 etc. reports.

A system password can be set to allow service access to all of the functions of the *SER-7000*. For example, use the system password if you are servicing a users system and you do not know an employee code that allows you to access necessary functions, or if authority level programming prohibits you from accessing functions you need to access in order to complete your tasks.

## Piece Count

The piece count is the value assigned to a PLU item that represents the number of unit pieces sold when the PLU is registered. For example, the number of pieces of chicken can be counted when a chicken dinner is sold. The number of units set as the piece count will be reflected in product mix reporting.

## PLU Status Link #

Also referred to as PLU Status Group. The status link # contains the many of the configurable options for a PLU.

## PLUs

Price look-ups (PLUs) are used to register items. PLUs can be fixed keys on the keyboard or they can be accessed by indexing a code number and pressing the PLU key. PLUs can be programmed with a preset or open price. PLUs record their own activity count and dollar total on any of the PLU reports.

## Post Tendering

The Post Tendering feature allows the operator to use the register to compute change on cash transactions after the sale has been finalized.

To calculate change due after finalizing the sale, enter the cash amount presented by the customer and then press **CASH**. The amount of change due the customer is then displayed, and the cash drawer may open.

This is a calculation function only, and no totals or counters are updated by the use of this feature.

## Price Level

Prices may be assigned at up to five different price levels for each item. One of up to 20 price level keys is identified for each different PLU price.

## Product Mix Groups/Product Mix Reporting

Product Mix Groups can be used to implement a simplified ingredient system for tracking only essential ingredients associated with items (i.e. cups for beverages or number of pieces for chicken menus.)

Product mix groups also report usage by time period and optional Product Projections reporting is also available. The Product Projection report provides a history of each item's sales by day of week.

## Promo

The PROMO operation allows items to be sold without cost, i.e. buy two, and get one free. PROMO activity will remove the item cost from the sale, but the sales count will include the promo item.

## Receipt

A receipt is a printed tape given to a customer as a record of the sale transaction.

## **Recipe #**

A menu-explosion type inventory system is set up when PLUs are assigned to a recipe number.

## **Register Number**

The register number is a programmable number, which prints on the receipt and journal tapes. It identifies the electronic cash register the sale or report was performed on.

## **Stay-Down**

When a function is programmed as a stay-down function, it is valid until changed. For example, a stay-down clerk remains signed on until either signed off, or another clerk is signed on.

## **Stock PLU**

Stock PLUs track the quantity of the PLU item in stock. Each time the PLU is registered, a whole unit subtracts from the stock counter. (Note that if multiplication or decimal multiplication is used when the PLU is registered, the resulting quantity of activity will subtract from the stock counter. Stock is maintained increments to the second decimal position, i.e. "X.XX".)

## **Super Macro**

The super macro records transaction keystrokes, including key position changes. The size of the super macro, in keystrokes, is set in memory allocation (see "Memory Allocation" on page 37.) When the super macro memory is full, the most recent entries will be added and the oldest discarded. Use the super macro as a troubleshooting tool.

## **Surcharge (Item)**

An item percent surcharge adds a percentage to the price of an item. This addition nets the PLU total.

## **Surcharge (Sale)**

A sale percent surcharge adds a percentage to the entire sale.

## **Tare Weight**

A tare is the amount of weight accounted for by the container or packaging. By entering a tare weight (as required by law in some areas) the weight of the container is subtracted and only the true weight of the product is measured on the scale.

## **Tax Except**

Tax except is used to exclude the tax from an entire sale.



## **Tax Shift**

Tax shift keys are used to reverse the tax status of a PLU entry.

## **Tender**

The method of register operation in which payment is made and the transaction is finalized.

## **Transaction Number**

A count appears at the bottom of each receipt and after each transaction on the journal tape. This count increases by one with each transaction, report, or scan.

## **Void**

A void operation will erase a previous item entry. It must be used inside of a sale only.

## **Waste**

The Waste function is used to start and end entries of items that are wasted. A waste count is maintained for each item and inventory is adjusted.

## **WLU**

WLU stands for Window Look Up. A WLU pops up and displays a list of items on the operator screen. Three types of items that can be found on a Window Look-Up (WLU): condiments, functions, and PLUs.

Typically, a WLU is used to display a list of instructions or choices associated with an item. A WLU can be linked to a subsequent WLU in order to prompt an operator through a sequence of selections. The default capacity of each WLU is 28 items; the maximum capacity is 50 items.



# Index

## #

#/No Sale 89  
#/NO SALE 7

## %

%1 - %10 8, 91

## A

ADD CHECK 4  
Add On Taxes 134  
Alpha Characters  
  entering 16  
Alpha Code Chart 18  
Alpha code entry 102  
Alpha Overlay 16  
Authority Level  
  Alpha Descriptors 162  
  link to 156  
Authority Levels  
  programming 159  
auto clear error condition 102  
auto grill 69  
auto scale 68  
auto tare# 68  
AUTO-grill group # 69

## B

batch  
  KP/KV 115, 116  
baud rate 53  
Buffered receipt 120, 122

## C

Canadian Donut Law 69  
  tax exempt Qty 107

Cancel 79  
CANCEL 5  
Cash 79  
CASH 5  
Cash declaration compulsory 126, 127  
Cash Drawer Options 109  
Cashier *See* Employee:programming  
Changing Printer Commands 51  
Charge key *See* Misc Tend 1-16  
Charge tip is deducted from cash 97  
Check 80  
CHECK 5  
check #  
  starting 113  
Check Cash 81  
CHECK CASH 5  
Check Endorse 81  
CHECK ENDORSE 5  
Check Endorsement Message 143  
Check Unlock 58  
CLEAR/ESC 5  
Clerk *See* Employee:programming  
color to display on KV 68  
Communications Ports 210  
compulsory condiment 67  
Compulsory drawer 109  
compulsory non-add#  
  by PLU 68  
compulsory validation  
  PLU 68  
condiment choices  
  WLU 148  
condiment multiplication  
  WLU 148  
consolidate like items 101  
CONTINUE 5  
Control Lock 11  
Copy Program 191  
CURR. CONV. 1-5 5  
Currency Conversion 1-5 82  
currency symbol 122

CURSOR CONTROL KEYS (↑↓←→) 5

Custom Report 183

cutting after printing 53

## D

data bits 53

date setting 24

DECIMAL 5

decimal position 48

Default Keyboard 2

Default keyboard level 111

Default Messages

Load 58

Default price level 111

Delete PLUs 65

Descriptors

report 142

system 141

destination

default 101

enforce 101, 103

Detail Printer Routing 169

direct multiplication 101, 104

discount

allow by PLU 68

Display Adjustments 1

DONE 5

Download

program file 193

ROM file 58

drawer compulsion 109

drive through feature enabled 93, 96

Drive Thru 83

DRIVE THRU 5

## E

E.J. & Detail Printing Options 131

Eat In 83

EAT-IN 5

electronic journal

activate 131

Electronic Journal 131, 132

embedded price PLUs 199

Employee

Edit Job Codes 157

Edit Pay Rates 158

job code 156

Pay rate 156

programming 155

EMPLOYEE 5

EMPLOYEE (1-10) 5

Enforce destination 101, 103

ENTER 6

enter time for transaction void 102

entry limit

global 101

ERR.CORR 6

Error Correct 83

Error Messages 140

Ethernet Specifications 213

## F

FD STMP SHIFT 6

FD STMP SUBTTL 6

FD STMP TEND 6

feed lines after printing 53

feed lines before printing 53

food stamp eligible 68

Food Stamp Tend 84

Function Key

programming 75

Function Key Relocation 44

## G

gallage 67

General Function Options 101

General Printing Options 120

Global entry limit 101

Group

programming 74

Guest # 84

GUEST # 6

Guest Check Message 144

## H

HASH options 101

HOLD 6

## I

INACTIVE 6

Ingredient

edit 171

Ingredient Inventory 170

Initial Clear 19

Inventory

Ingredient 170

IRC 212

# of retries 48

Ethernet Specifications 213

from register # 48

test 27

to register # 48

## J

Job Code 156  
Job Codes  
  edit 157

## K

Key Relocation  
  function key 44  
  PLU 41  
  WLU 42  
Keyboard  
  ER-5240 3  
Keyboard Key Relocation 40  
keyboard level 111  
  default 111  
KEYBOARD LEVEL 1-5 6  
Keyboard Levels  
  time activated 174  
keys, register 11  
Kitchen Printer Routing 167  
Kitchen Printing/Video Options 115  
Kitchen Video Routing 166  
KP Routing (function key) 85  
KP ROUTING (function key) 6  
KP Time Period 179  
KV Routing 163

## L

Level/Modifier Options 111  
link plu 68  
LIST CHECK 1-4 6  
Load Default Messages 58  
Logo Message 139  
logo size 53  
Loop Back Connections 211

## M

Macro  
  super macro 57  
  time activated 176  
MACRO # 6  
MACRO 1 - 40 6  
Macro 1-40 86  
MACRO PAUSE 6  
MACRO SET (function key) 6  
Manager control 101, 103  
Mdse Return 86  
MDSE RETURN 6  
Memory All Clear 31  
Memory Allocation 34  
Memory Clearing, selective 33  
Message

Check Endorsement 143  
Guest Check 144  
  logo 139  
  validation 145  
Messages 138  
  error 140  
Minimum Stock 190  
MISC TEND # 7  
Misc Tend 1-16 87  
MISC TEND 1-16 7  
MODIFIER 1-10 7  
modifier keys 111  
Modifier/Size 88

## N

negative inventory 68  
NEXT RECORD 7  
non add  
  PLU 67  
non-add# compulsory  
  by PLU 68  
NON-PLU Code 199

## O

Open drawer alarm 109  
overtime 129  
  factor 129

## P

P/Bal 89  
P/BAL 7  
PAGE DOWN 7  
PAGE UP 7  
Page Up and Page Down 13  
Paid Out 1-5 90  
PAID OUT 1-5 7  
PAID RECALL 7  
parity 53  
PARK ORDER 8  
password 48  
  training mode 110  
Password  
  System 56  
Pay rate 156  
Pay Rates  
  edit 158  
Pin Descriptions 210  
PLU  
  allow discount 68  
  allow surcharge 68  
  auto grill 69  
  auto scale 68

- auto tare# 68
- compulsory condiment 67
- compulsory non-add # 68
- compulsory validation 68
- condiment 67
- copy by range 102
- delete 65
- Delete by Range 66
- do not display 68
- Eligible for Canadian Donut Law 69
- embedded price 199
- food stamp eligible 68
- Function key 8
- gallonage 67
- group link #2 67
- group link #3 67
- Key Assignment 201
- link plu 68
- memo 68
- Minimum Stock 190
- modifier keys 111
- negative 67
- negative inventory 68
- non add 67
- print on guest checks 68
- print on journal 68
- print on kp 68
- print on KV 68
- print on receipt 68
- print price on guest checks 68
- print price on receipt/detail 68
- print red on kitchen printers 68
- print red on receipt 68
- product mix 68
- Programming 61
- promo 68
- scaleable 68
- single item 67
- Status Group 67
- Stock 188
- stock PLU 68
- taxable 67
- waste 68
- PLU Key Relocation 41
- Pop-up Selection Windows 15
- post tendering 102
- preamble/postamble
  - guest check 120, 122
- PREV. RECORD 8
- price embedded PLU 199
- Price Inq 92
- PRICE INQ 8
- price level 111
  - default 111
- Price Levels

- time activated 175
- PRICE LVL 1-20 8
- Print (function key) 92
- PRINT (function key) 8
- Print Check (function key) 92
- PRINT CHECK (function key) 8
- PRINT HOLD 8
- print red on kitchen printers 68
- print red on receipt 68
- PRINT SCREEN 8
- Printer Commands
  - changing 51
- Printer Driver Selections 50
- Printer Routing 165
- Printer Tables 163
- Priority printing 115, 116
- product mix
  - PLU 68
- Product Mix Group Time Periods 182
- Product Mix Groups 180
- Product Mix Items 181
- Program File Download 193
- Program Scan
  - P-Mode 197
  - S-Mode 55
- promo
  - allow by PLU 68
- Promo 93
- PROMO 8

## Q

- QUIT (function key) 8

## R

- real time
  - KP/KV 115, 116
- RECALL CHECK # 1-4 9
- Recall Check 1-4 93
- Recd Acct 1-5 90
- RECD ACCT 1-5 9
- RECEIPT 9
- RECEIPT ON/OFF 8
- Receipt Printer Routing 169
- Recipe Table 172
- reg#
  - holds backup check track data 48
  - holds check tracking data 48
  - holds KP Global order# 48
- register # 48
- REPEAT 9
- Report Descriptors 142
- Report Options 126
- Report Printing Options 124

Reports  
  edit existing 186  
  string 187  
Requisition Printers 214  
retrys 53  
ROM File Download 58  
rounding  
  tax 107  
Rounding 101  
Routing  
  Detail Printer 169  
  Kitchen Printer 167  
  Kitchen Video 166  
  receipt printer 169  
RTC Setting 24

## S

SCALE 9  
Scale (function key) 95  
scaleable 68  
Screen Saver 106  
scroll indicators 13  
seat #  
  set default to 1 102  
SEAT # 9  
seat#  
  enforce 93  
Self Tests 23  
Serial Port Device Selections 52  
Serial Port Parameters  
  defining 53  
SERVE ORDER 9  
Server *See* Employee:programming  
Shifts  
  time activated 178  
single item 67  
Size/Modifier 88  
S-Mode  
  Program Scan 55  
SPLIT PAY 9  
starting check # 113  
Stock Inq 92  
STOCK INQ 9  
stock plu 68  
stop bits 53  
Store # 48  
Store Check 1-4 96  
STORE CHECK 1-4 9  
String Reports 187  
  time activated 177  
SUBTOTAL 9  
Super Macro 57  
surcharge  
  allow by PLU 68

System Descriptors 141  
System Options  
  Cash Drawer Options 109  
  E.J. & Detail Printing Options 131  
  General Function Options 101  
  General Printing Options 120  
  Kitchen Printing/Video Options 115  
  Level/Modifier Options 111  
  P-Mode 100  
  Report Options 126  
  Report Printing Options 124  
  S Mode 48  
  Tax Options 107  
  Time Keeping Options 129  
  Tracking File Options 113  
  Training Mode Options 110  
  Validation/Subtotal Print Options 118  
System Password 56  
System Printer Routing 165

## T

TABLE # (1-4) 9  
Table entry required 93  
Take Out 83  
TAKE-OUT 10  
tare weight programming 95  
Tax Exempt 97  
TAX EXEMPT 10  
Tax Options 107  
Tax rounding 107  
TAX SHIFT 1-6 10  
Tax Table 135  
Taxes  
  add on 134  
  programming 133  
  VAT 137  
Test  
  Display 25  
  Drawer 24  
  IRC 27  
  Keyboard 25  
  Mode & Clerk Key 26  
  Printer 28  
  RAM 26  
  RAM Checksum 28  
  Serial & IRC Loopback 23  
  Version Check 29, 30  
Time Activated Functions  
  programming 173  
Time In/Out 97  
TIME IN/OUT 10  
Time Keeping Options 129  
Time Period  
  programming 154

time setting 24  
TIP (1-3) 10  
Tip 1-3 97  
Tip Declare 98  
TIP DECLARE 10  
Tracking File Options 113  
Training Mode Options 110  
transfer check  
    automatic 113  
    transfer totals 113  
TRANSFER CHECK (1-4) 10  
TRAY SUBTL 10  
Tray Subtotal 98

## **Z**

Zero skip 124

## **V**

VALID 10  
validation message 118  
Validation Message 145  
Validation/Subtotal Print Options 118  
VAT 137  
VAT subtracted fm indiv PLU ttls 107  
Version Check 29, 30  
Void Item 99  
VOID ITEM 10

## **W**

waste  
    allow by PLU 68  
WASTE 10  
Waste (function key) 99  
Window Look Up (WLU) 146  
WLU  
    Add an Item In a Specific Position 151  
    Adding Functions 152  
    Adding PLUs or Condiments 150  
    condiment choices 148  
    condiment multiplication 148  
    Deleting Items 151  
    editing items 149  
    Function key 10  
    Key Assignment 201  
    programming 146  
WLU Key Relocation 42

## **X**

X/Time 99  
X/TIME 10

## **Y**

Y/N (function key) 10